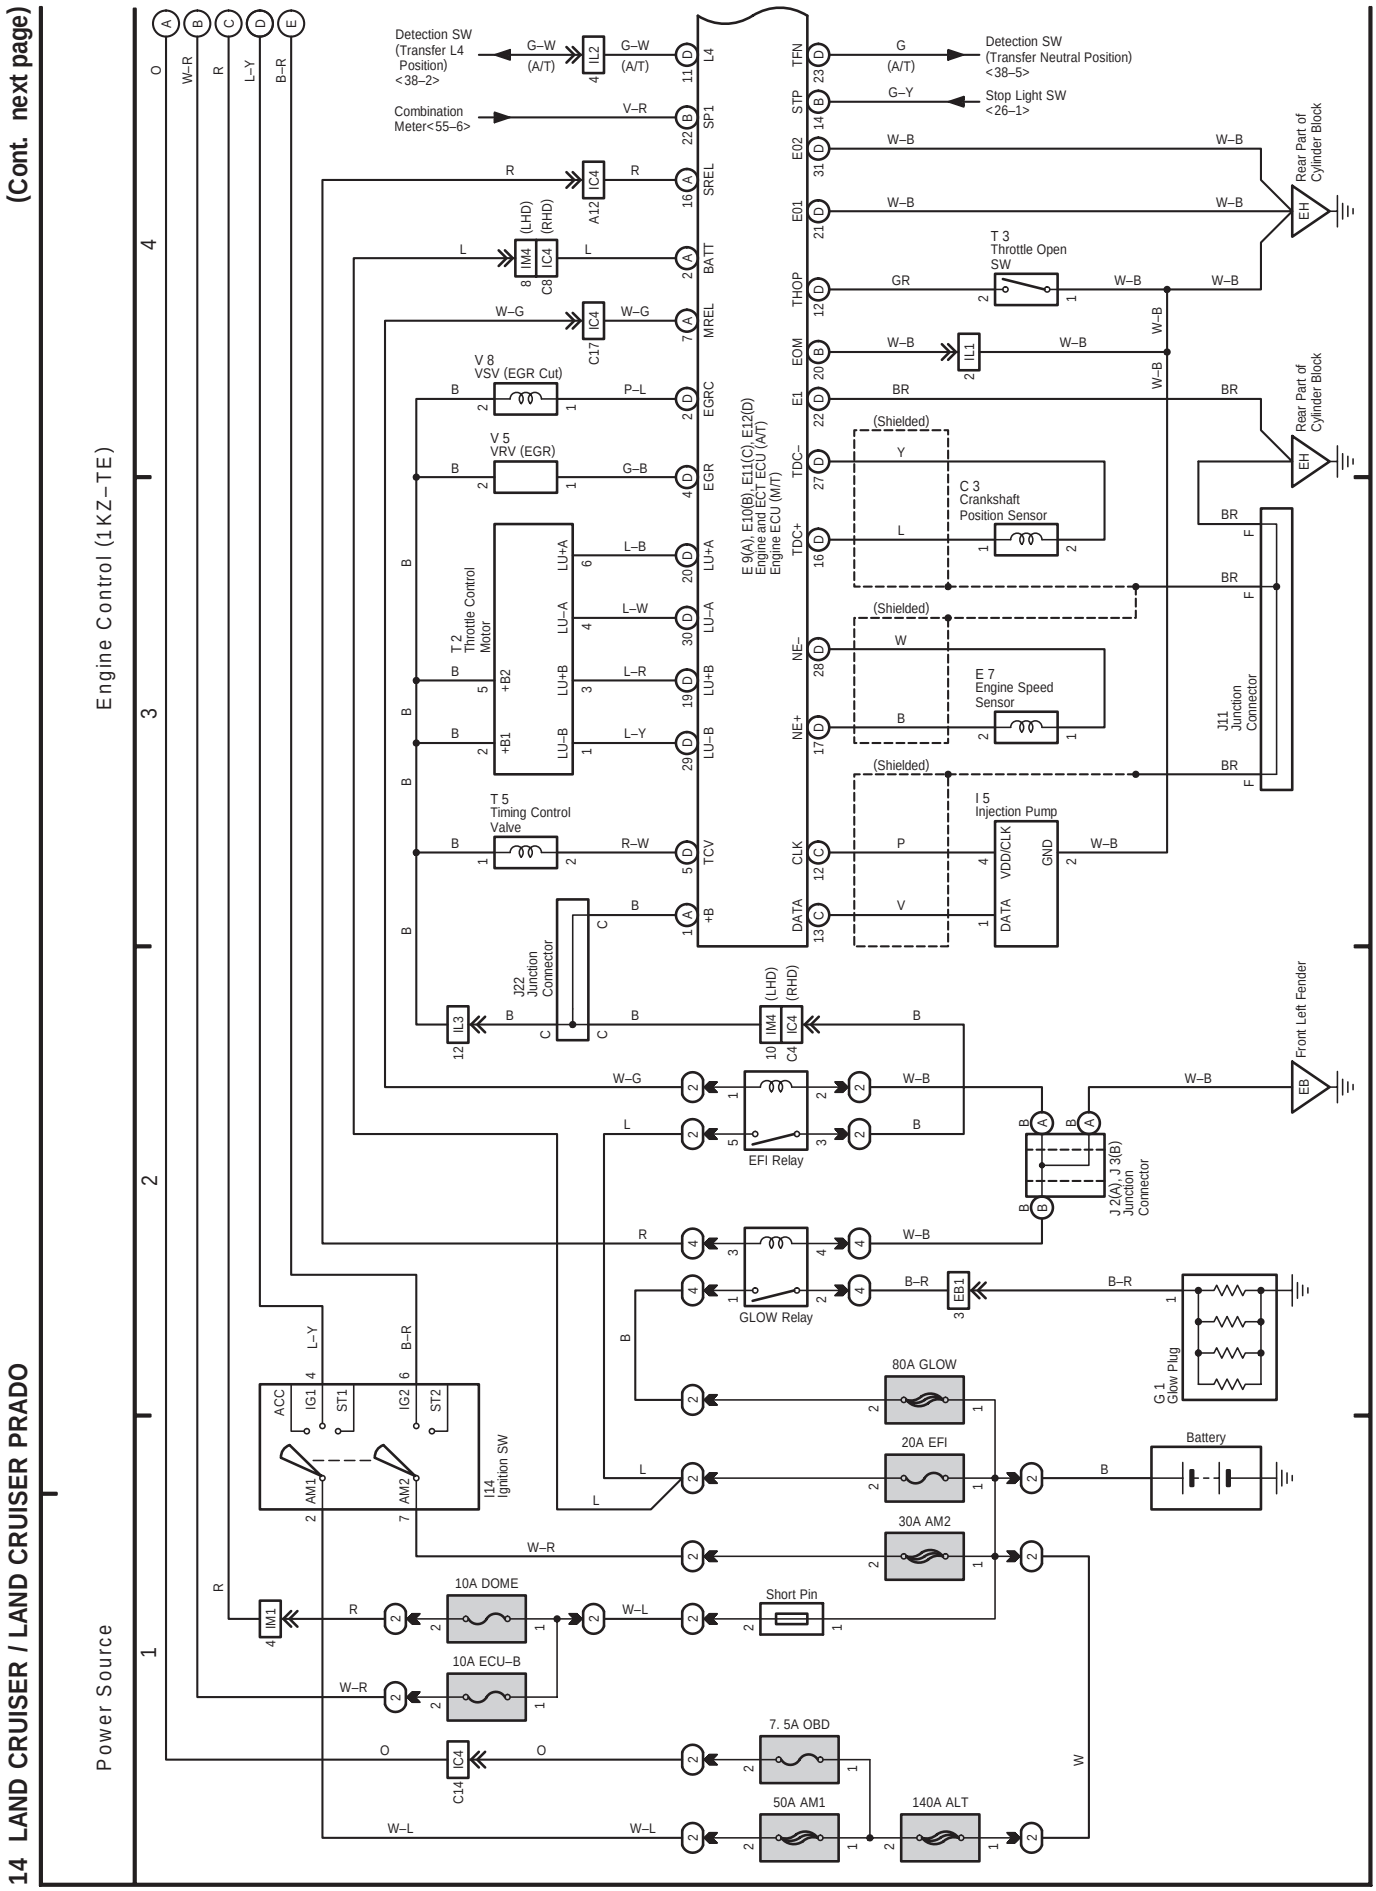
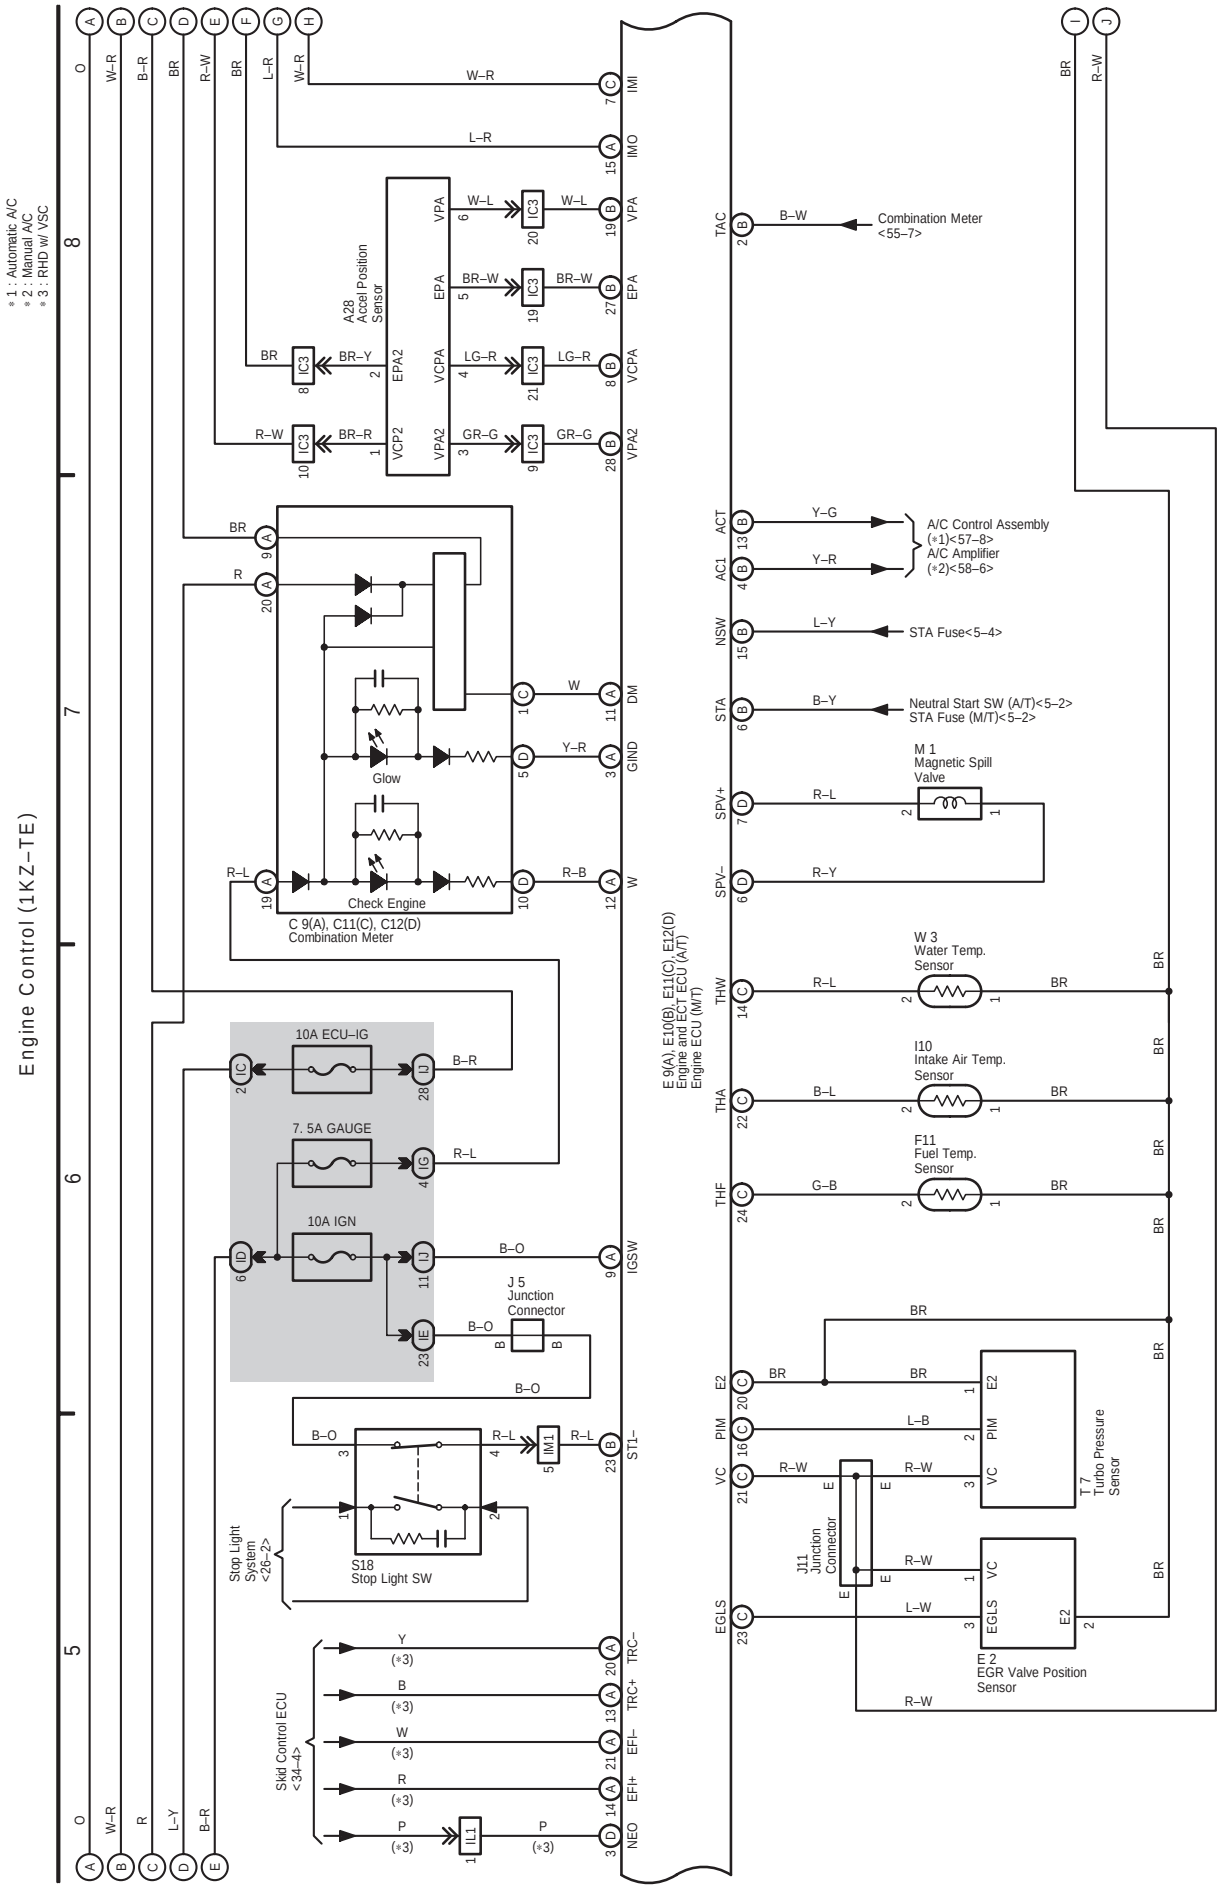
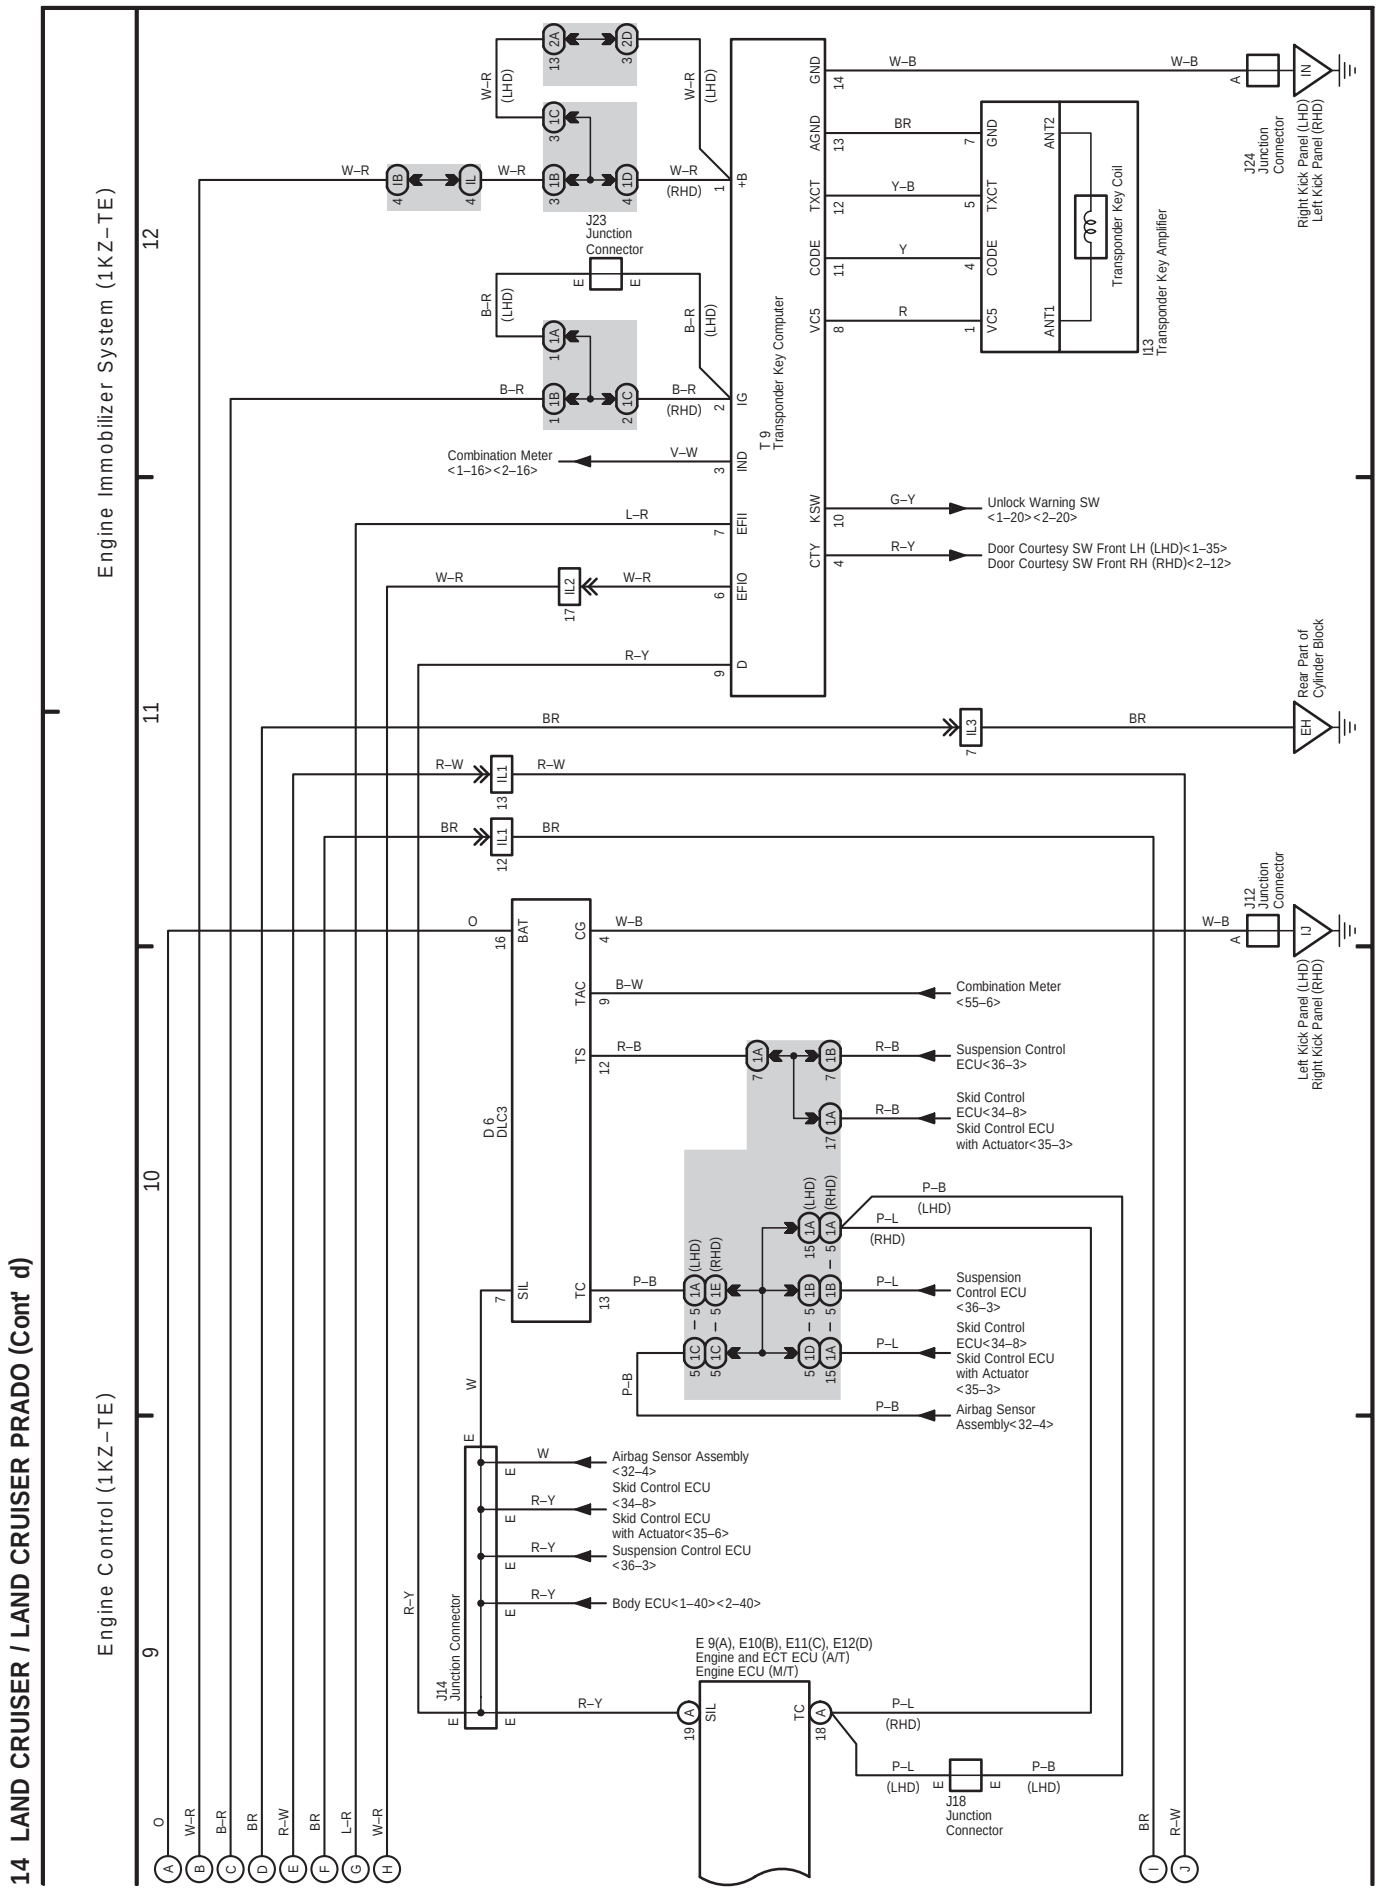

(Cont. next page)
14 LAND CRUISER / LAND CRUISER PRADO
Power Source
Engine Control (1KZ–TE)
Detection SW (Transfer L4 Position) <38–2>
Combination Meter<55–6>
Detection SW (Transfer Neutral Position) <38–5>
Stop Light SW <26–1>
Rear Part of Cylinder Block
T 3 Throttle Open SW
V 8 VSV (EGR Cut)
V 5 VRV (EGR)
T 2 Throttle Control Motor
T 5 Timing Control Valve
E 9(A), E10(B), E11(C), E12(D) Engine and ECT ECU (A/T) Engine ECU (M/T)
C 3 Crankshaft Position Sensor
E 7 Engine Speed Sensor
I 5 Injection Pump
J11 Junction Connector
J22 Junction Connector
J 2(A), J 3(B) Junction Connector
Front Left Fender
EFI Relay
GLOW Relay
G 1 Glow Plug
I14 Ignition SW
80A GLOW
20A EFI
30A AM2
10A DOME
10A ECU–B
Short Pin
7. 5A OBD
50A AM1
140A ALT
Battery

14 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




14 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Engine Control (1KZ–TE)
Engine Immobilizer System (1KZ–TE)
Transponder Key Computer
Transponder Key Coil
Transponder Key Amplifier
Combination Meter
Unlock Warning SW
Door Courtesy SW Front LH (LHD)
Door Courtesy SW Front RH (RHD)
Suspension Control ECU
Skid Control ECU
Skid Control ECU with Actuator
Airbag Sensor Assembly
Body ECU
Junction Connector
Rear Part of Cylinder Block
Left Kick Panel (LHD)
Right Kick Panel (RHD)