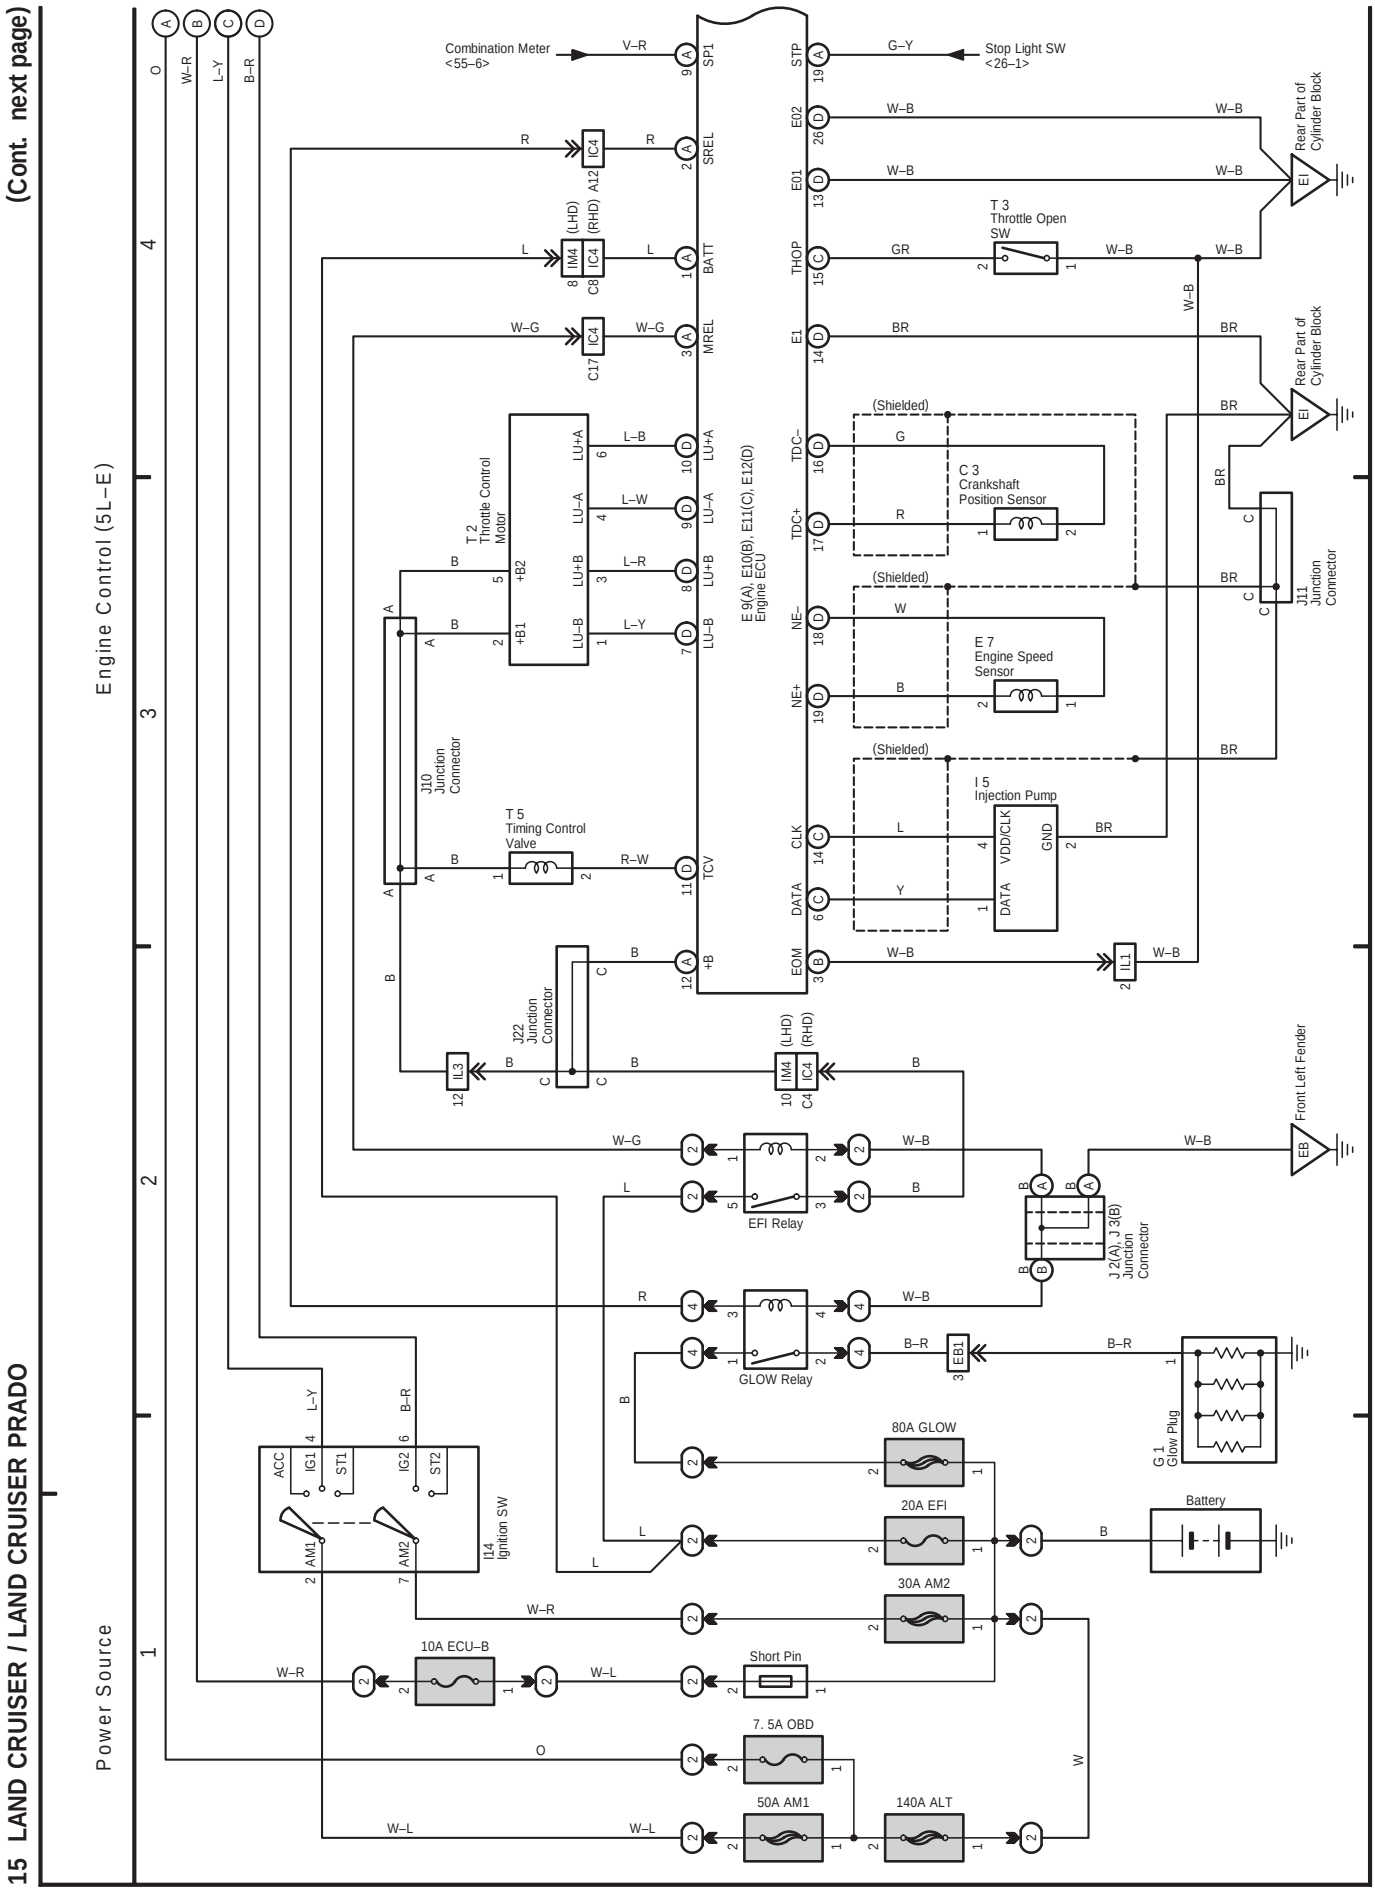
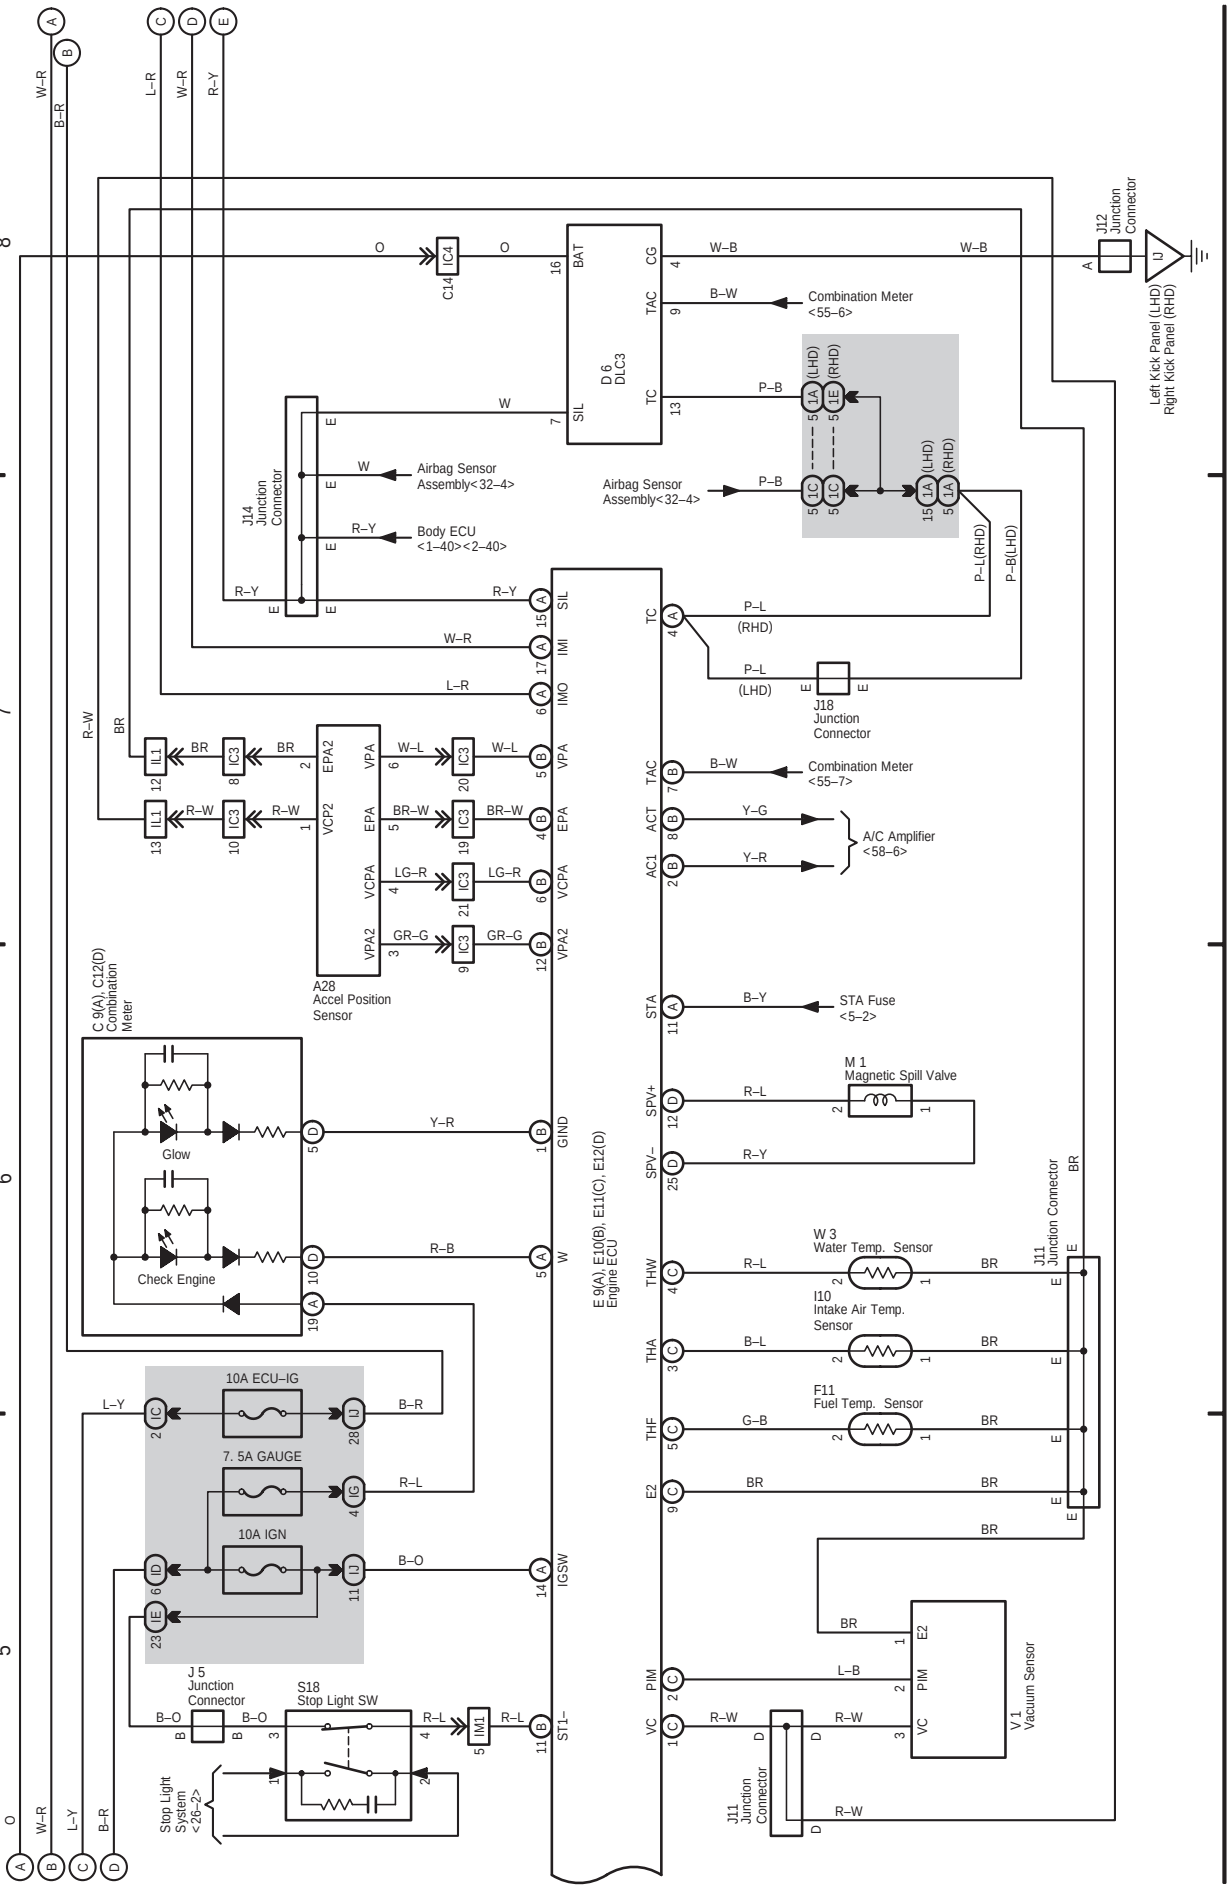

15 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
Engine Control (5L–E)
Combination Meter <55–6>
Stop Light SW <26–1>
Rear Part of Cylinder Block
T 3 Throttle Open SW
T 2 Throttle Control Motor
C 3 Crankshaft Position Sensor
E 7 Engine Speed Sensor
E 9(A), E10(B), E11(C), E12(D) Engine ECU
J10 Junction Connector
J11 Junction Connector
J22 Junction Connector
J 2(A), J 3(B) Junction Connector
T 5 Timing Control Valve
I 5 Injection Pump
EFI Relay
GLOW Relay
G 1 Glow Plug
Front Left Fender
Battery
I14 Ignition SW
80A GLOW
20A EFI
30A AM2
10A ECU–B
Short Pin
7. 5A OBD
50A AM1
140A ALT

(Cont. next page)



15 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

