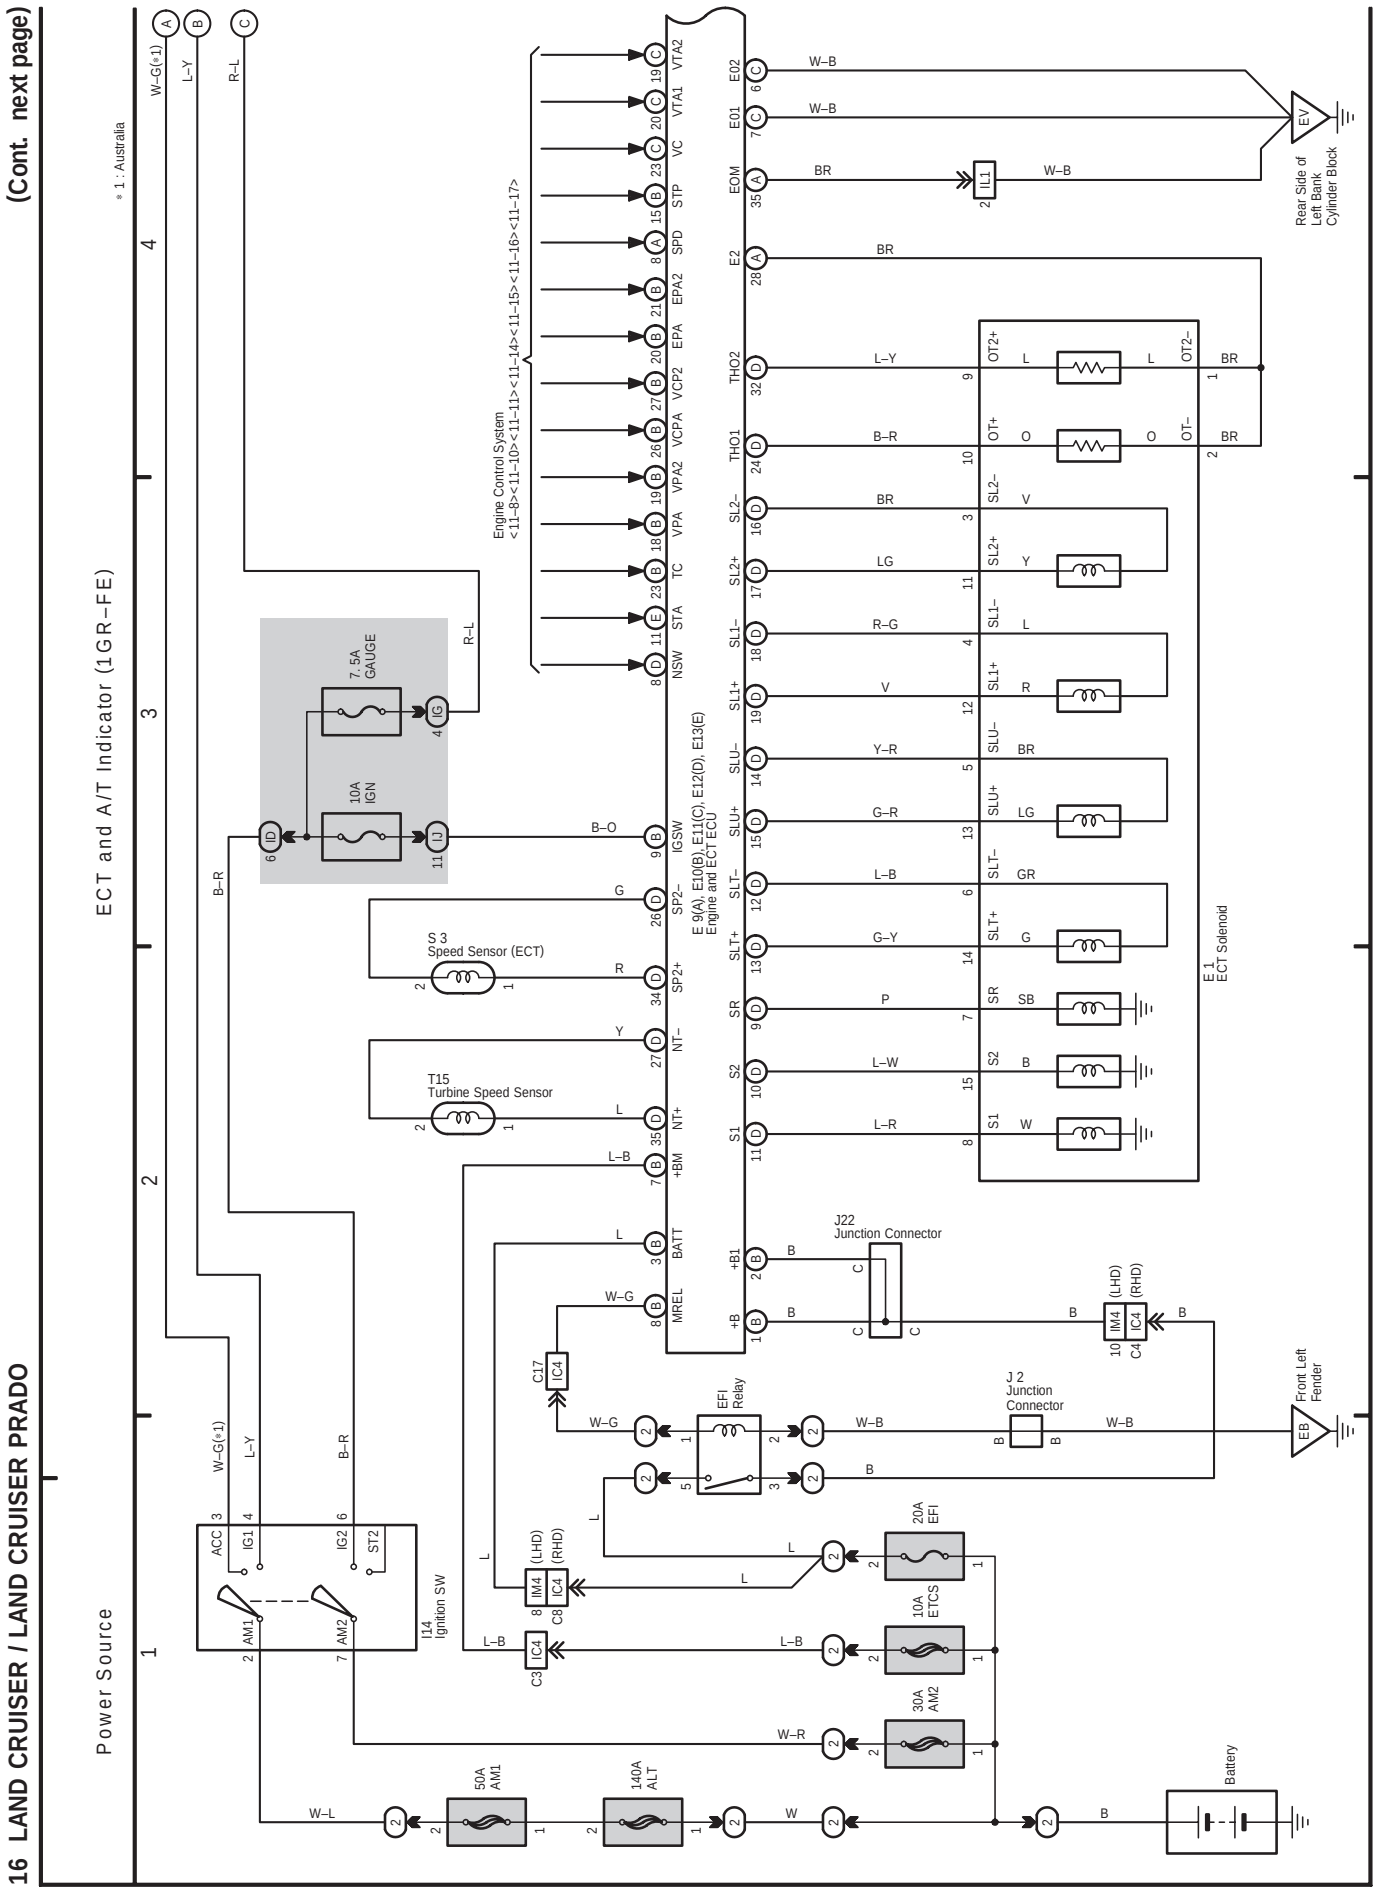
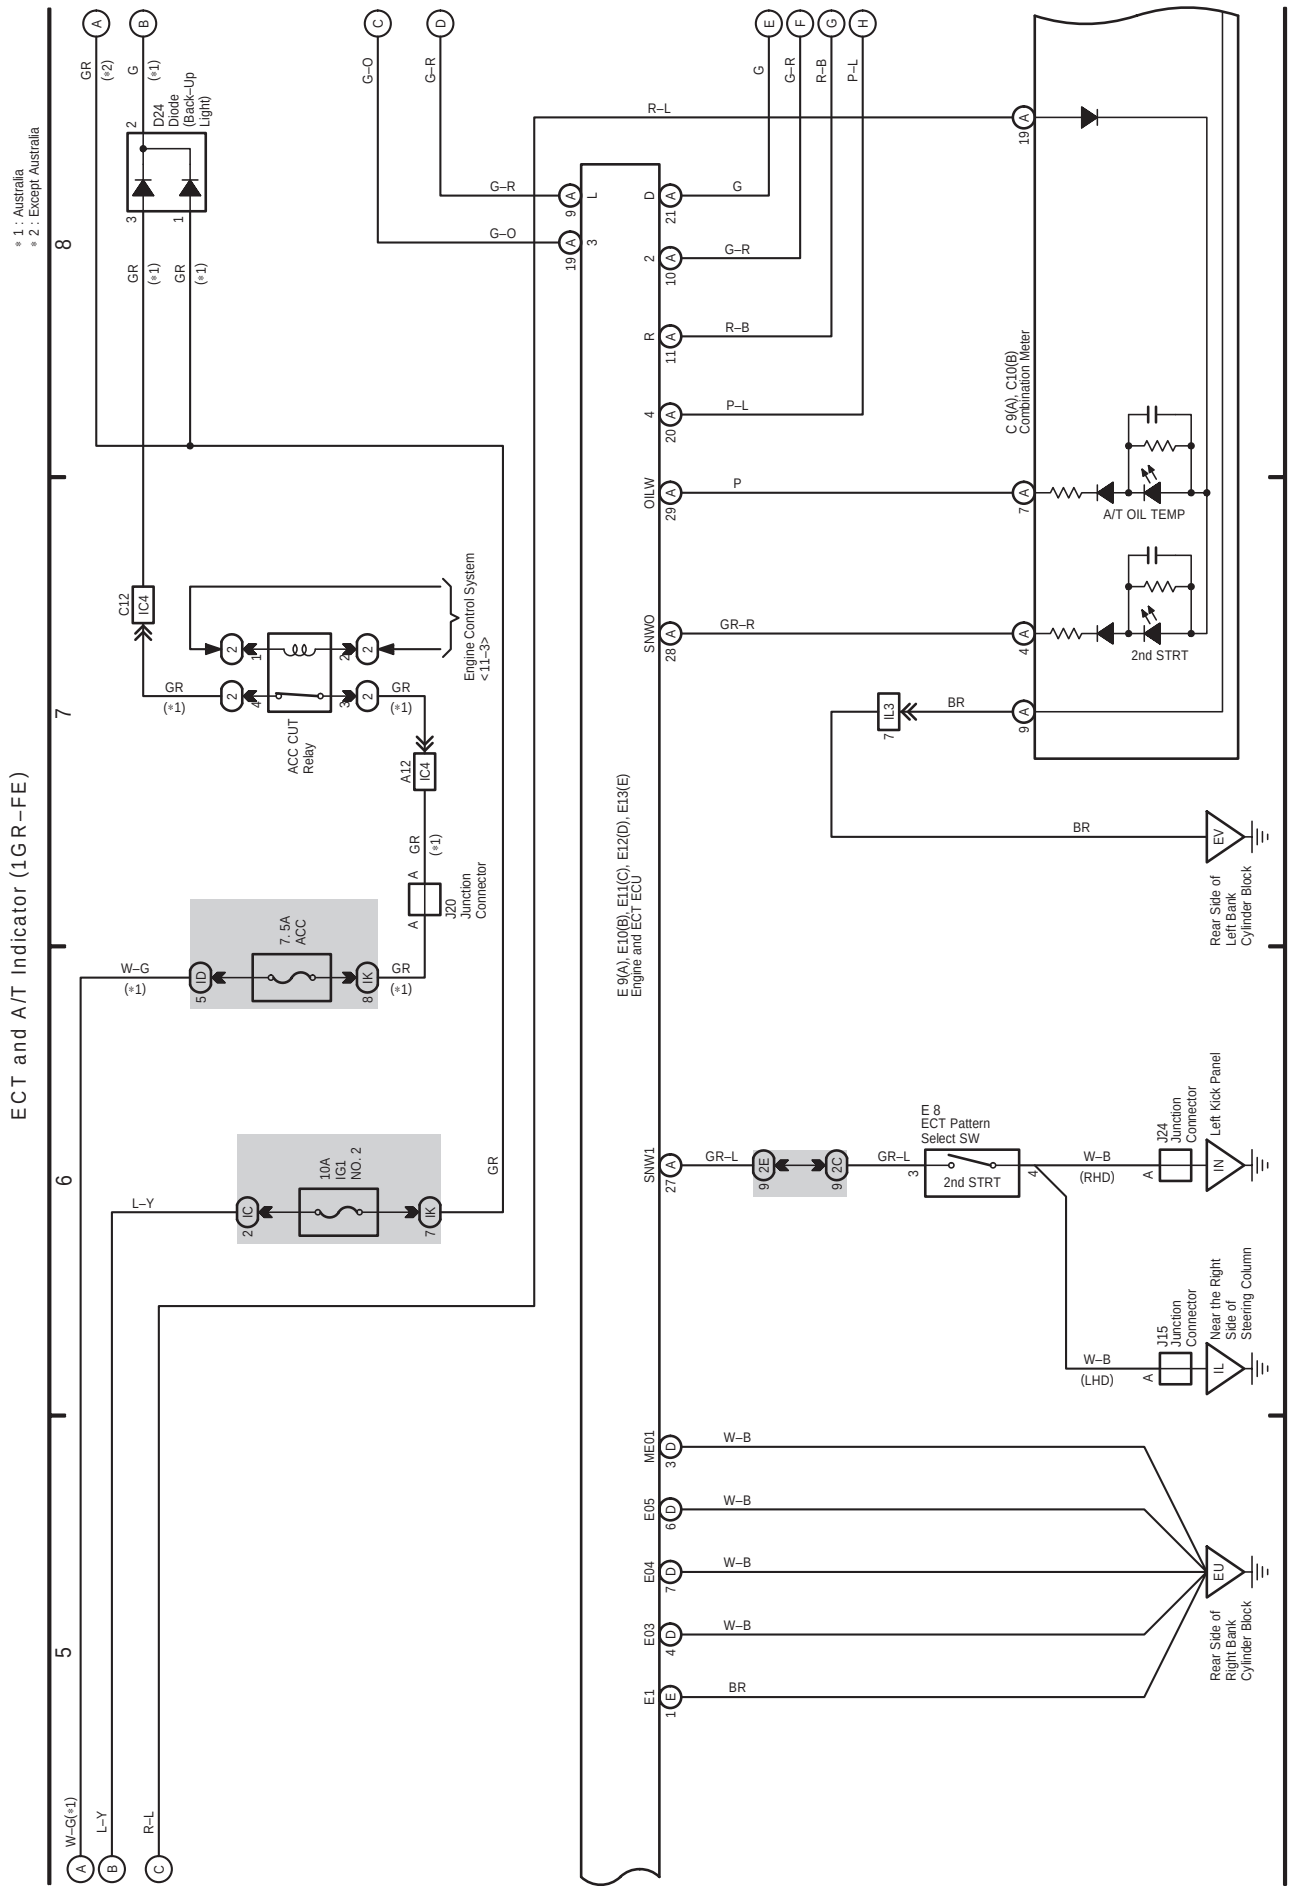
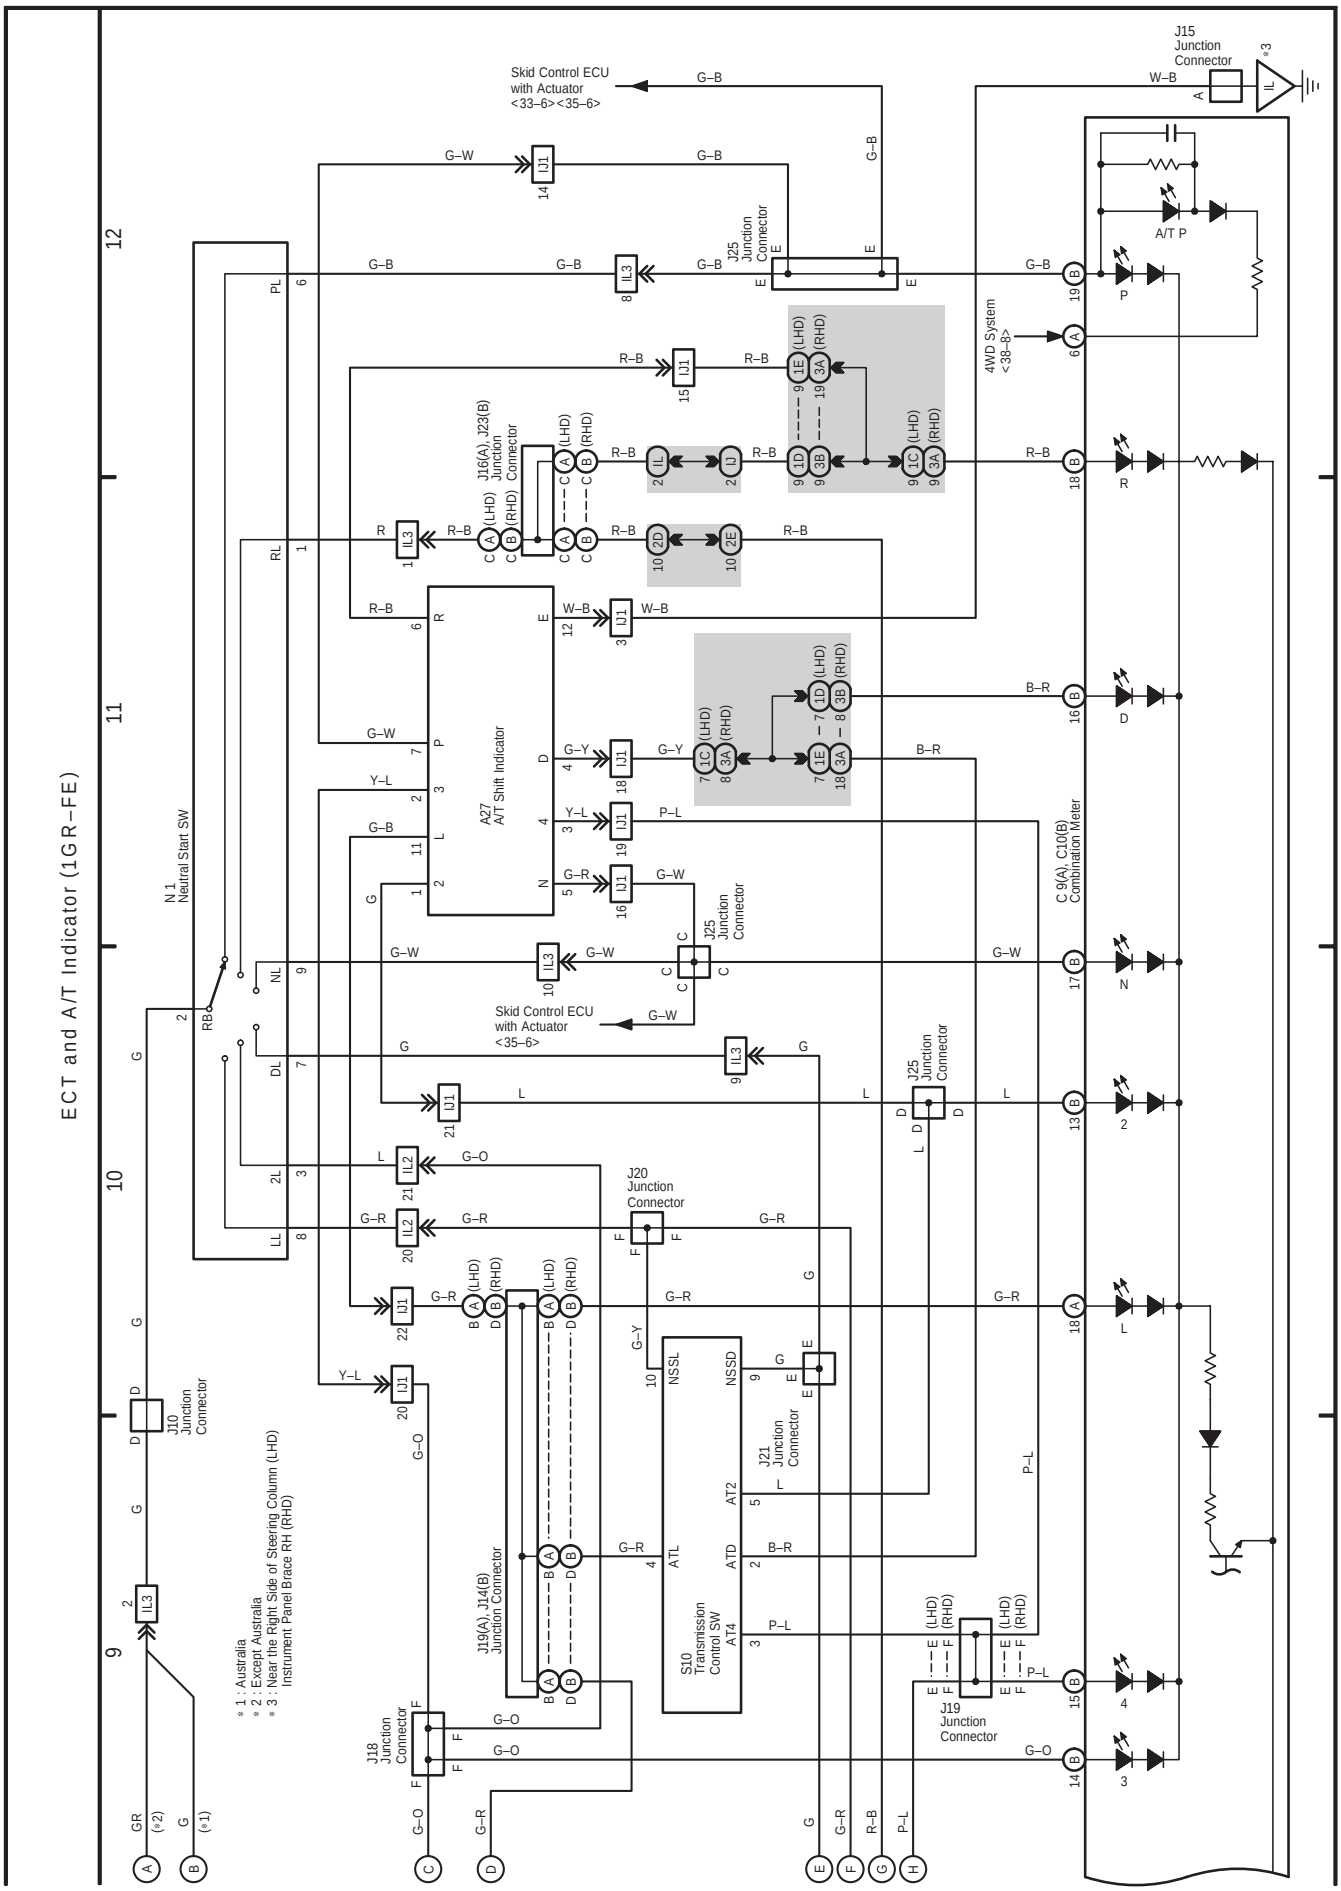

16 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
ECT and A/T Indicator (1GR–FE)
* 1 : Australia
Engine Control System
<11–8><11–10><11–11><11–14><11–15><11–16><11–17>
E 9(A), E10(B), E11(C), E12(D), E13(E)
Engine and ECT ECU
E 1
ECT Solenoid
S 3
Speed Sensor (ECT)
T15
Turbine Speed Sensor
J22
Junction Connector
J 2
Junction
Connector
I14
Ignition SW
EFI
Relay
7.5A
GAUGE
10A
IGN
20A
EFI
10A
ETCS
30A
AM2
50A
AM1
140A
ALT
Battery
Rear Side of
Left Bank
Cylinder Block
Front Left
Fender
(LHD)
(RHD)

16 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




16 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
ECT and A/T Indicator (1GR–FE)
Skid Control ECU with Actuator <33–6><35–6>
J15 Junction Connector
A/T P
4WD System <38–8>
J25 Junction Connector
J16(A), J23(B) Junction Connector
A27 A/T Shift Indicator
N 1 Neutral Start SW
C 9(A), C10(B) Combination Meter
J20 Junction Connector
J10 Junction Connector
J21 Junction Connector
J19(A), J14(B) Junction Connector
S10 Transmission Control SW AT4
J19 Junction Connector
J18 Junction Connector
* 1 : Australia
* 2 : Except Australia
* 3 : Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)