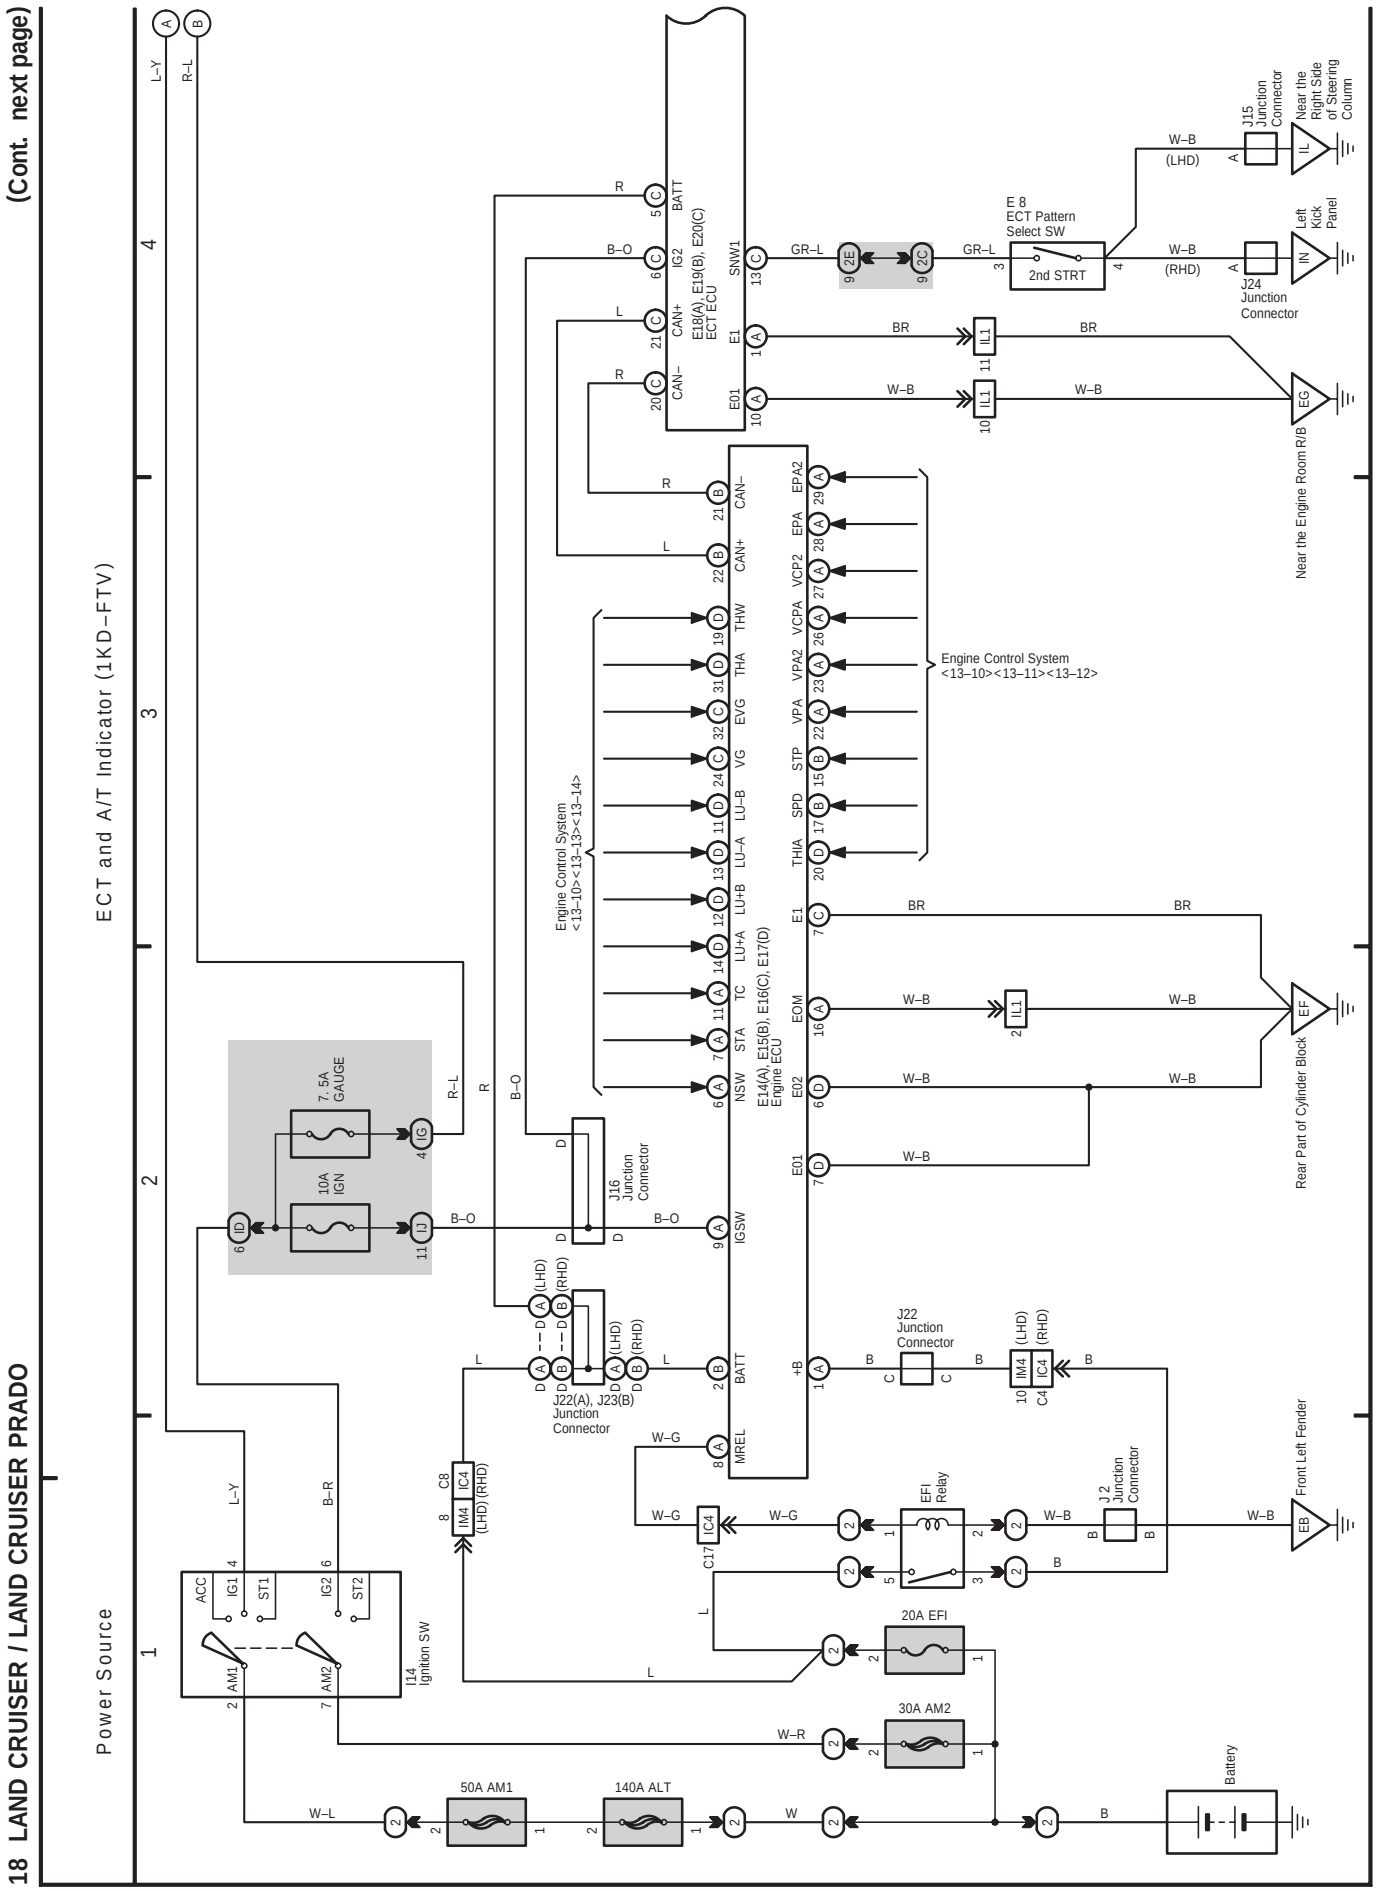
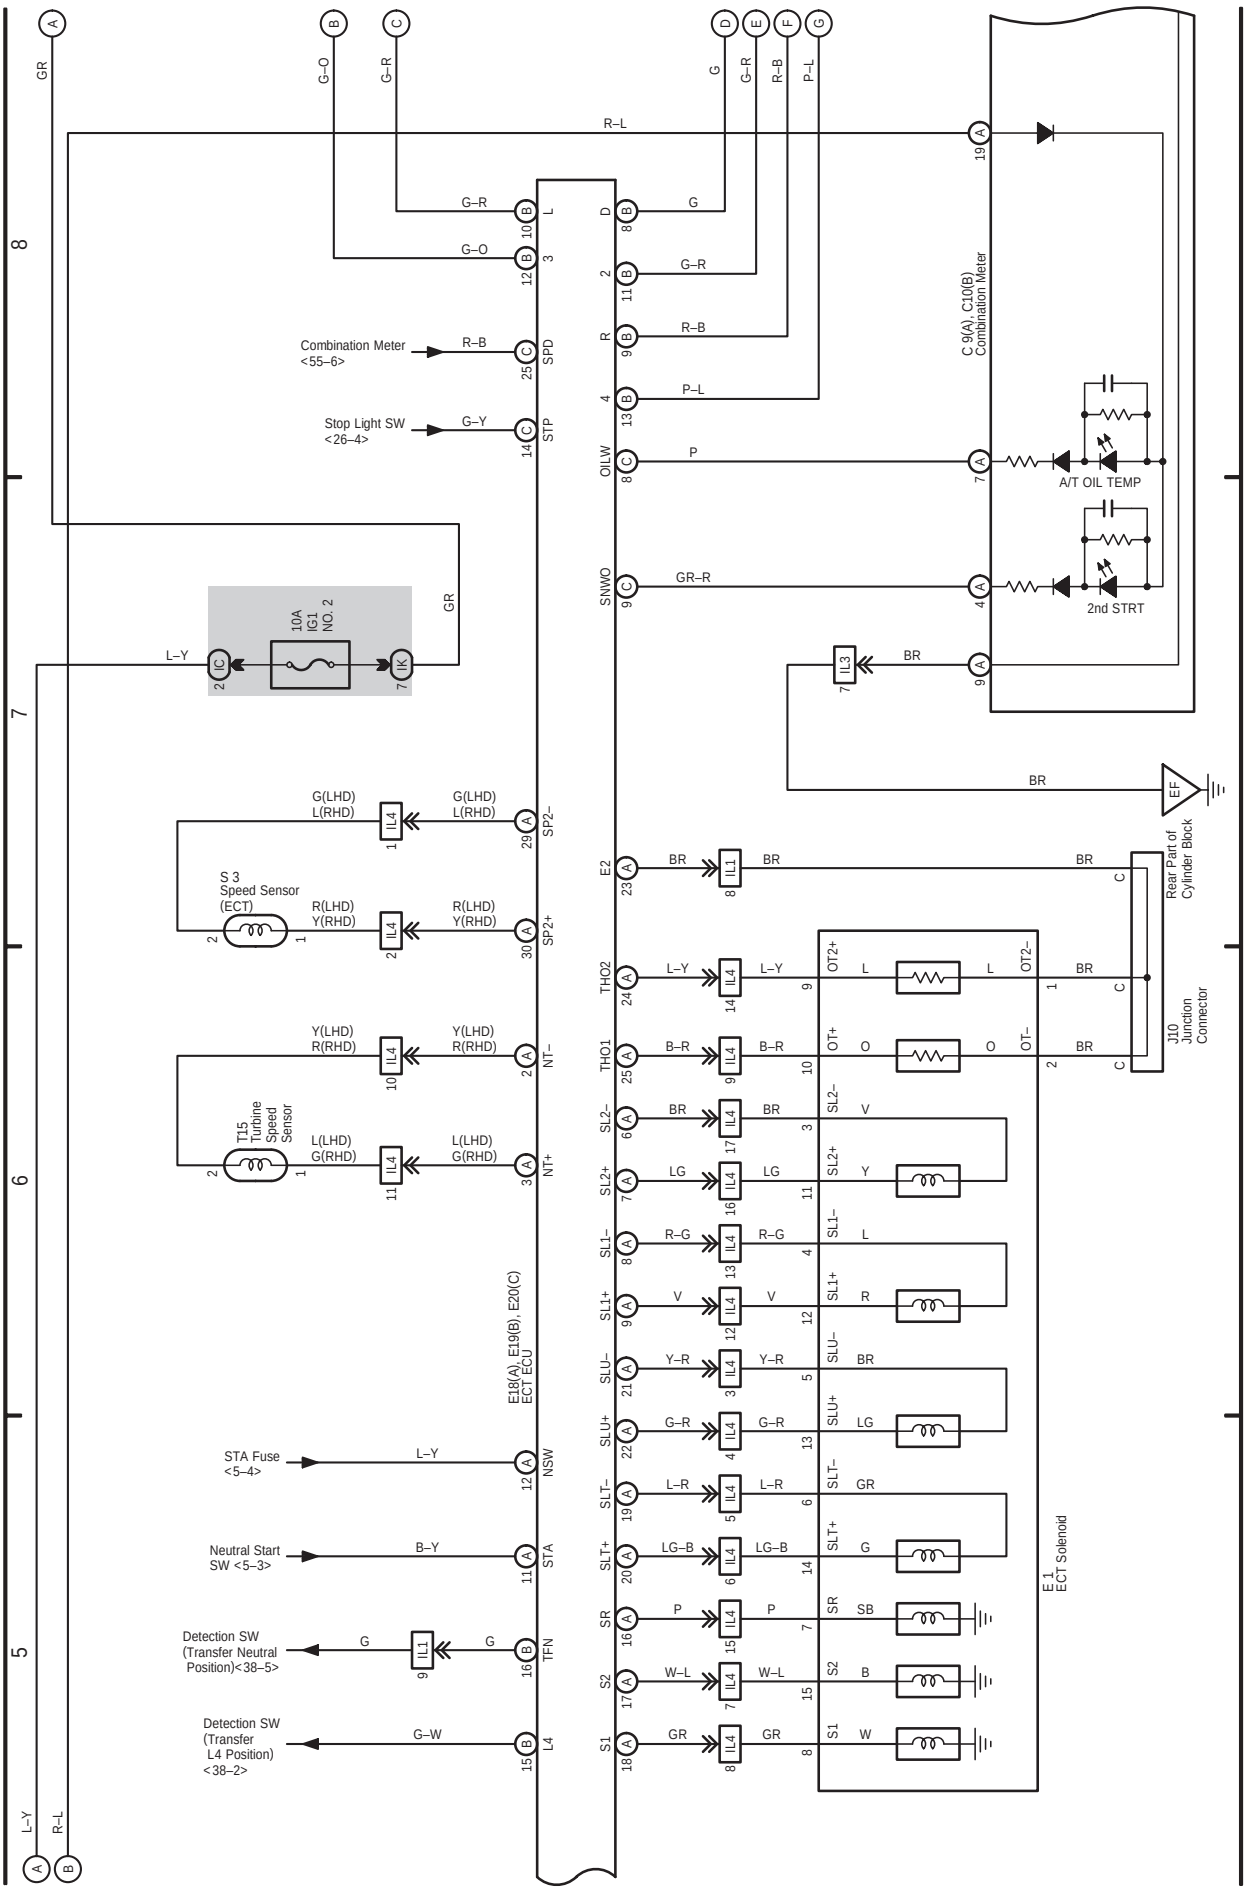
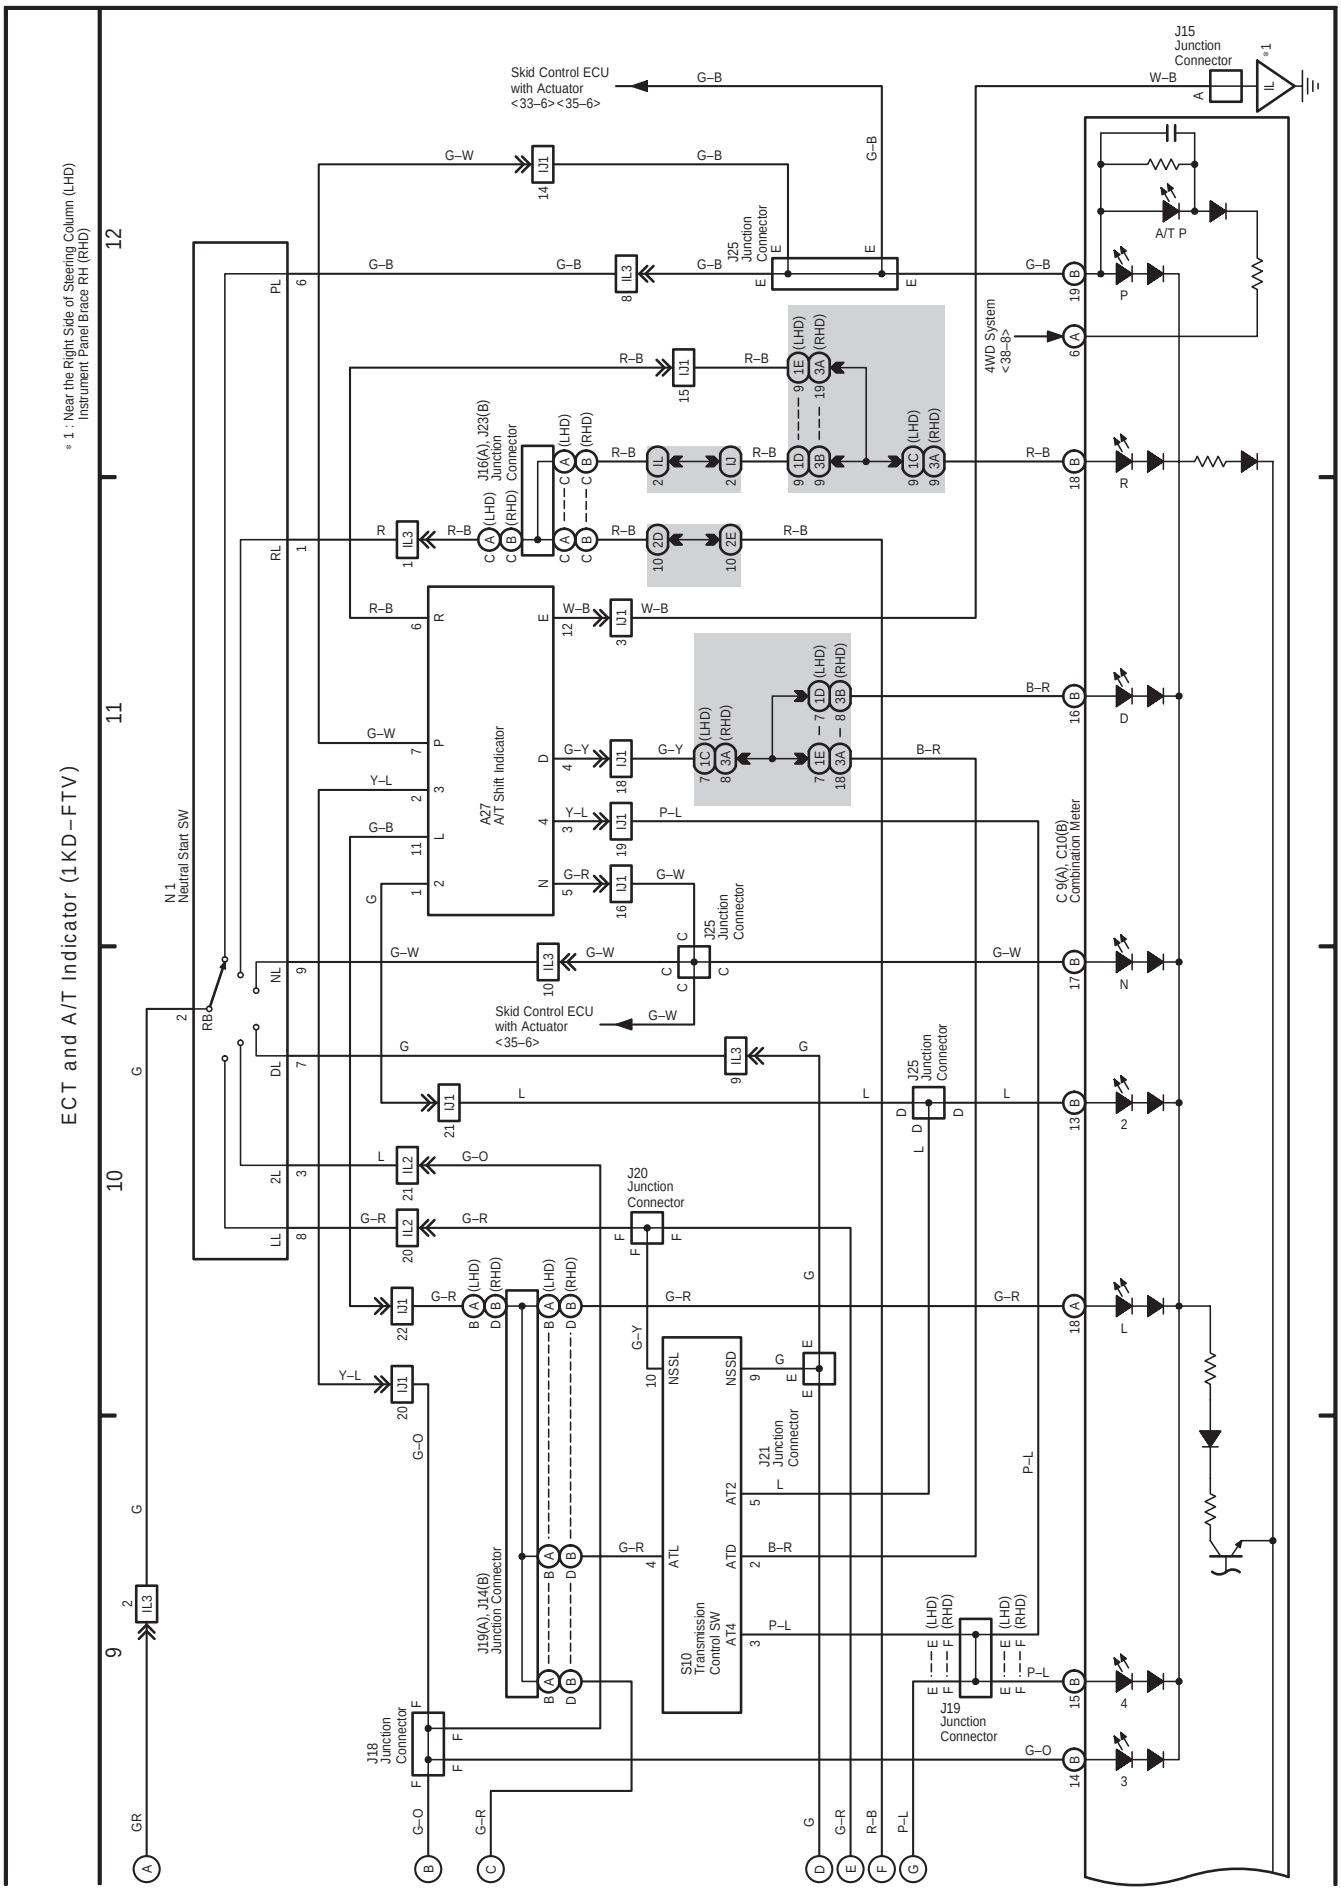

18 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
ECT and A/T Indicator (1KD–FTV)
Power Source
E18(A), E19(B), E20(C) ECT ECU
E14(A), E15(B), E16(C), E17(D) Engine ECU
Engine Control System <13–10><13–11><13–12>
Engine Control System <13–10><13–13><13–14>
E 8 ECT Pattern Select SW
2nd STRT
J15 Junction Connector
J24 Junction Connector
J16 Junction Connector
J22(A), J23(B) Junction Connector
J22 Junction Connector
J 2 Junction Connector
EFI Relay
I14 Ignition SW
7.5A GAUGE
10A IGN
20A EFI
30A AM2
50A AM1
140A ALT
Battery
Near the Right Side of Steering Column
Left Kick Panel
Near the Engine Room R/B
Rear Part of Cylinder Block
Front Left Fender

18 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




ECT and A/T Indicator (1KD–FTV)
18 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
* 1 : Near the Right Side of Steering Column (LHD)
Instrument Panel Brace RH (RHD)
Skid Control ECU with Actuator <33–6><35–6>
Skid Control ECU with Actuator <35–6>
J15 Junction Connector
J25 Junction Connector
J20 Junction Connector
J21 Junction Connector
J18 Junction Connector
J19 Junction Connector
J16(A), J23(B) Junction Connector
J19(A), J14(B) Junction Connector
A27 A/T Shift Indicator
N 1 Neutral Start SW
S10 Transmission Control SW AT4
C 9(A), C10(B) Combination Meter
4WD System <38–8>
A/T P
P
R
D
N
2
L
4
3