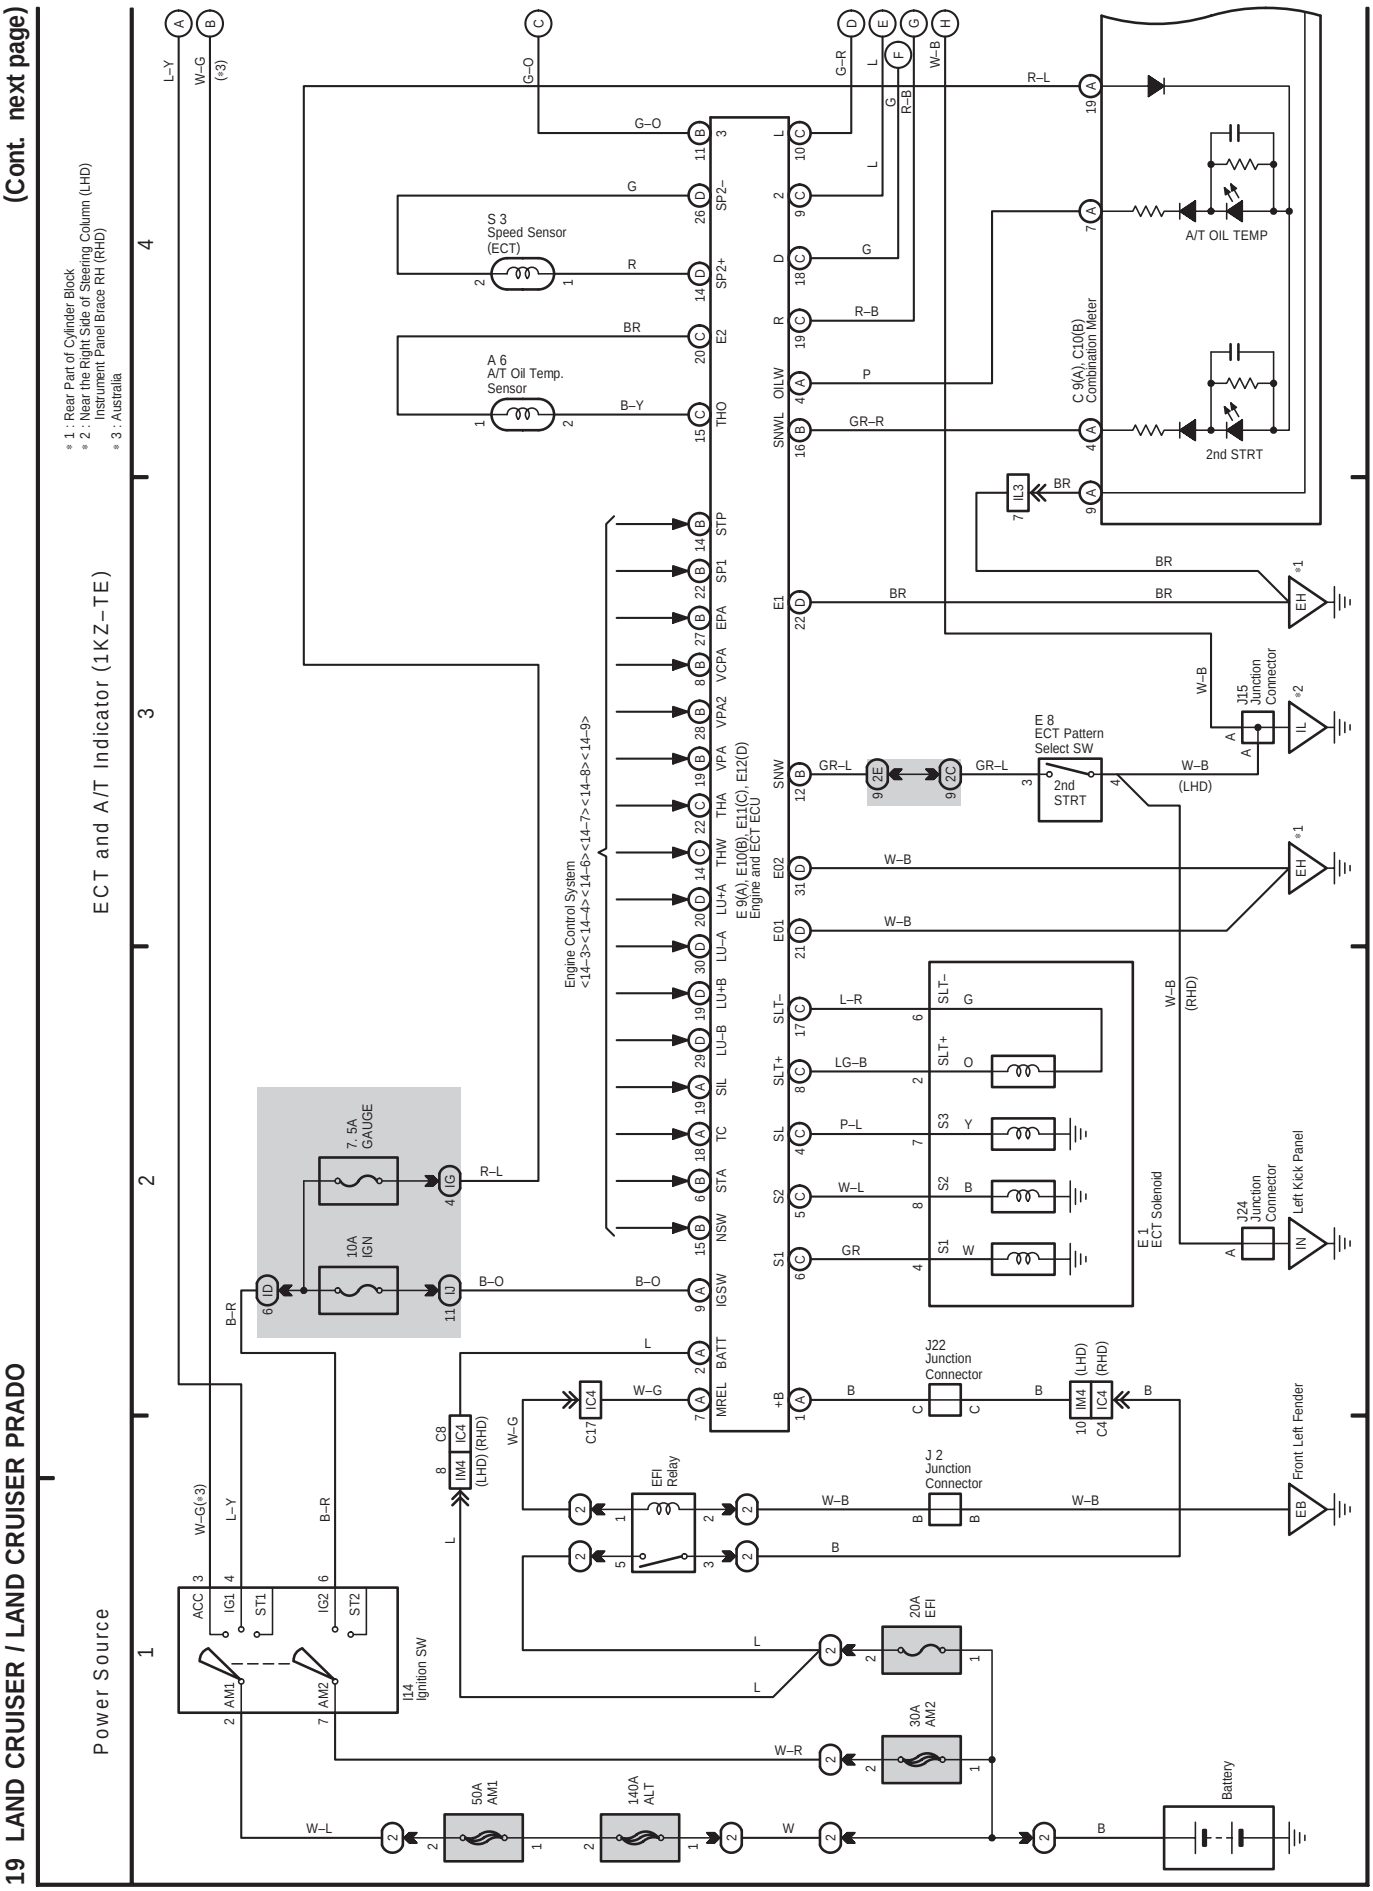

19 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
ECT and A/T Indicator (1KZ–TE)
Power Source
* 1 : Rear Part of Cylinder Block
* 2 : Near the Right Side of Steering Column (LHD)
Instrument Panel Brace RH (RHD)
* 3 : Australia
S 3
Speed Sensor
(ECT)
A 6
A/T Oil Temp.
Sensor
A/T OIL TEMP
2nd STRT
C 9(A), C10(B)
Combination Meter
E 8
ECT Pattern
Select SW
2nd
STRT
(LHD)
(RHD)
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU
Engine Control System
<14–3><14–4><14–6><14–7><14–8><14–9>
E 1
ECT Solenoid
J15
Junction
Connector
J24
Junction
Connector
Left Kick Panel
J22
Junction
Connector
J 2
Junction
Connector
Front Left Fender
Battery
I14
Ignition SW
EFI
Relay
7.5A
GAUGE
10A
IGN
20A
EFI
30A
AM2
50A
AM1
140A
ALT
ACC
IG1
ST1
IG2
ST2
AM1
AM2
BATT
IGSW
MREL
+B
STA
NSW
SIL
TC
LU–B
LU+B
LU–A
LU+A
THW
THA
VPA
VPA2
VCPA
EPA
SP1
STP
SP2–
SP2+
E2
THO
OILW
SNWL
SNW
E02
E01
E1
SLT–
SLT+
SL
S2
S1
S3
SLT
EH
IL
IN
EB
IL3
IM4
IC4
C8
C17
C4
W–G(*3)
L–Y
B–R
R–L
B–O
G–O
G–R
R–B
GR–R
GR–L
LG–B
P–L
W–L
GR
L–R
W–R
W–B
BR
B–Y
P
G
R
L
W
B
O
Y
S1
S2
S3
W
B

19 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

