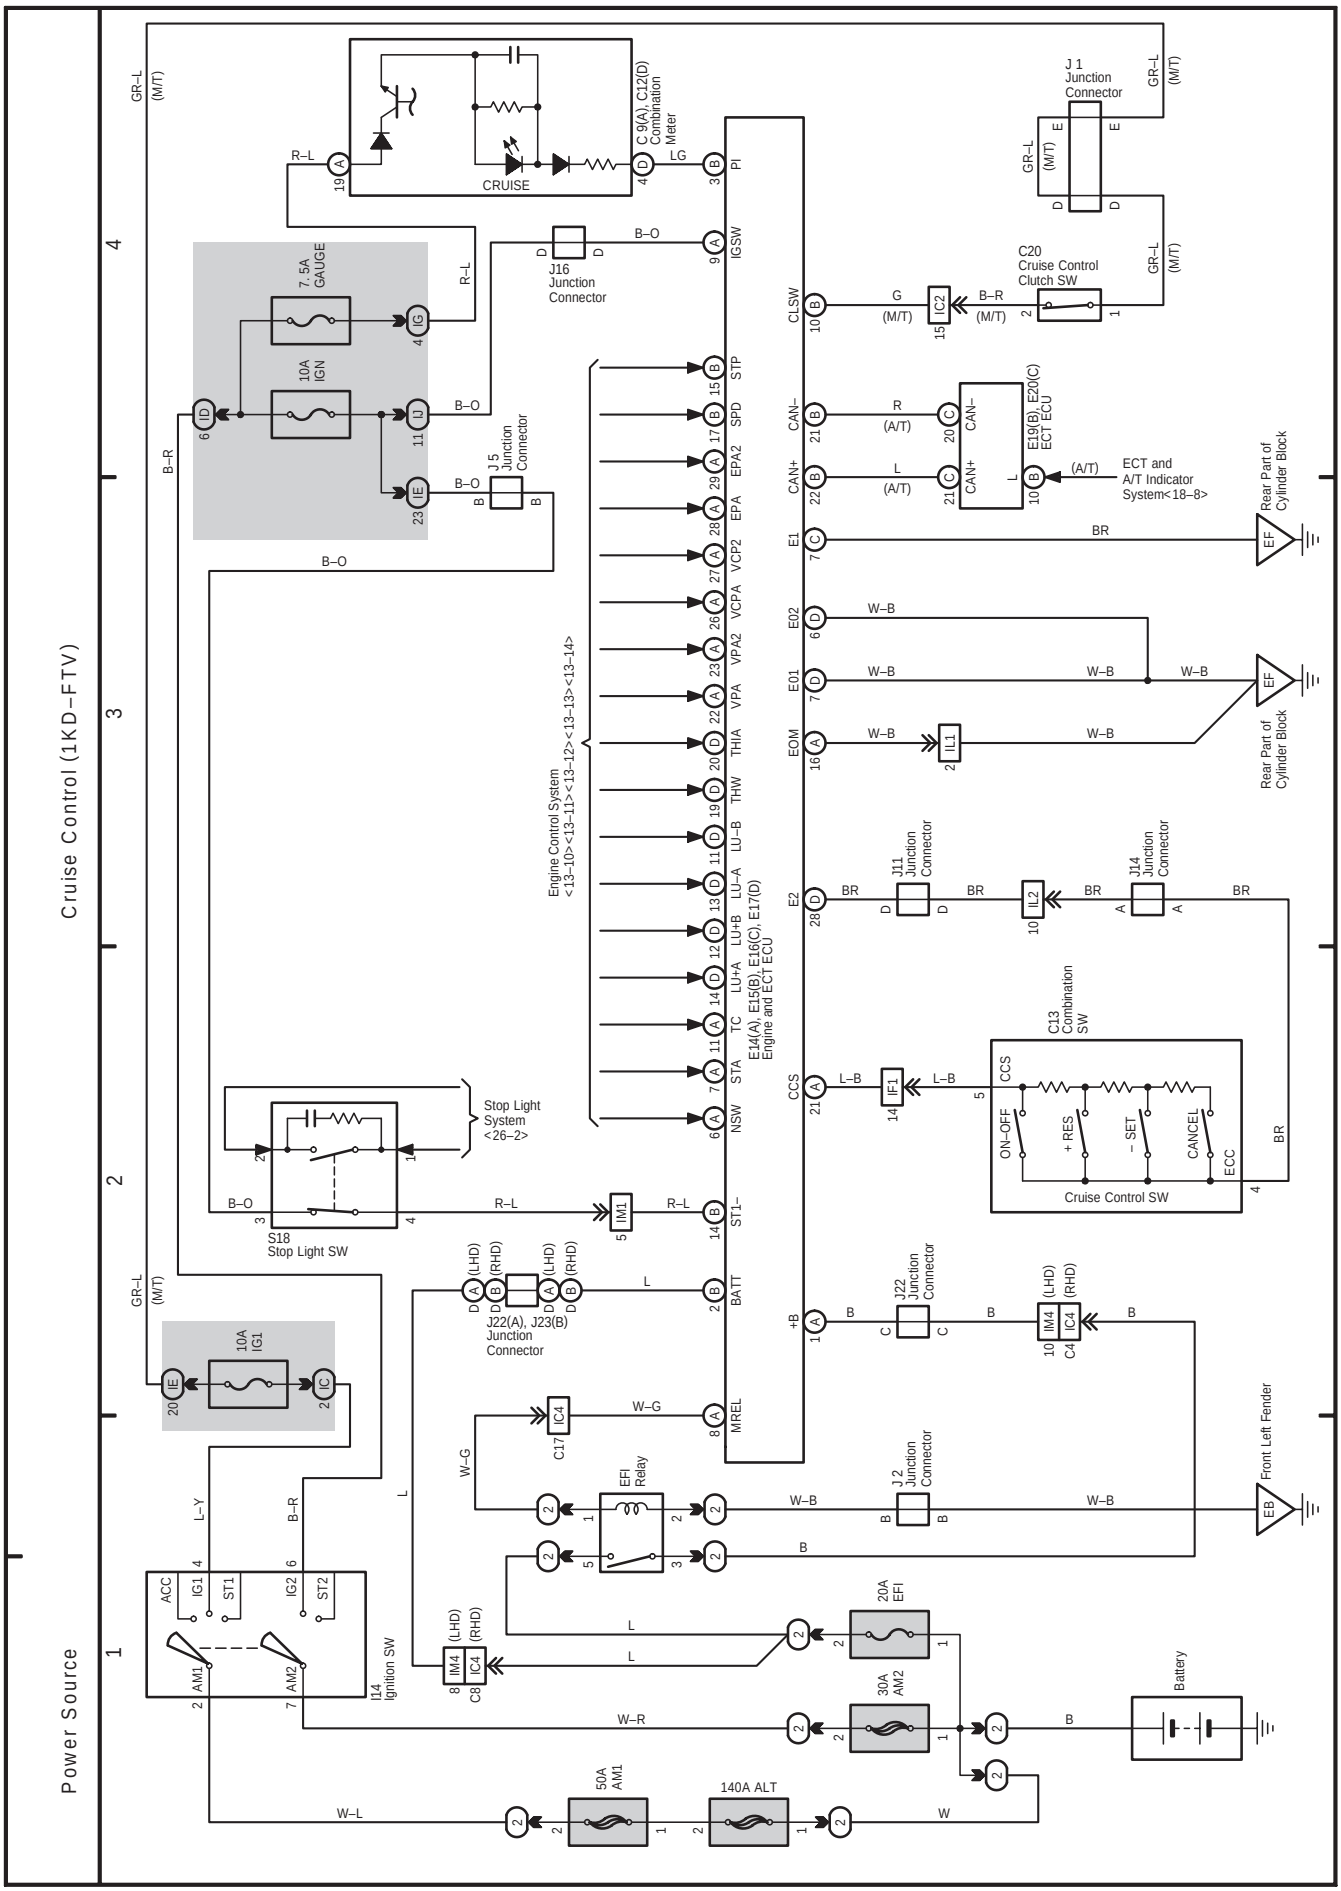

21 LAND CRUISER / LAND CRUISER PRADO
Power Source
Cruise Control (1KD–FTV)
CRUISE
C 9(A), C12(D) Combination Meter
J 1 Junction Connector
C20 Cruise Control Clutch SW
J16 Junction Connector
7. 5A GAUGE
10A IGN
J 5 Junction Connector
Engine Control System <13–10><13–11><13–12><13–13><13–14>
E14(A), E15(B), E16(C), E17(D) Engine and ECT ECU
E19(B), E20(C) ECT ECU
ECT and A/T Indicator System<18–8>
Rear Part of Cylinder Block
Stop Light System <26–2>
S18 Stop Light SW
J11 Junction Connector
J14 Junction Connector
C13 Combination SW
Cruise Control SW
J22(A), J23(B) Junction Connector
J22 Junction Connector
10A IG1
EFI Relay
J 2 Junction Connector
Front Left Fender
I14 Ignition SW
20A EFI
30A AM2
50A AM1
140A ALT
Battery