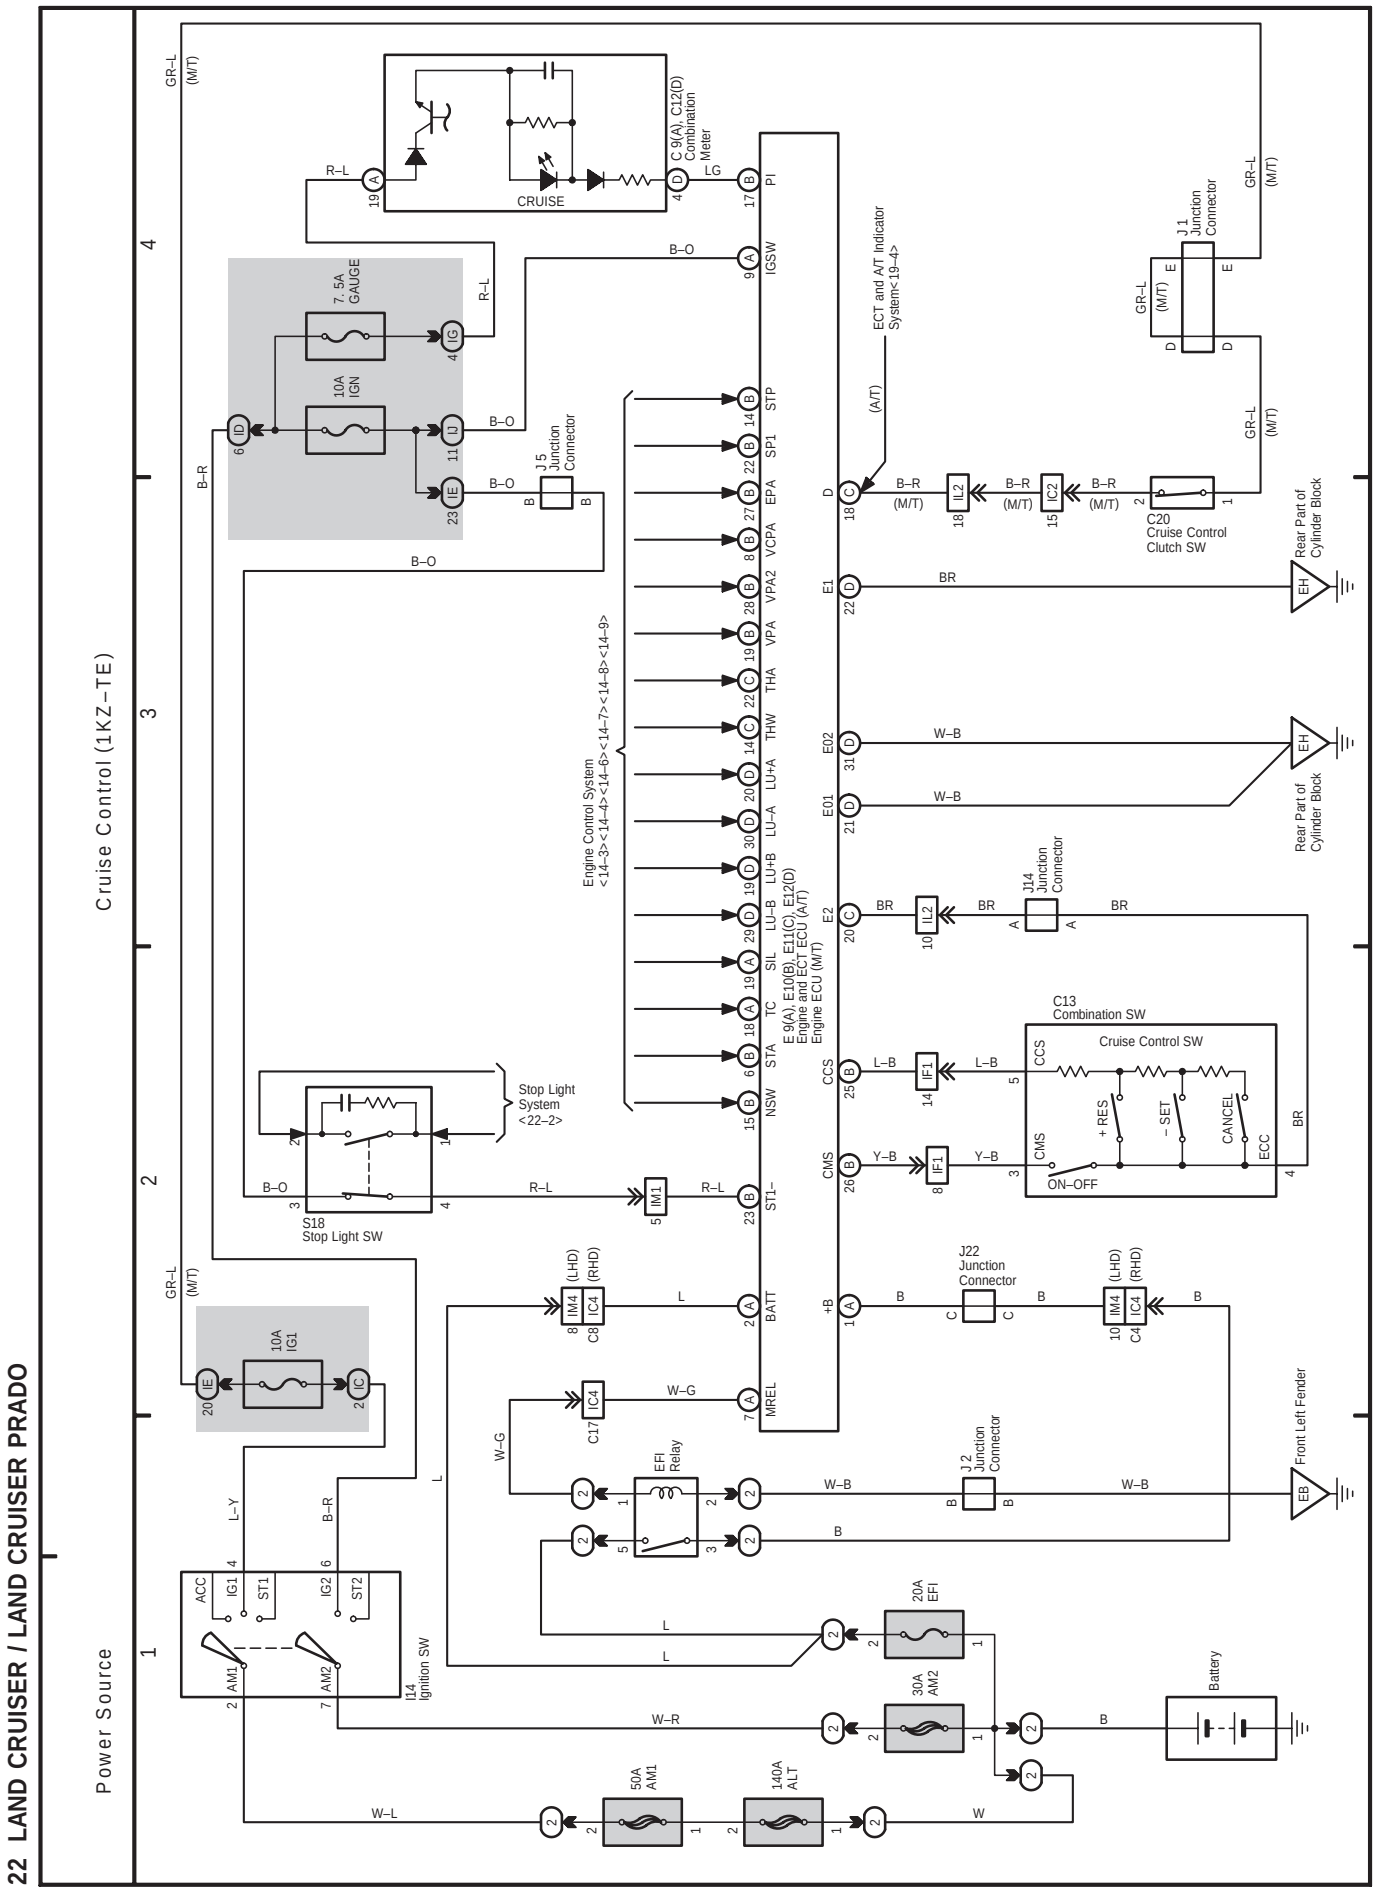

22 LAND CRUISER / LAND CRUISER PRADO
Power Source
Cruise Control (1KZ–TE)
1
2
3
4
CRUISE
C 9(A), C12(D) Combination Meter
7. 5A GAUGE
10A IGN
10A IG1
J5 Junction Connector
J1 Junction Connector
J14 Junction Connector
J22 Junction Connector
J2 Junction Connector
ECT and A/T Indicator System<19–4>
C20 Cruise Control Clutch SW
C13 Combination SW
Cruise Control SW
+ RES
– SET
CANCEL
ON–OFF
Stop Light System <22–2>
S18 Stop Light SW
Engine Control System <14–3><14–4><14–6><14–7><14–8><14–9>
E 9(A), E10(B), E11(C), E12(D) Engine and ECT ECU (A/T) Engine ECU (M/T)
EFI Relay
I14 Ignition SW
20A EFI
30A AM2
50A AM1
140A ALT
Battery
Rear Part of Cylinder Block
Front Left Fender
IGSW
STP
SP1
EPA
VCPA
VPA2
VPA
THA
THW
LU+A
LU–A
LU+B
LU–B
SIL
TC
STA
NSW
ST1–
BATT
+B
MREL
E1
E02
E01
E2
CCS
CMS