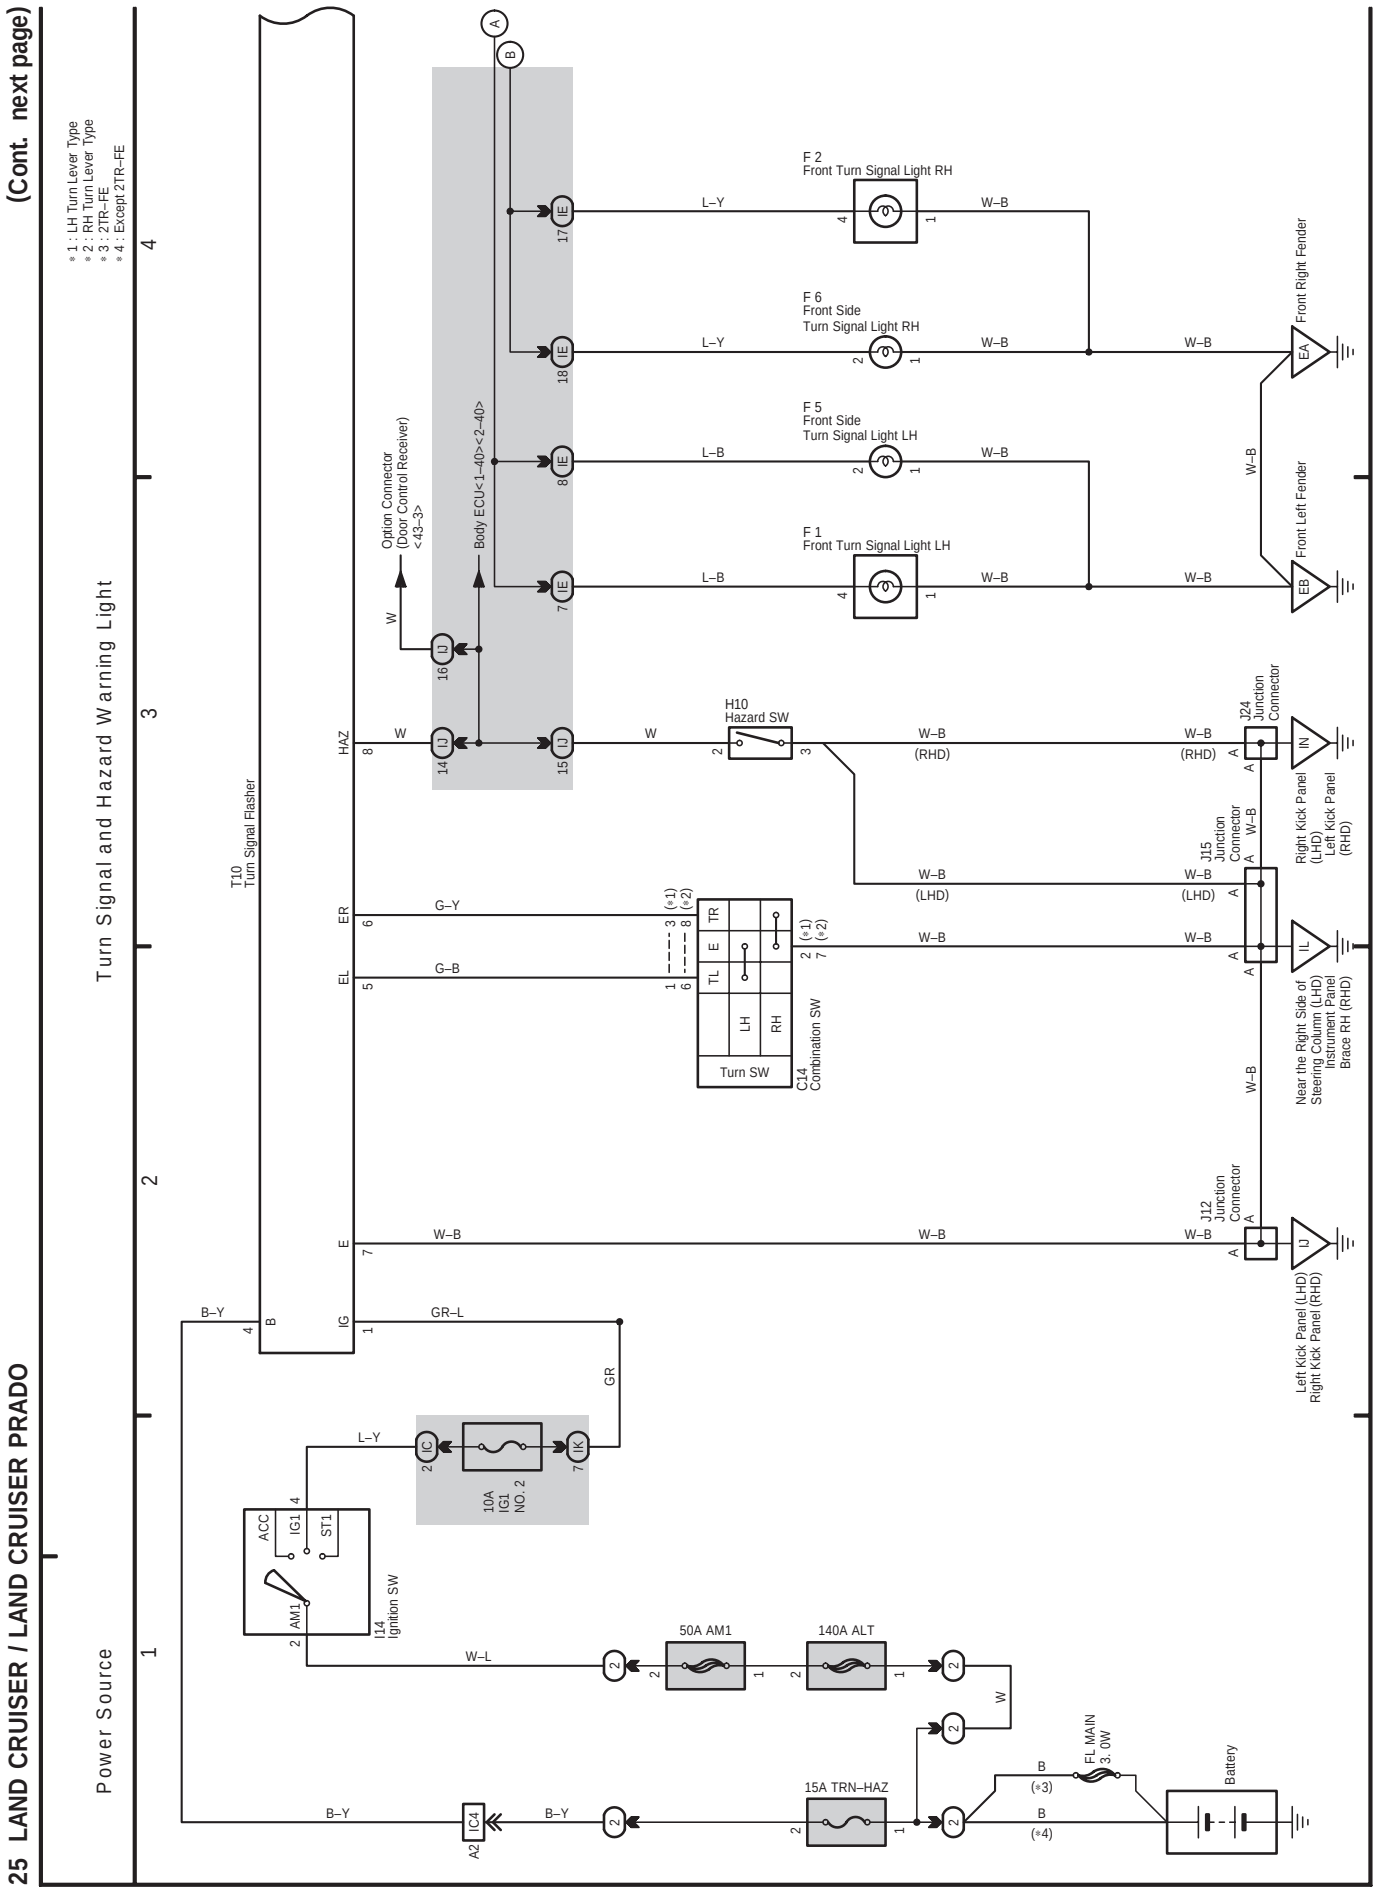

(Cont. next page)
* 1 : LH Turn Lever Type
* 2 : RH Turn Lever Type
* 3 : 2TR–FE
* 4 : Except 2TR–FE
Turn Signal and Hazard Warning Light
Power Source
25 LAND CRUISER / LAND CRUISER PRADO
F 2
Front Turn Signal Light RH
F 6
Front Side
Turn Signal Light RH
F 5
Front Side
Turn Signal Light LH
F 1
Front Turn Signal Light LH
Front Right Fender
Front Left Fender
Option Connector
(Door Control Receiver)
<43–3>
Body ECU<1–40><2–40>
H10
Hazard SW
J24
Junction
Connector
J15
Junction
Connector
J12
Junction
Connector
Right Kick Panel
(LHD)
Left Kick Panel
(RHD)
Near the Right Side of
Steering Column (LHD)
Instrument Panel
Brace RH (RHD)
Left Kick Panel (LHD)
Right Kick Panel (RHD)
T10
Turn Signal Flasher
C14
Combination SW
Turn SW
I14
Ignition SW
10A
IG1
NO. 2
50A AM1
140A ALT
15A TRN–HAZ
FL MAIN
3. 0W
Battery
(RHD)
(LHD)

25 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

