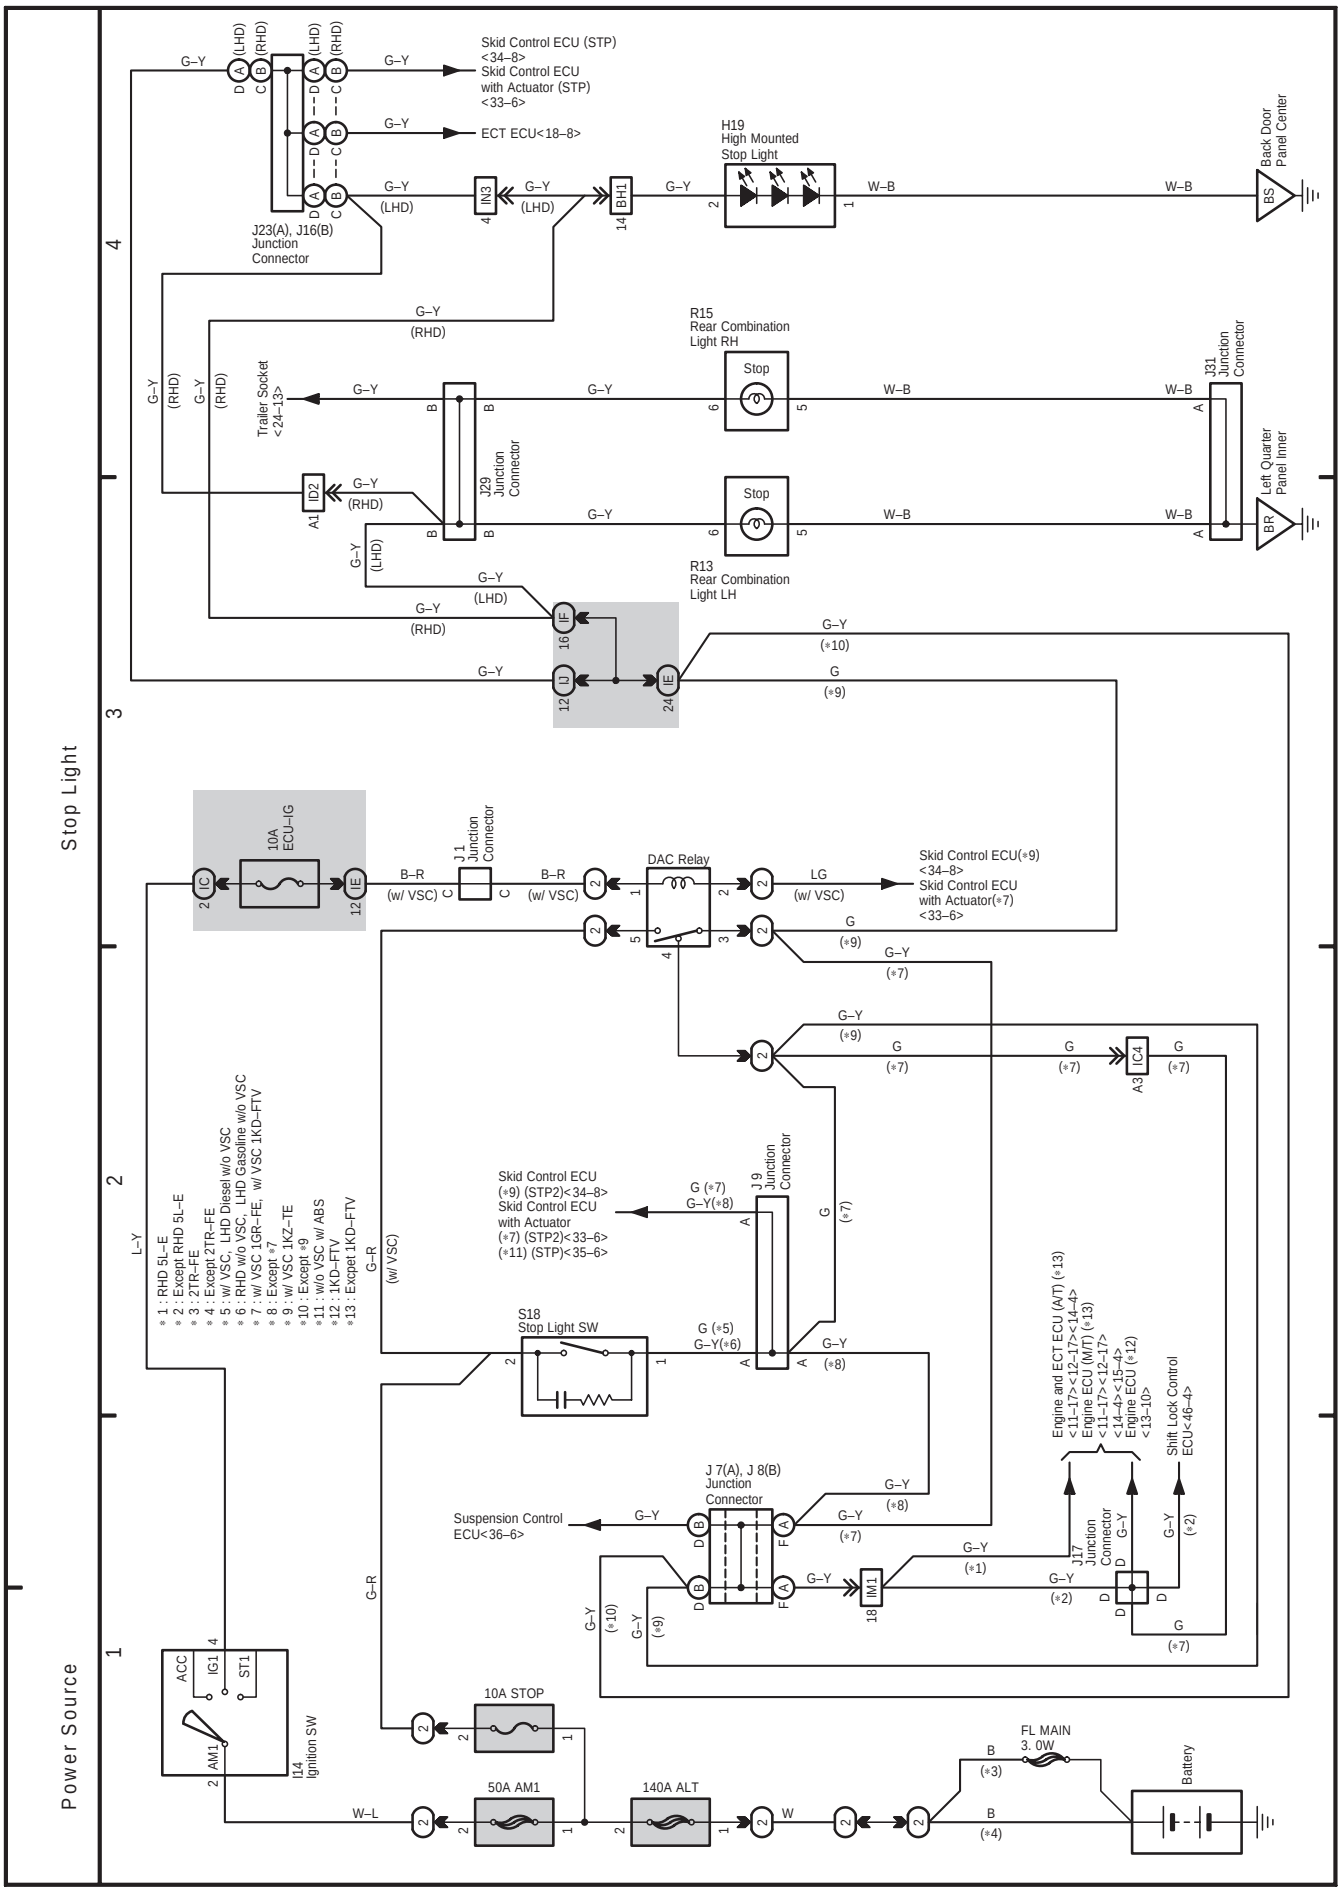

26 LAND CRUISER / LAND CRUISER PRADO
Stop Light
Power Source
Skid Control ECU (STP) <34–8>
Skid Control ECU with Actuator (STP) <33–6>
ECT ECU<18–8>
H19 High Mounted Stop Light
Back Door Panel Center
J23(A), J16(B) Junction Connector
R15 Rear Combination Light RH
R13 Rear Combination Light LH
Trailer Socket <24–13>
J29 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
10A ECU–IG
J1 Junction Connector
DAC Relay
Skid Control ECU(*9) <34–8> Skid Control ECU with Actuator(*7) <33–6>
J9 Junction Connector
Skid Control ECU (*9) (STP2)<34–8> Skid Control ECU with Actuator (*7) (STP2)<33–6> (*11) (STP)<35–6>
S18 Stop Light SW
J 7(A), J 8(B) Junction Connector
Suspension Control ECU<36–6>
J17 Junction Connector
Engine and ECT ECU (A/T) (*13) <11–17><12–17><14–4> Engine ECU (M/T) (*13) <11–17><12–17> <14–4><15–4> Engine ECU (*12) <13–10>
Shift Lock Control ECU<46–4>
I14 Ignition SW
10A STOP
50A AM1
140A ALT
FL MAIN 3. 0W
Battery
* 1 : RHD 5L–E
* 2 : Except RHD 5L–E
* 3 : 2TR–FE
* 4 : Except 2TR–FE
* 5 : w/ VSC, LHD Diesel w/o VSC
* 6 : RHD w/o VSC, LHD Gasoline w/o VSC
* 7 : w/ VSC 1GR–FE, w/ VSC 1KD–FTV
* 8 : Except *7
* 9 : w/ VSC 1KZ–TE
*10 : Except *9
*11 : w/o VSC w/ ABS
*12 : 1KD–FTV
*13 : Except 1KD–FTV