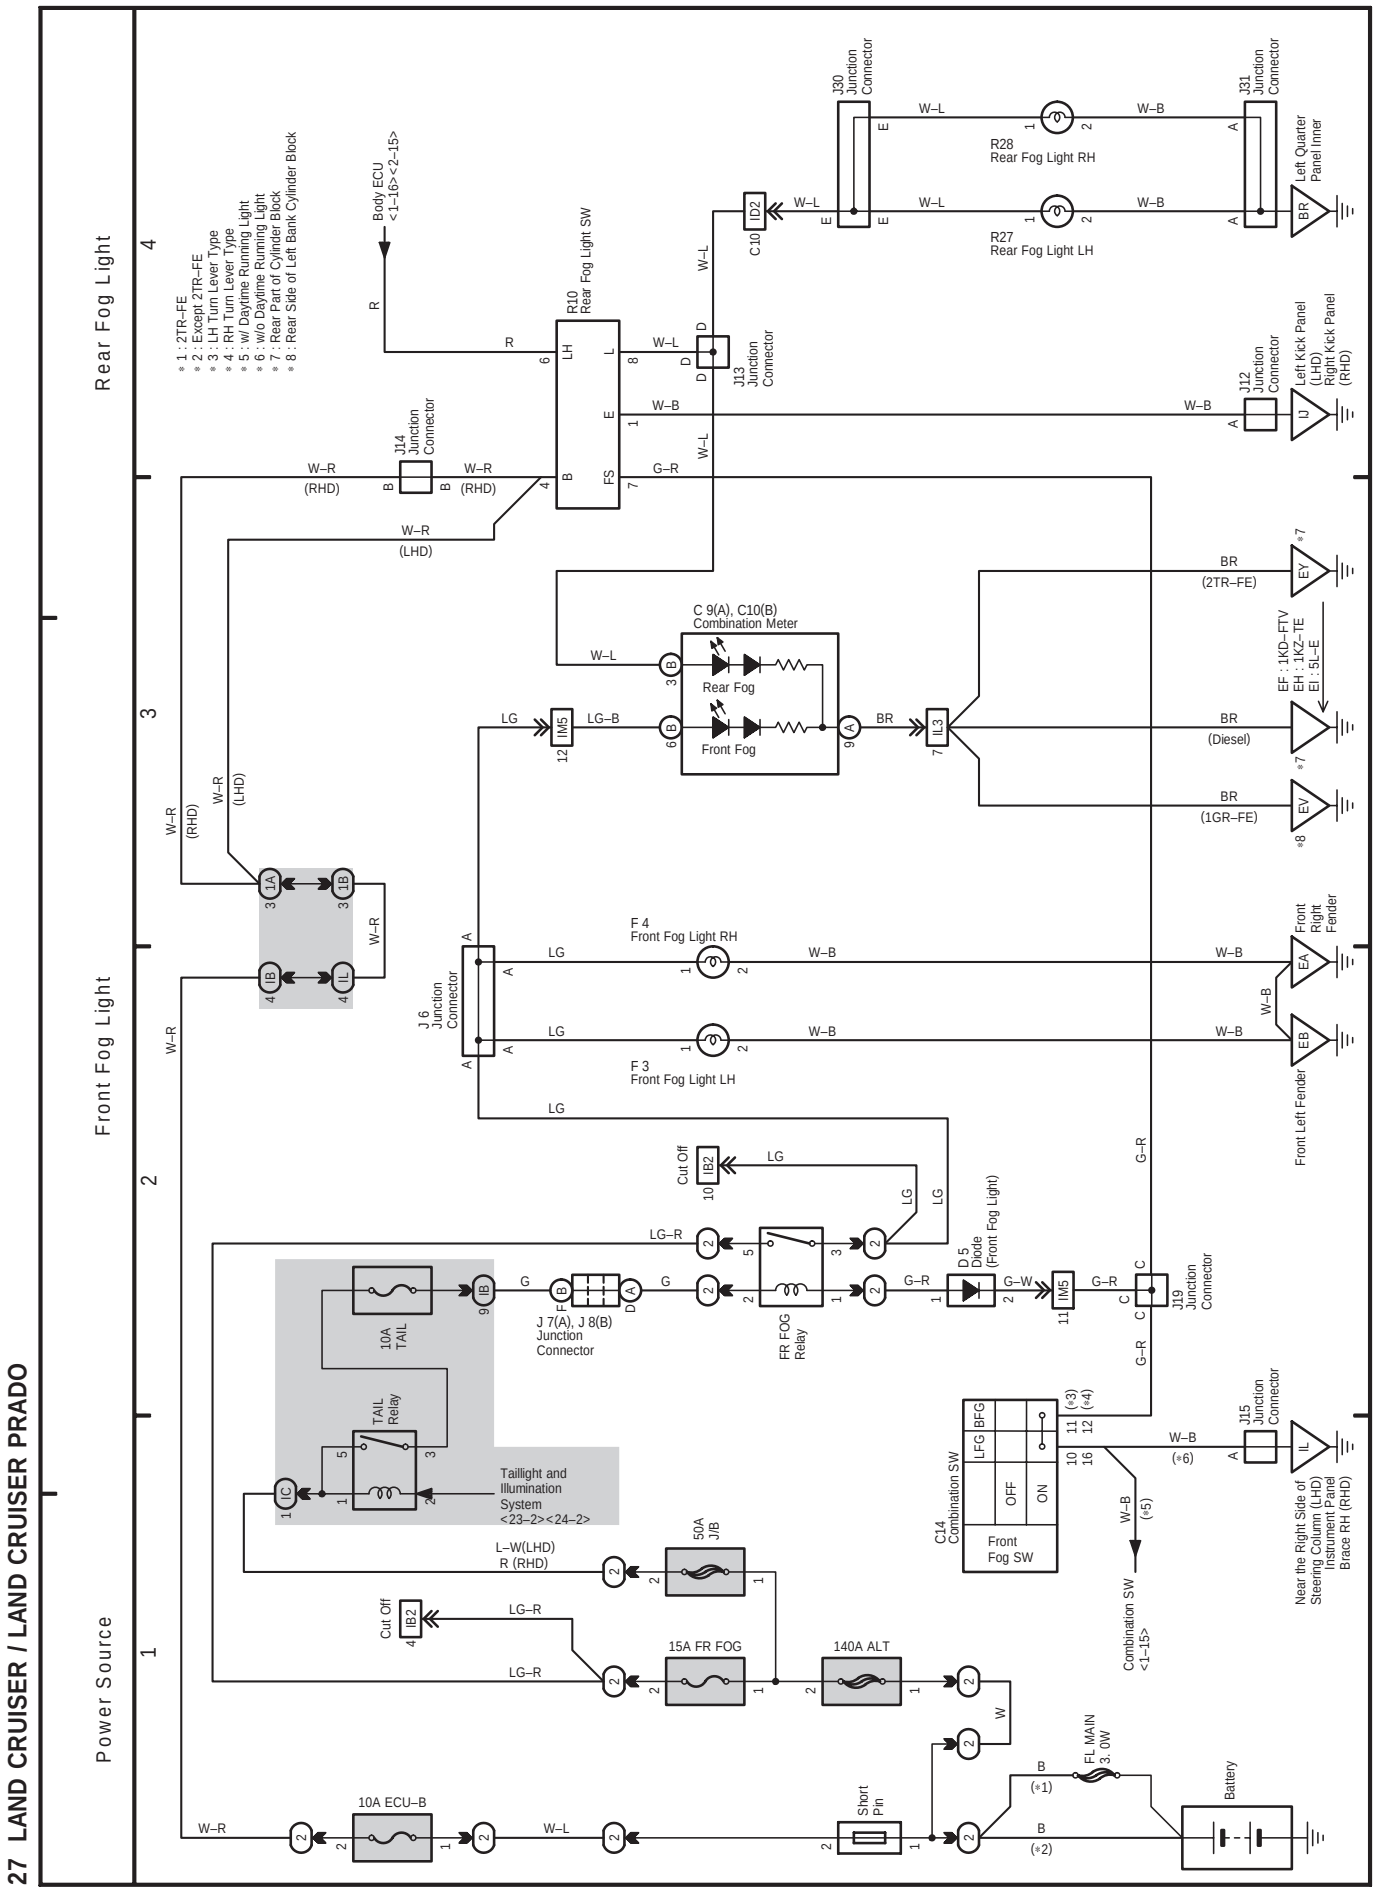

27 LAND CRUISER / LAND CRUISER PRADO
Power Source
Front Fog Light
Rear Fog Light
1
2
3
4
* 1 : 2TR–FE
* 2 : Except 2TR–FE
* 3 : LH Turn Lever Type
* 4 : RH Turn Lever Type
* 5 : w/ Daytime Running Light
* 6 : w/o Daytime Running Light
* 7 : Rear Part of Cylinder Block
* 8 : Rear Side of Left Bank Cylinder Block
Body ECU <1–16><2–15>
R10 Rear Fog Light SW
J14 Junction Connector
J13 Junction Connector
C10 ID2
J30 Junction Connector
J31 Junction Connector
R28 Rear Fog Light RH
R27 Rear Fog Light LH
Left Quarter Panel Inner
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
C 9(A), C10(B) Combination Meter
Rear Fog
Front Fog
IM5
IL3
BR (2TR–FE)
BR (Diesel)
BR (1GR–FE)
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
EY *7
EV *8
F 4 Front Fog Light RH
F 3 Front Fog Light LH
J 6 Junction Connector
EA Front Right Fender
EB Front Left Fender
Cut Off IB2
D 5 Diode (Front Fog Light)
J 7(A), J 8(B) Junction Connector
FR FOG Relay
J19 Junction Connector
10A TAIL
TAIL Relay
Taillight and Illumination System <23–2><24–2>
50A JB
15A FR FOG
140A ALT
C14 Combination SW
LFG BFG OFF ON
Front Fog SW
J15 Junction Connector
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
Combination SW <1–15>
Cut Off IB2
10A ECU–B
Short Pin
FL MAIN 3. 0W
Battery
W–R (RHD)
W–R (LHD)
W–L
W–B
LG
LG–B
LG–R
G–R
G–W
L–W(LHD) R (RHD)
W