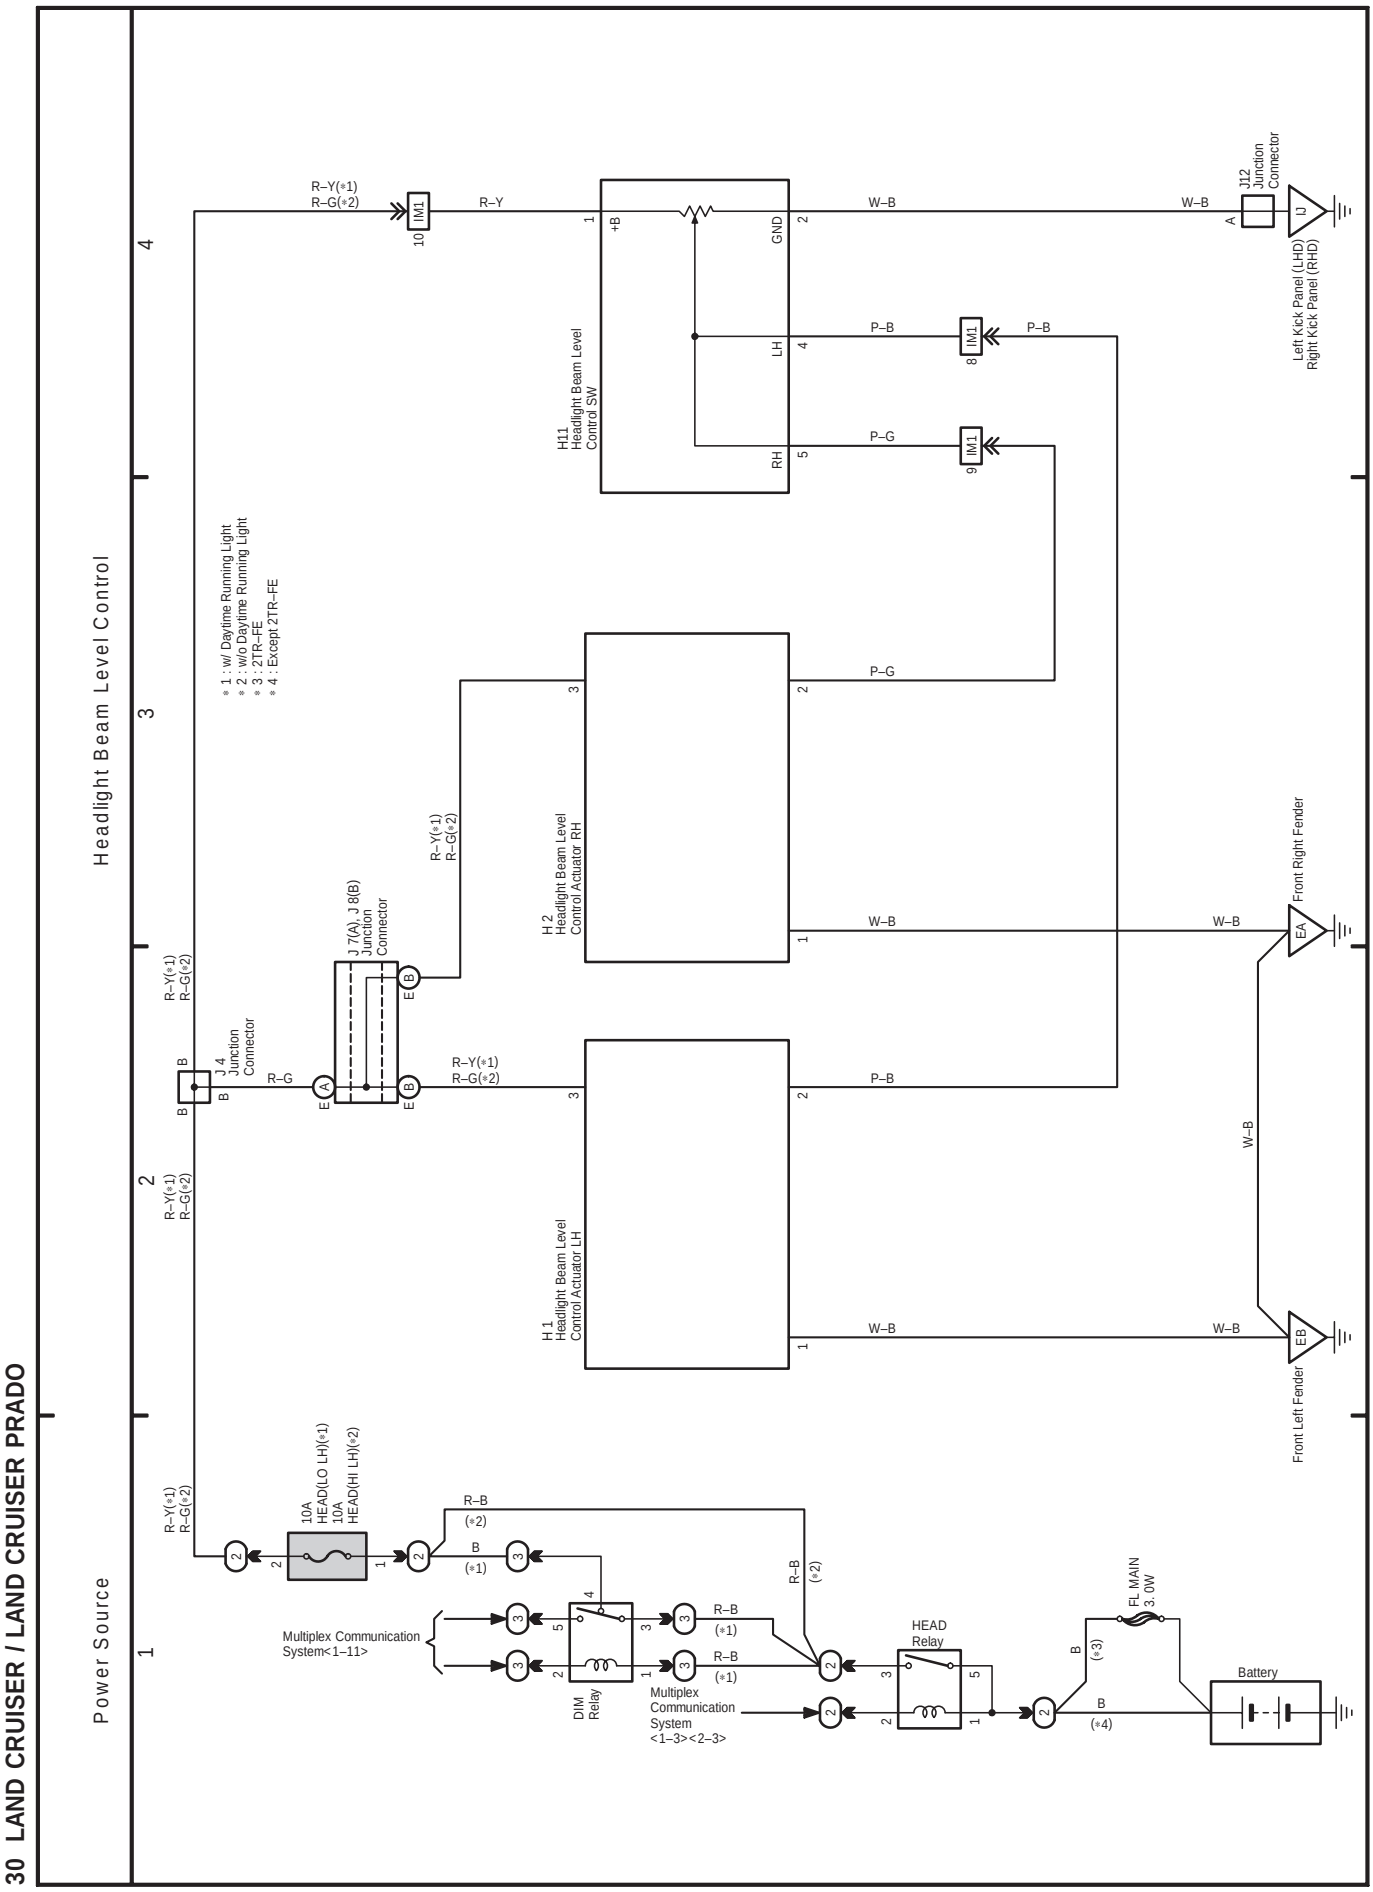

30 LAND CRUISER / LAND CRUISER PRADO
Headlight Beam Level Control
Power Source
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : 2TR–FE
* 4 : Except 2TR–FE
R–Y(*1)
R–G(*2)
R–Y
W–B
P–B
P–G
R–G
B
(*1)
(*2)
(*3)
(*4)
IM1
J12 Junction Connector
Left Kick Panel (LHD)
Right Kick Panel (RHD)
H11 Headlight Beam Level Control SW
+B
GND
LH
RH
H2 Headlight Beam Level Control Actuator RH
H1 Headlight Beam Level Control Actuator LH
J 7(A), J 8(B) Junction Connector
J 4 Junction Connector
Front Right Fender
Front Left Fender
EA
EB
10A HEAD(LO LH)(*1)
10A HEAD(HI LH)(*2)
Multiplex Communication System<1–11>
DIM Relay
Multiplex Communication System <1–3><2–3>
HEAD Relay
FL MAIN 3. 0W
Battery