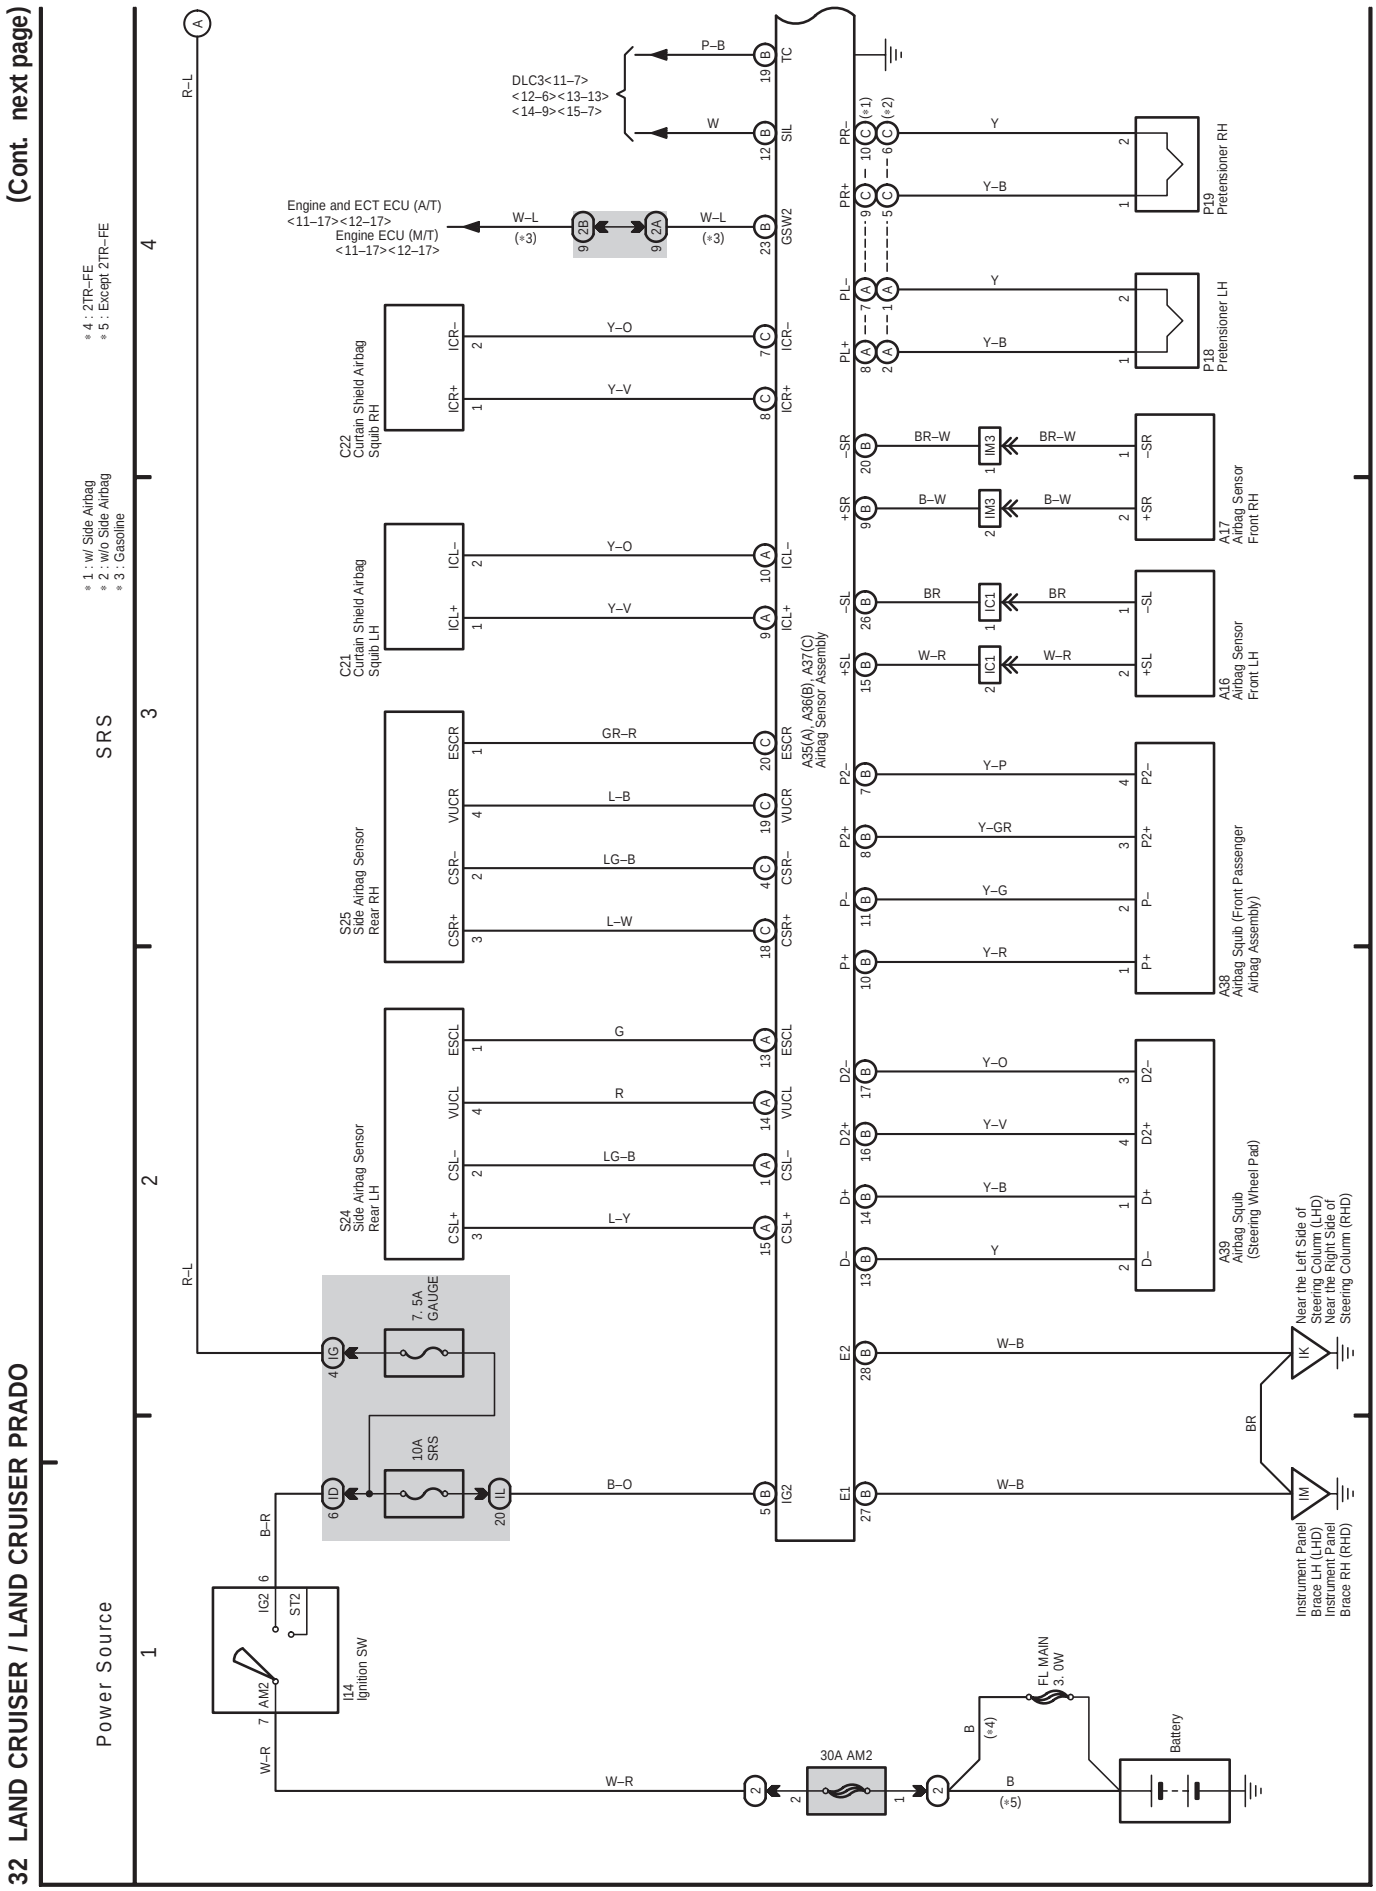

(Cont. next page)
32 LAND CRUISER / LAND CRUISER PRADO
Power Source
SRS
1
2
3
4
* 1 : w/ Side Airbag
* 2 : w/o Side Airbag
* 3 : Gasoline
* 4 : 2TR–FE
* 5 : Except 2TR–FE
DLC3<11–7>
<12–6><13–13>
<14–9><15–7>
Engine and ECT ECU (A/T)
<11–17><12–17>
Engine ECU (M/T)
<11–17><12–17>
C22 Curtain Shield Airbag Squib RH
C21 Curtain Shield Airbag Squib LH
S25 Side Airbag Sensor Rear RH
S24 Side Airbag Sensor Rear LH
A35(A), A36(B), A37(C) Airbag Sensor Assembly
P19 Pretensioner RH
P18 Pretensioner LH
A17 Airbag Sensor Front RH
A16 Airbag Sensor Front LH
A38 Airbag Squib (Front Passenger Airbag Assembly)
A39 Airbag Squib (Steering Wheel Pad)
I14 Ignition SW
7.5A GAUGE
10A SRS
30A AM2
FL MAIN 3. 0W
Battery
Near the Left Side of Steering Column (LHD)
Near the Right Side of Steering Column (RHD)
Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)

32 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

