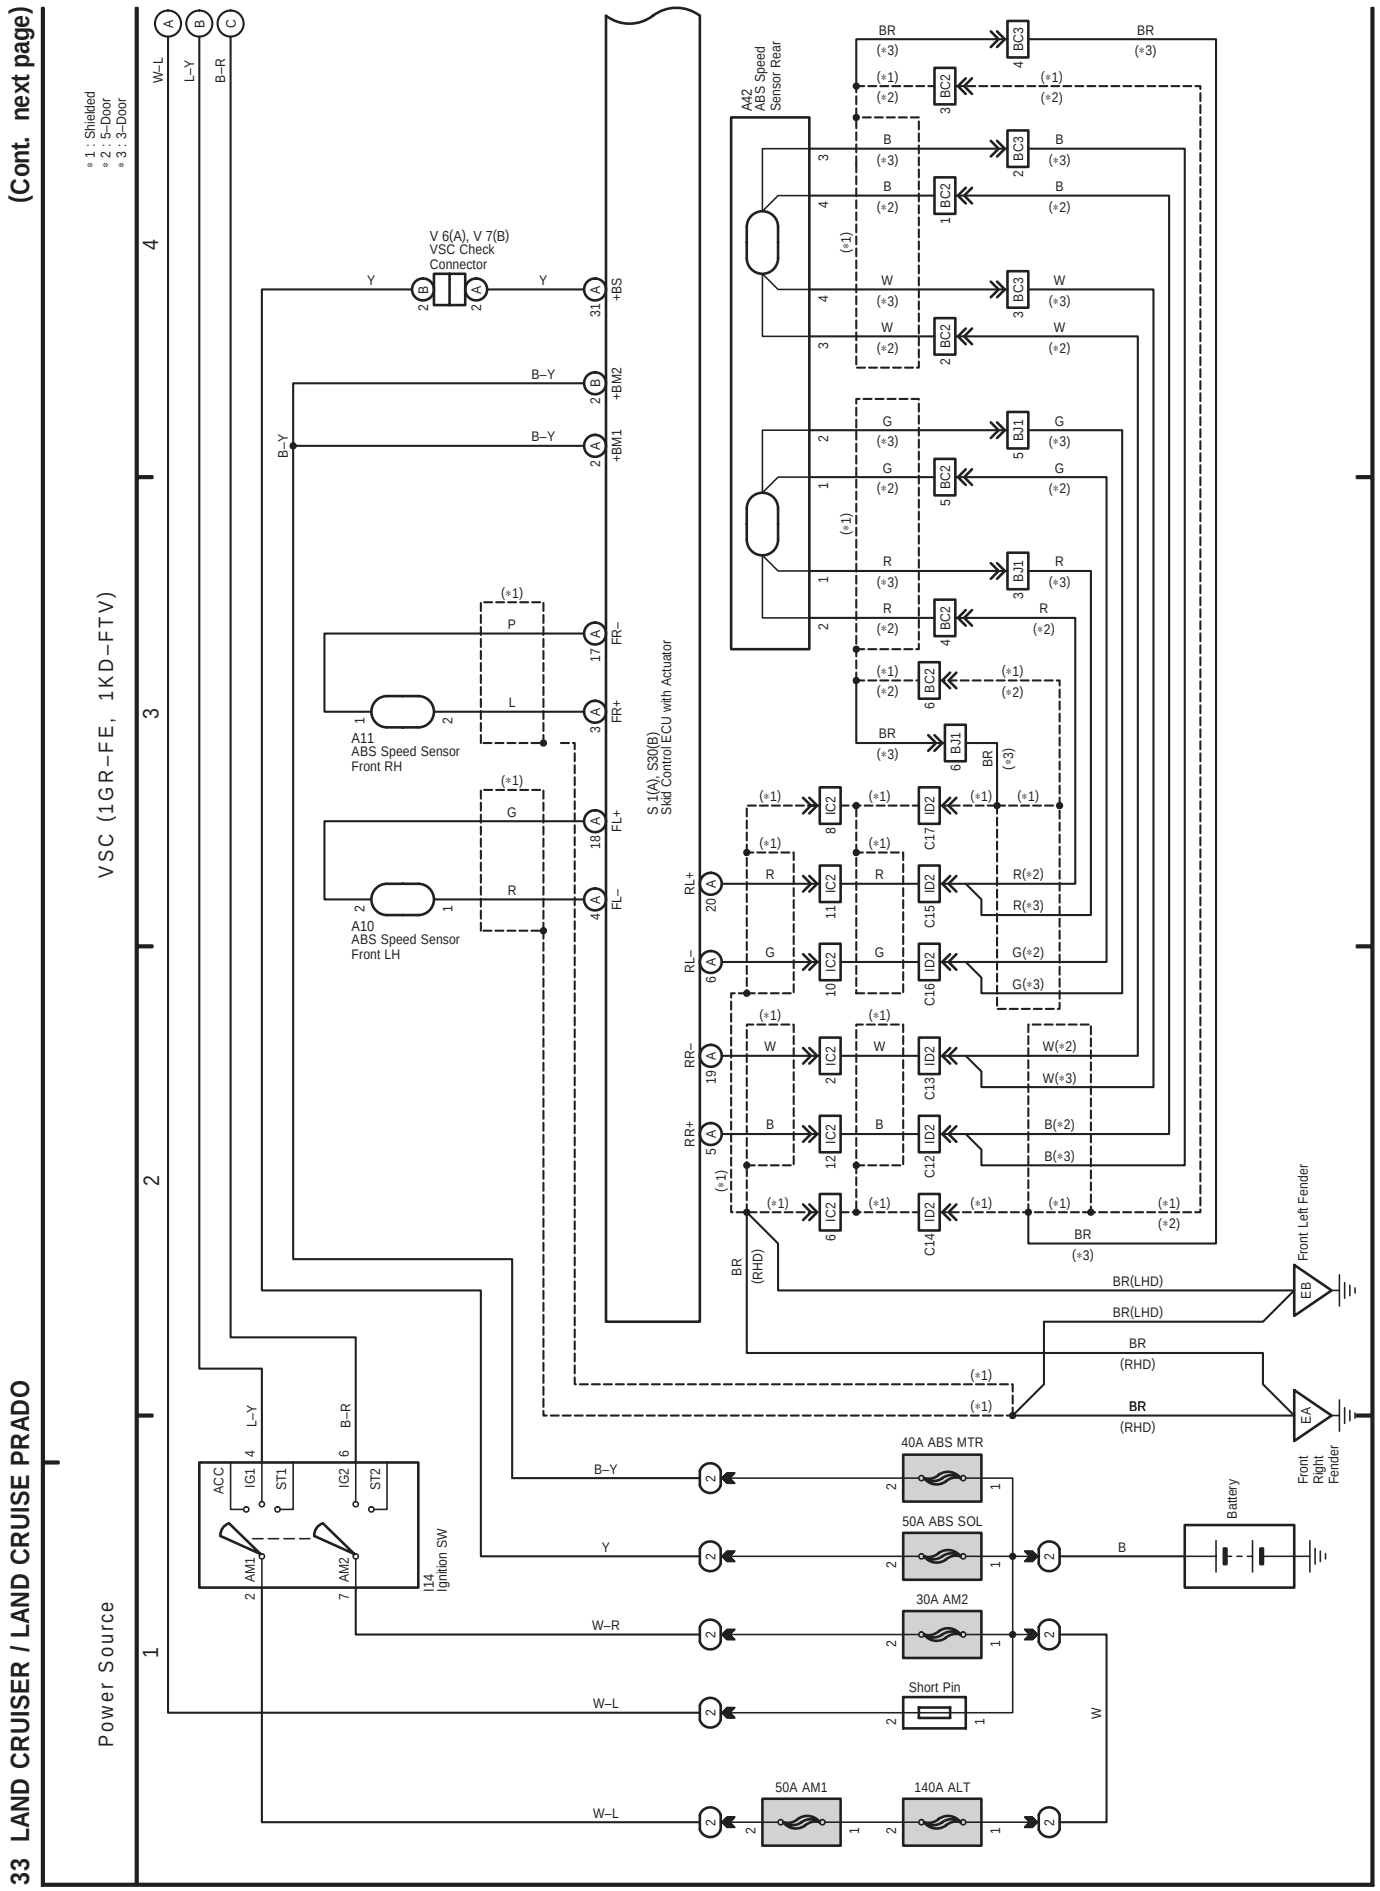
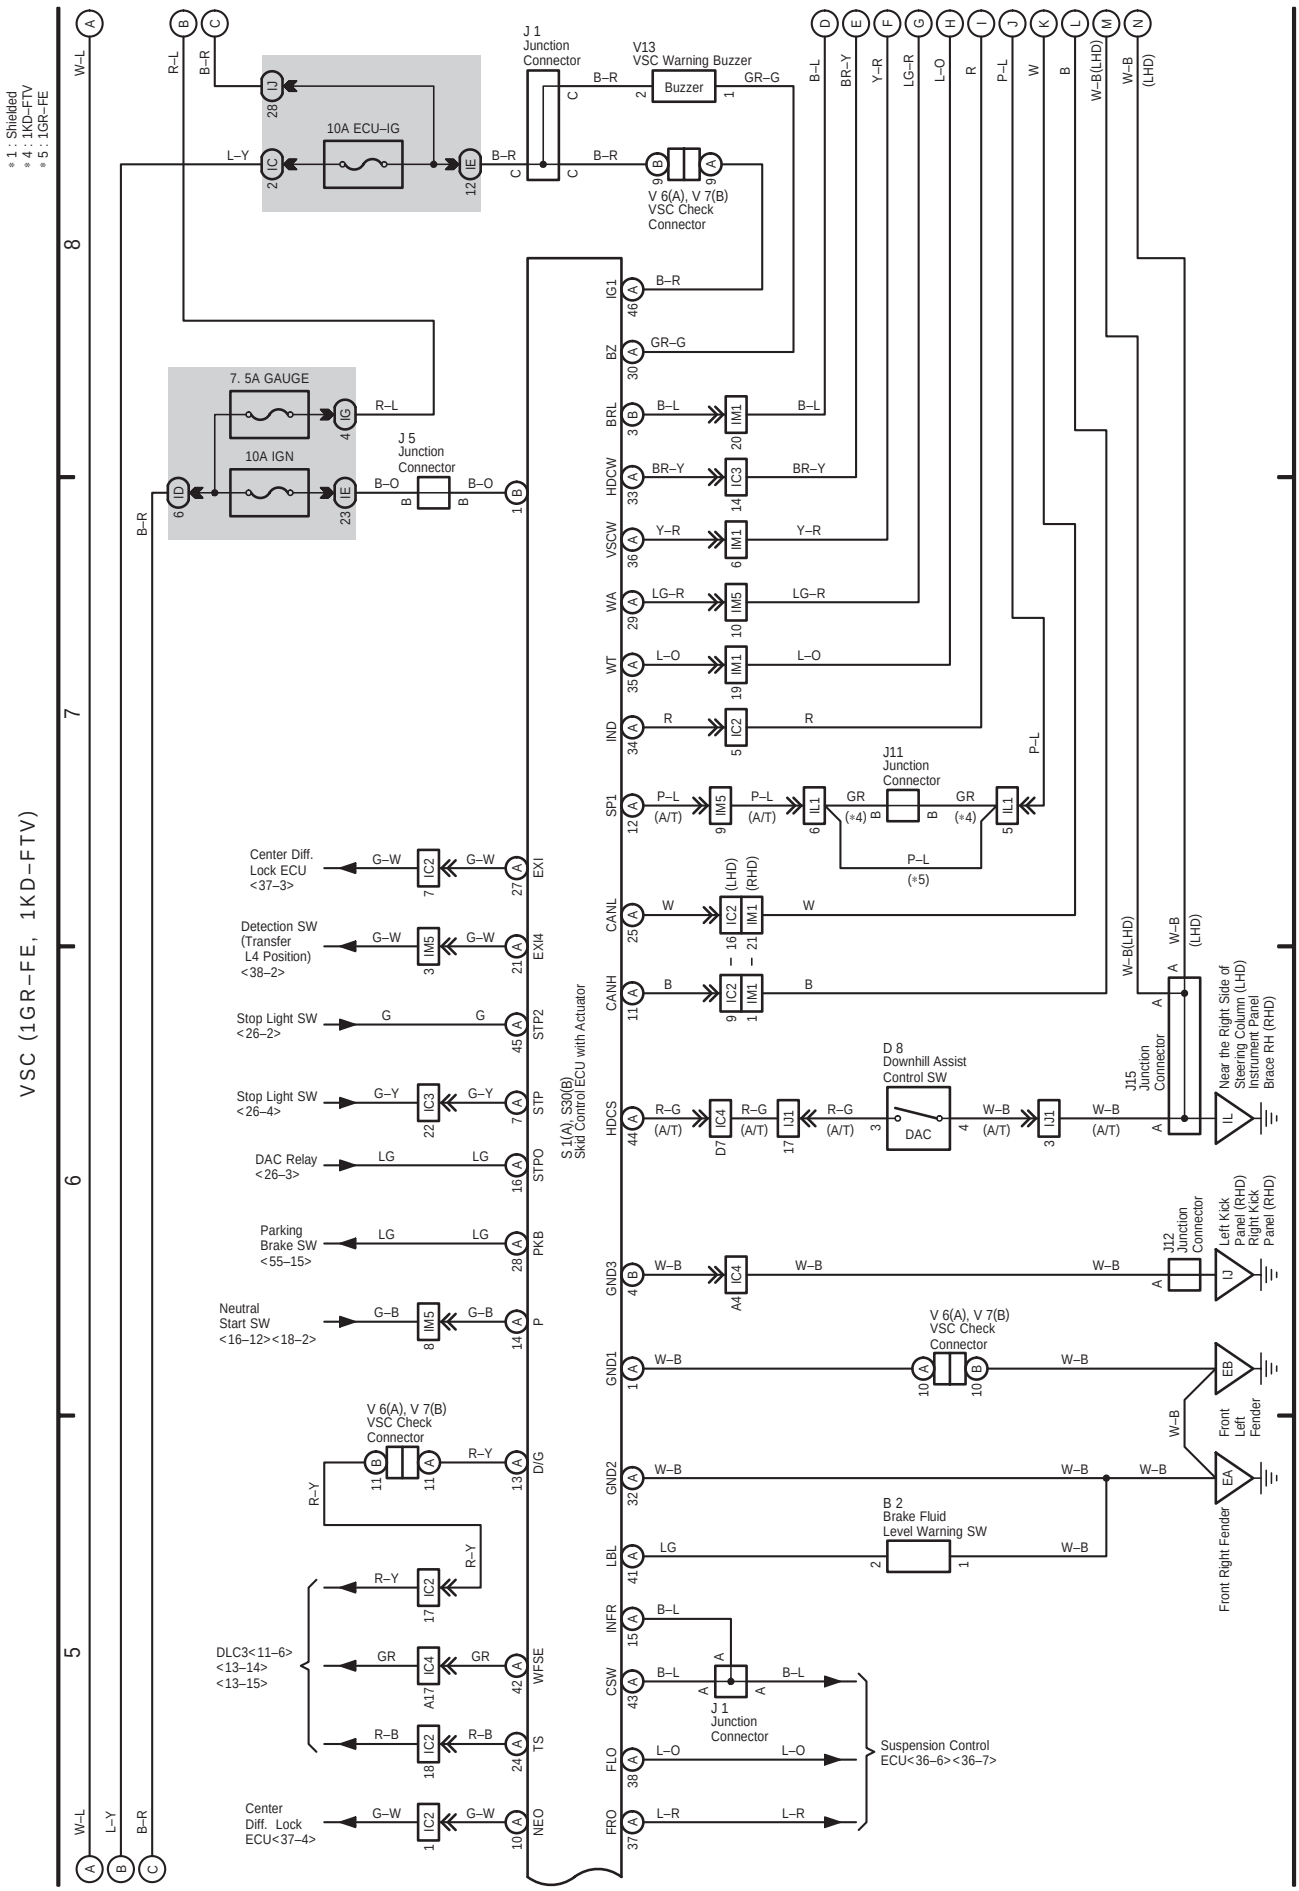
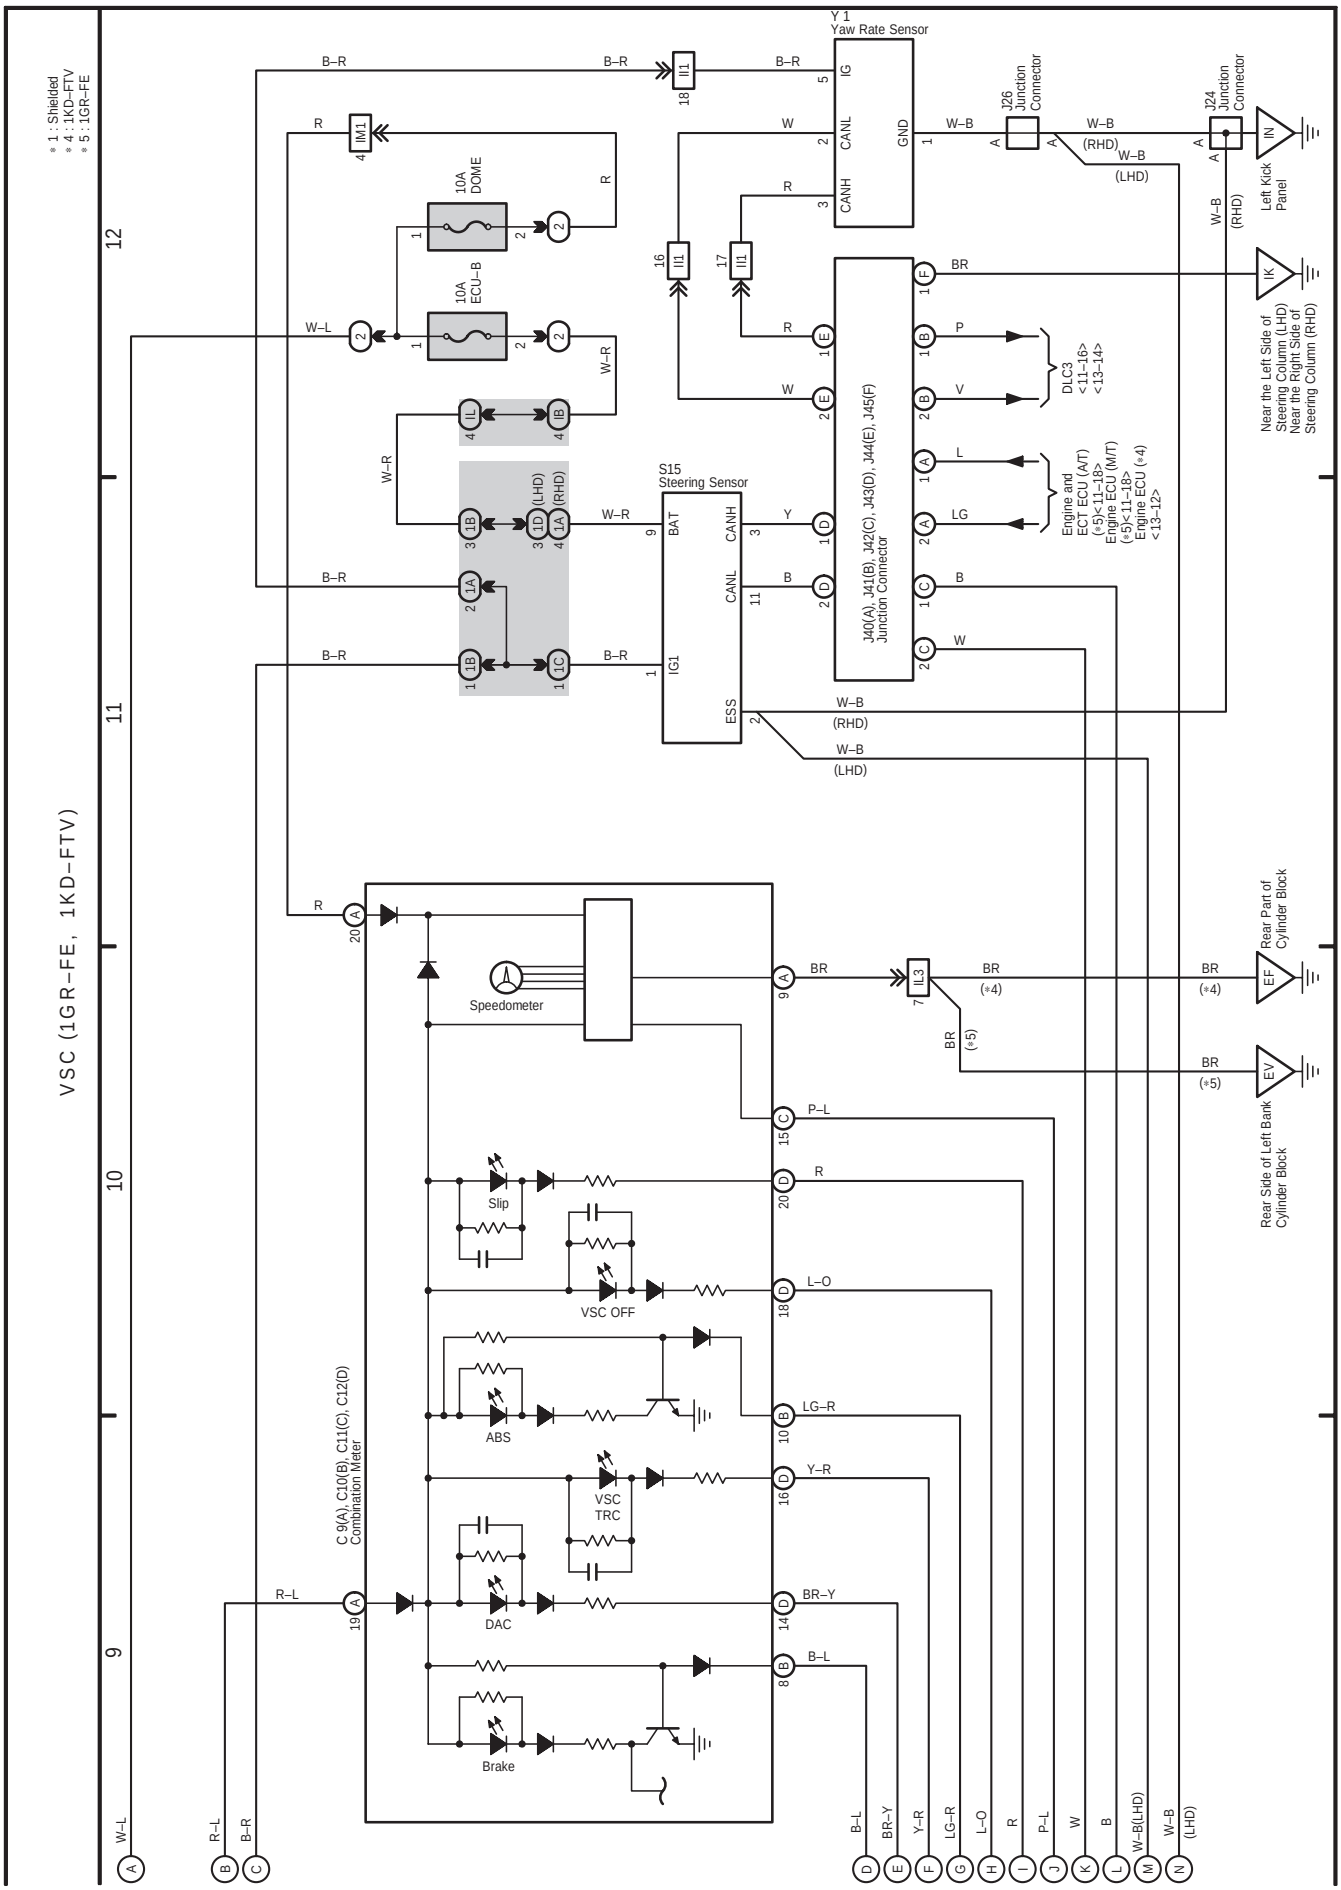

(Cont. next page)
33 LAND CRUISER / LAND CRUISER PRADO
VSC (1GR–FE, 1KD–FTV)
Power Source
*1 : Shielded
*2 : 5–Door
*3 : 3–Door
V 6(A), V 7(B)
VSC Check
Connector
A42
ABS Speed
Sensor Rear
A11
ABS Speed Sensor
Front RH
A10
ABS Speed Sensor
Front LH
S 1(A), S30(B)
Skid Control ECU with Actuator
I14
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
40A ABS MTR
50A ABS SOL
30A AM2
Short Pin
50A AM1
140A ALT
Battery
Front Left Fender
Front Right Fender
+BS
+BM2
+BM1
FR–
FR+
FL+
FL–
RL+
RL–
RR–
RR+

33 LAND CRUISER / LAND CRUISE PRADO (Cont' d)

(Cont. next page)




VSC (1GR-FE, 1KD-FTV)
33 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
* 1 : Shielded
* 4 : 1KD-FTV
* 5 : 1GR-FE
Y 1
Yaw Rate Sensor
J26
Junction
Connector
J24
Junction
Connector
Left Kick
Panel
10A
DOME
10A
ECU-B
S15
Steering Sensor
J40(A), J41(B), J42(C), J43(D), J44(E), J45(F)
Junction Connector
DLC3
<11-16>
<13-14>
Engine and
ECT ECU (A/T)
(*5)<11-18>
Engine ECU (M/T)
(*5)<11-18>
Engine ECU (*4)
<13-12>
Near the Left Side of
Steering Column (LHD)
Near the Right Side of
Steering Column (RHD)
Rear Part of
Cylinder Block
Rear Side of Left Bank
Cylinder Block
Speedometer
Slip
VSC OFF
ABS
VSC
TRC
DAC
Brake
C 9(A), C10(B), C11(C), C12(D)
Combination Meter