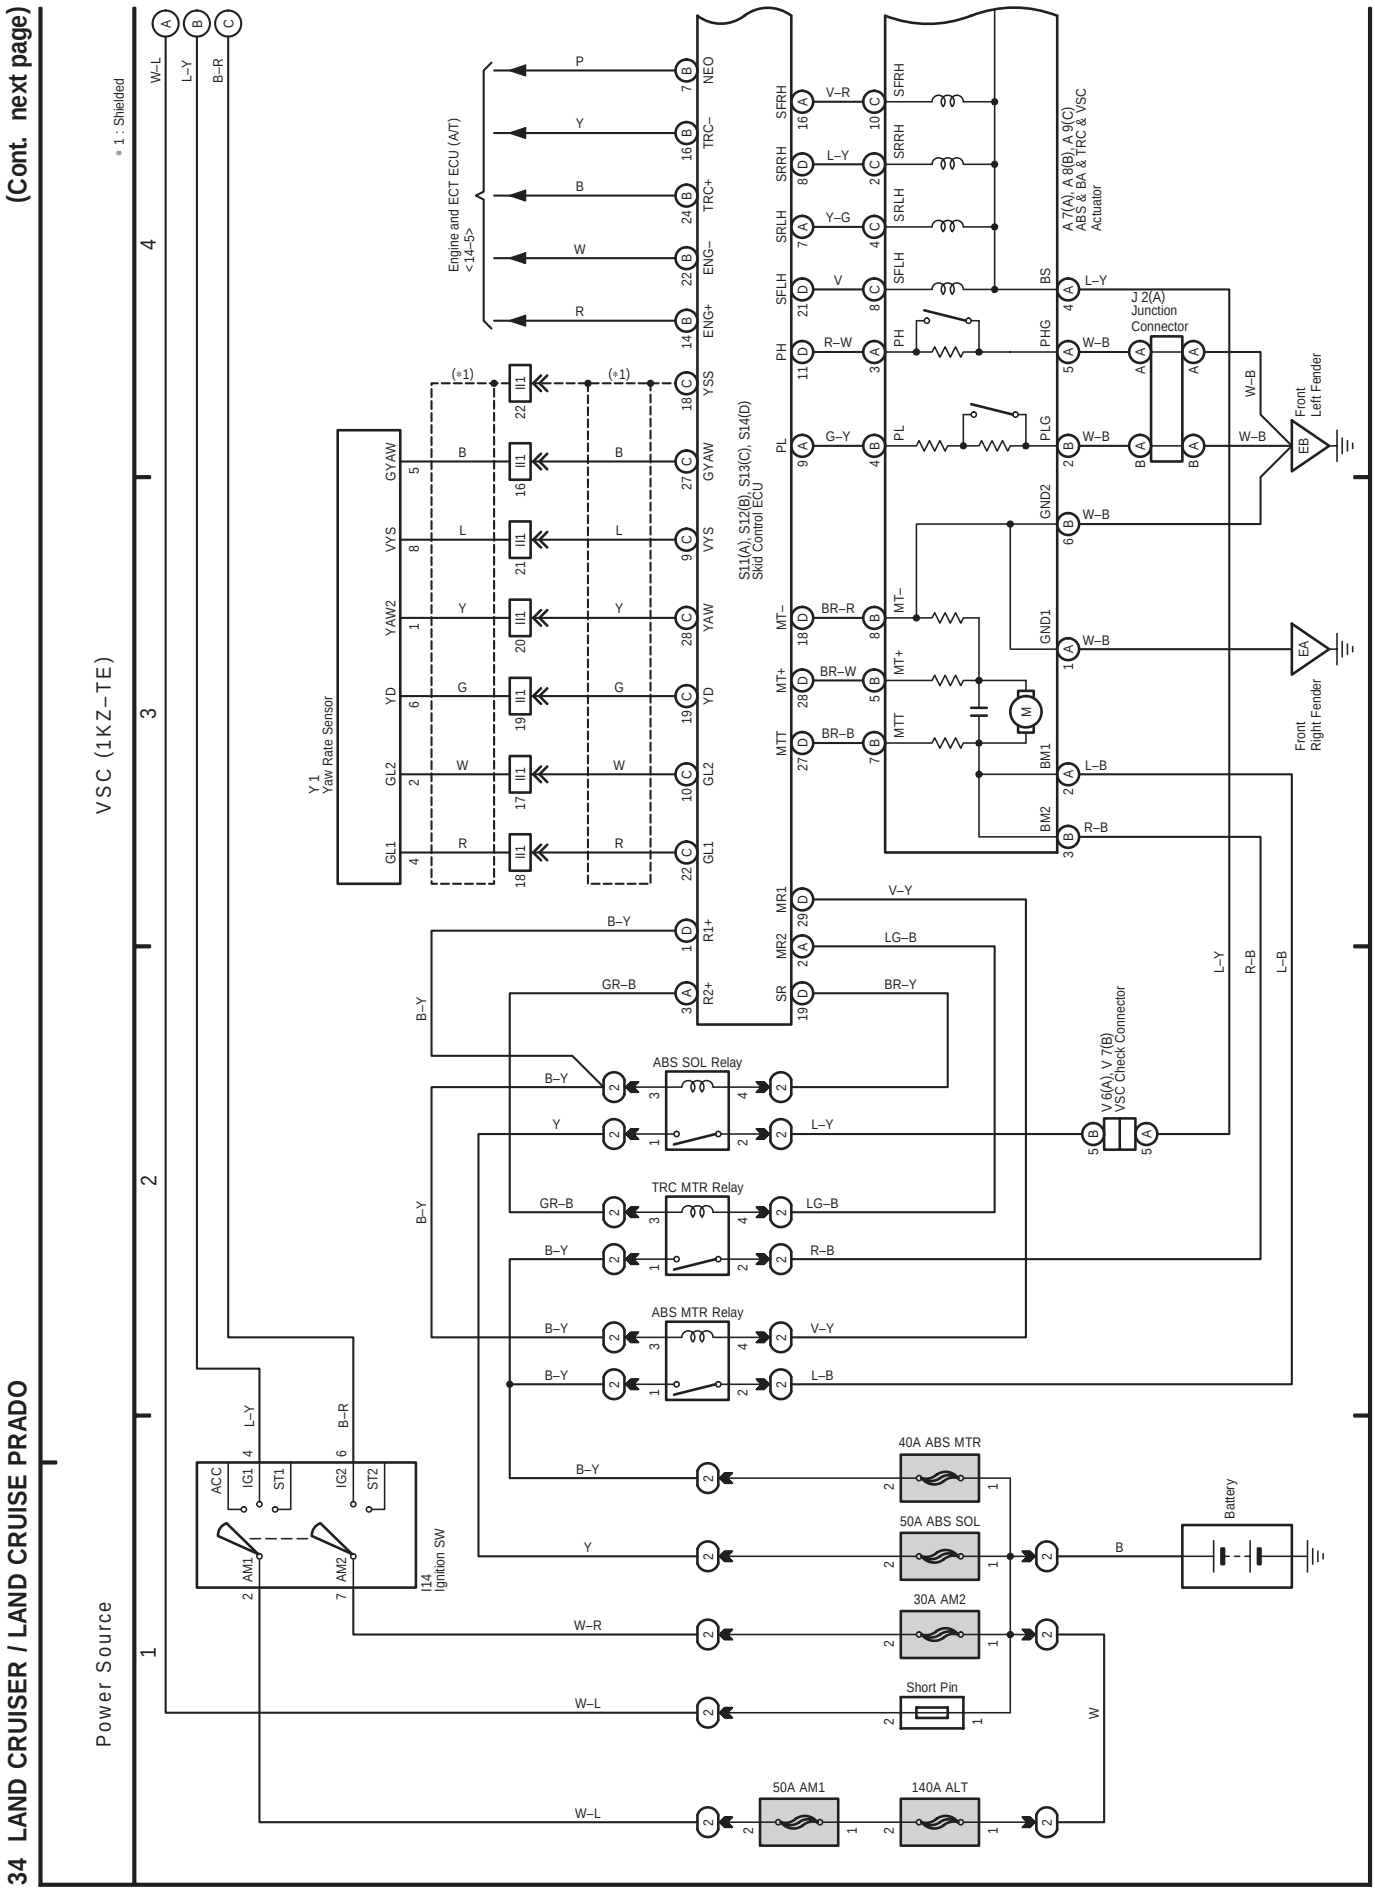
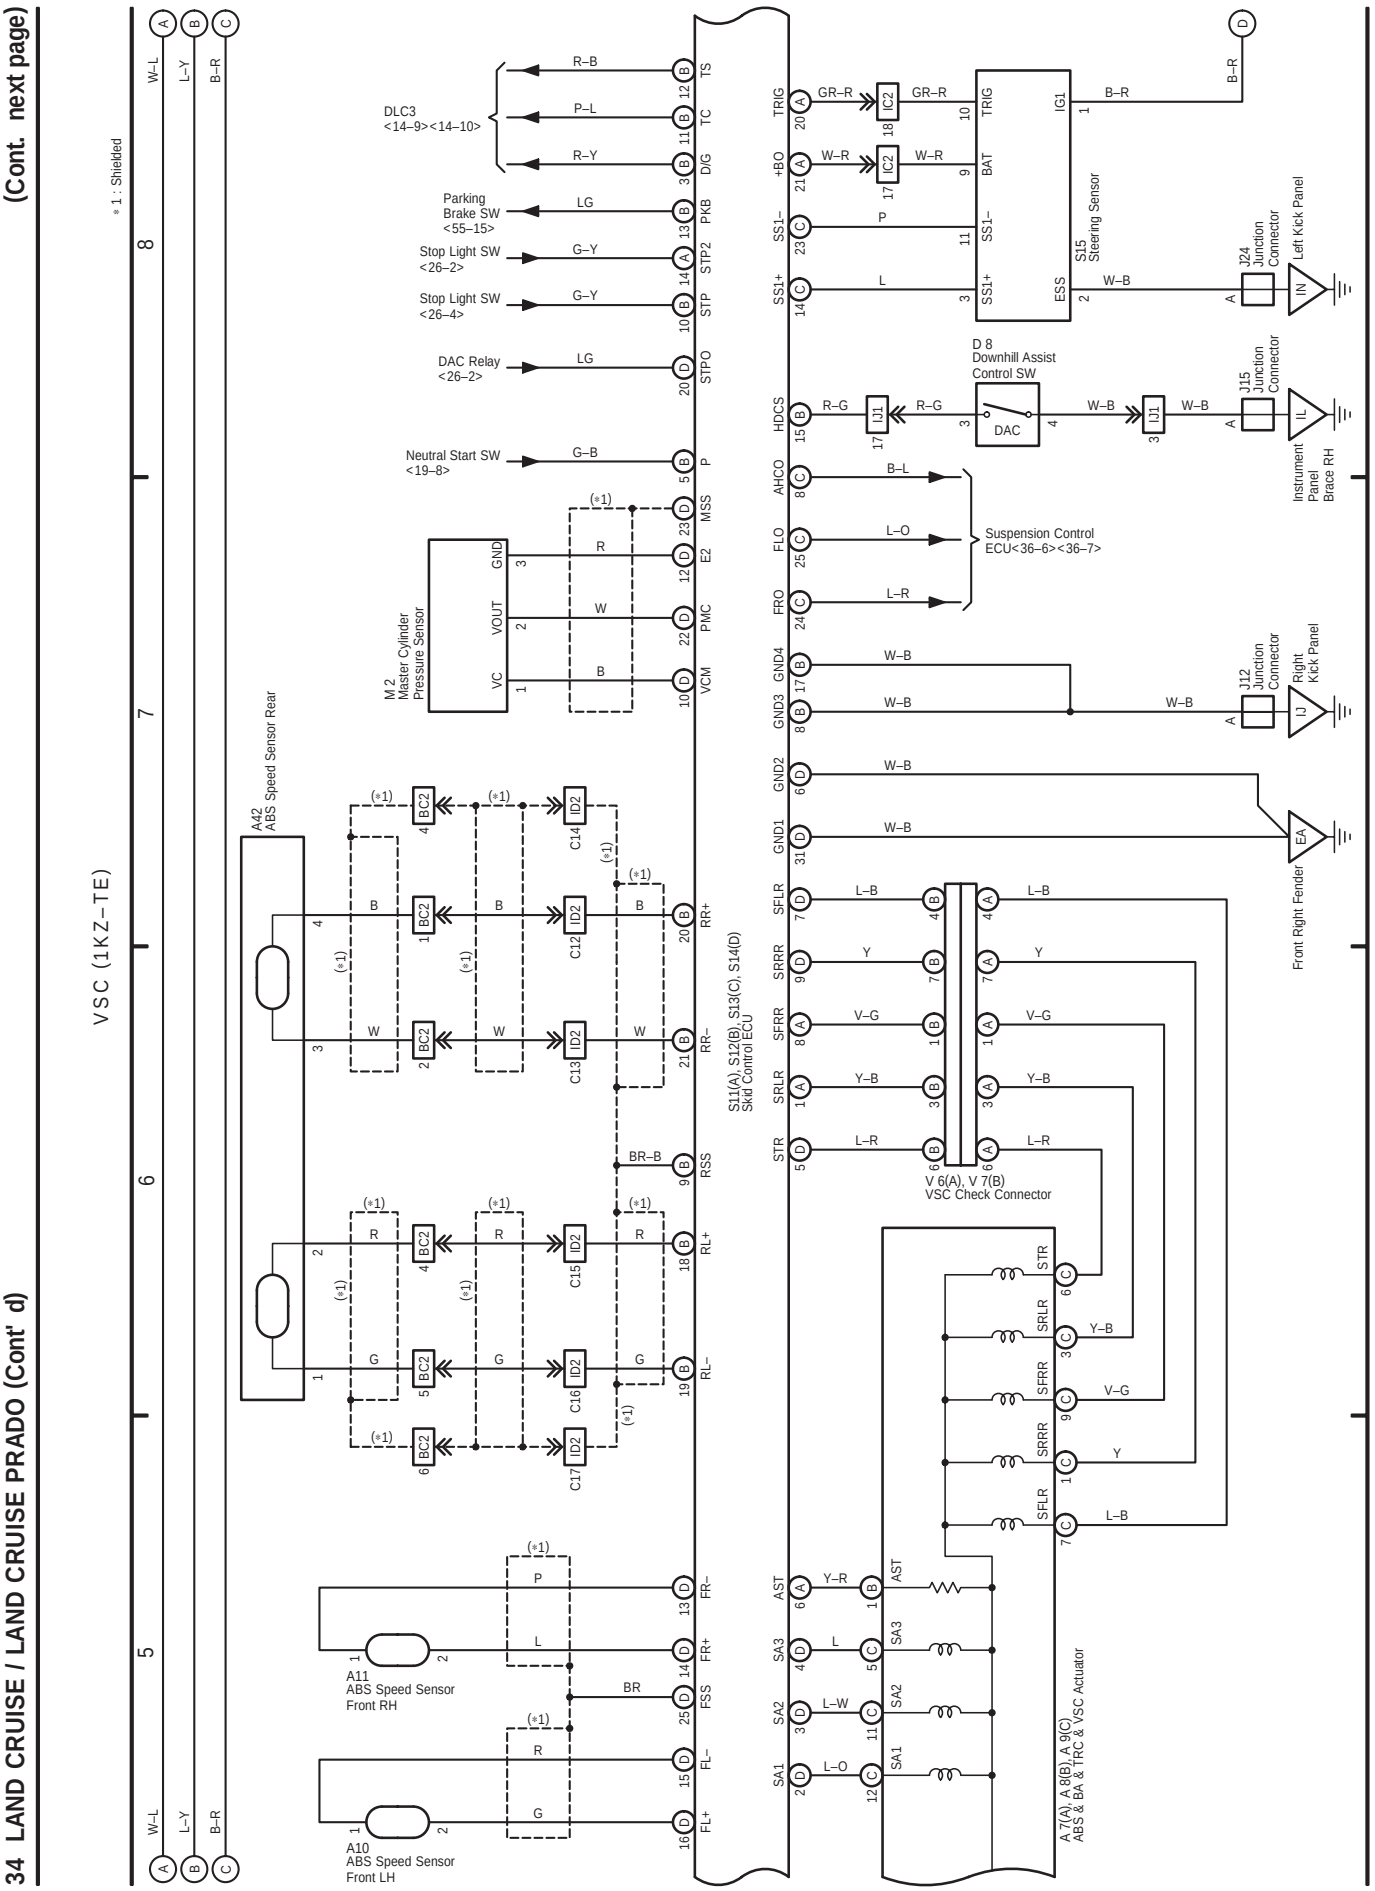

34 LAND CRUISER / LAND CRUISE PRADO
(Cont. next page)
VSC (1KZ-TE)
Power Source
*1 : Shielded
Engine and ECT ECU (A/T) <14-5>
S11(A), S12(B), S13(C), S14(D) Skid Control ECU
A 7(A), A 8(B), A 9(C) ABS & BA & TRC & VSC Actuator
J 2(A) Junction Connector
Front Left Fender
Front Right Fender
Y 1 Yaw Rate Sensor
ABS SOL Relay
TRC MTR Relay
ABS MTR Relay
V 6(A), V 7(B) VSC Check Connector
I14 Ignition SW
40A ABS MTR
50A ABS SOL
30A AM2
Short Pin
50A AM1
140A ALT
Battery


(Cont. next page)
34 LAND CRUISE / LAND CRUISE PRADO (Cont' d)
VSC (1KZ–TE)
*1 : Shielded
DLC3 <14–9><14–10>
Parking Brake SW <55–15>
Stop Light SW <26–2>
Stop Light SW <26–4>
DAC Relay <26–2>
Neutral Start SW <19–8>
M 2 Master Cylinder Pressure Sensor
A42 ABS Speed Sensor Rear
A11 ABS Speed Sensor Front RH
A10 ABS Speed Sensor Front LH
S11(A), S12(B), S13(C), S14(D) Skid Control ECU
S15 Steering Sensor
D 8 Downhill Assist Control SW
DAC
Suspension Control ECU<36–6><36–7>
V 6(A), V 7(B) VSC Check Connector
A 7(A), A 8(B), A 9(C) ABS & BA & TRC & VSC Actuator
J24 Junction Connector
Left Kick Panel
J15 Junction Connector
Instrument Panel Brace RH
J12 Junction Connector
Right Kick Panel
Front Right Fender

34 LAND CRUISER / LAND CRUISE PRADO (Cont' d)

