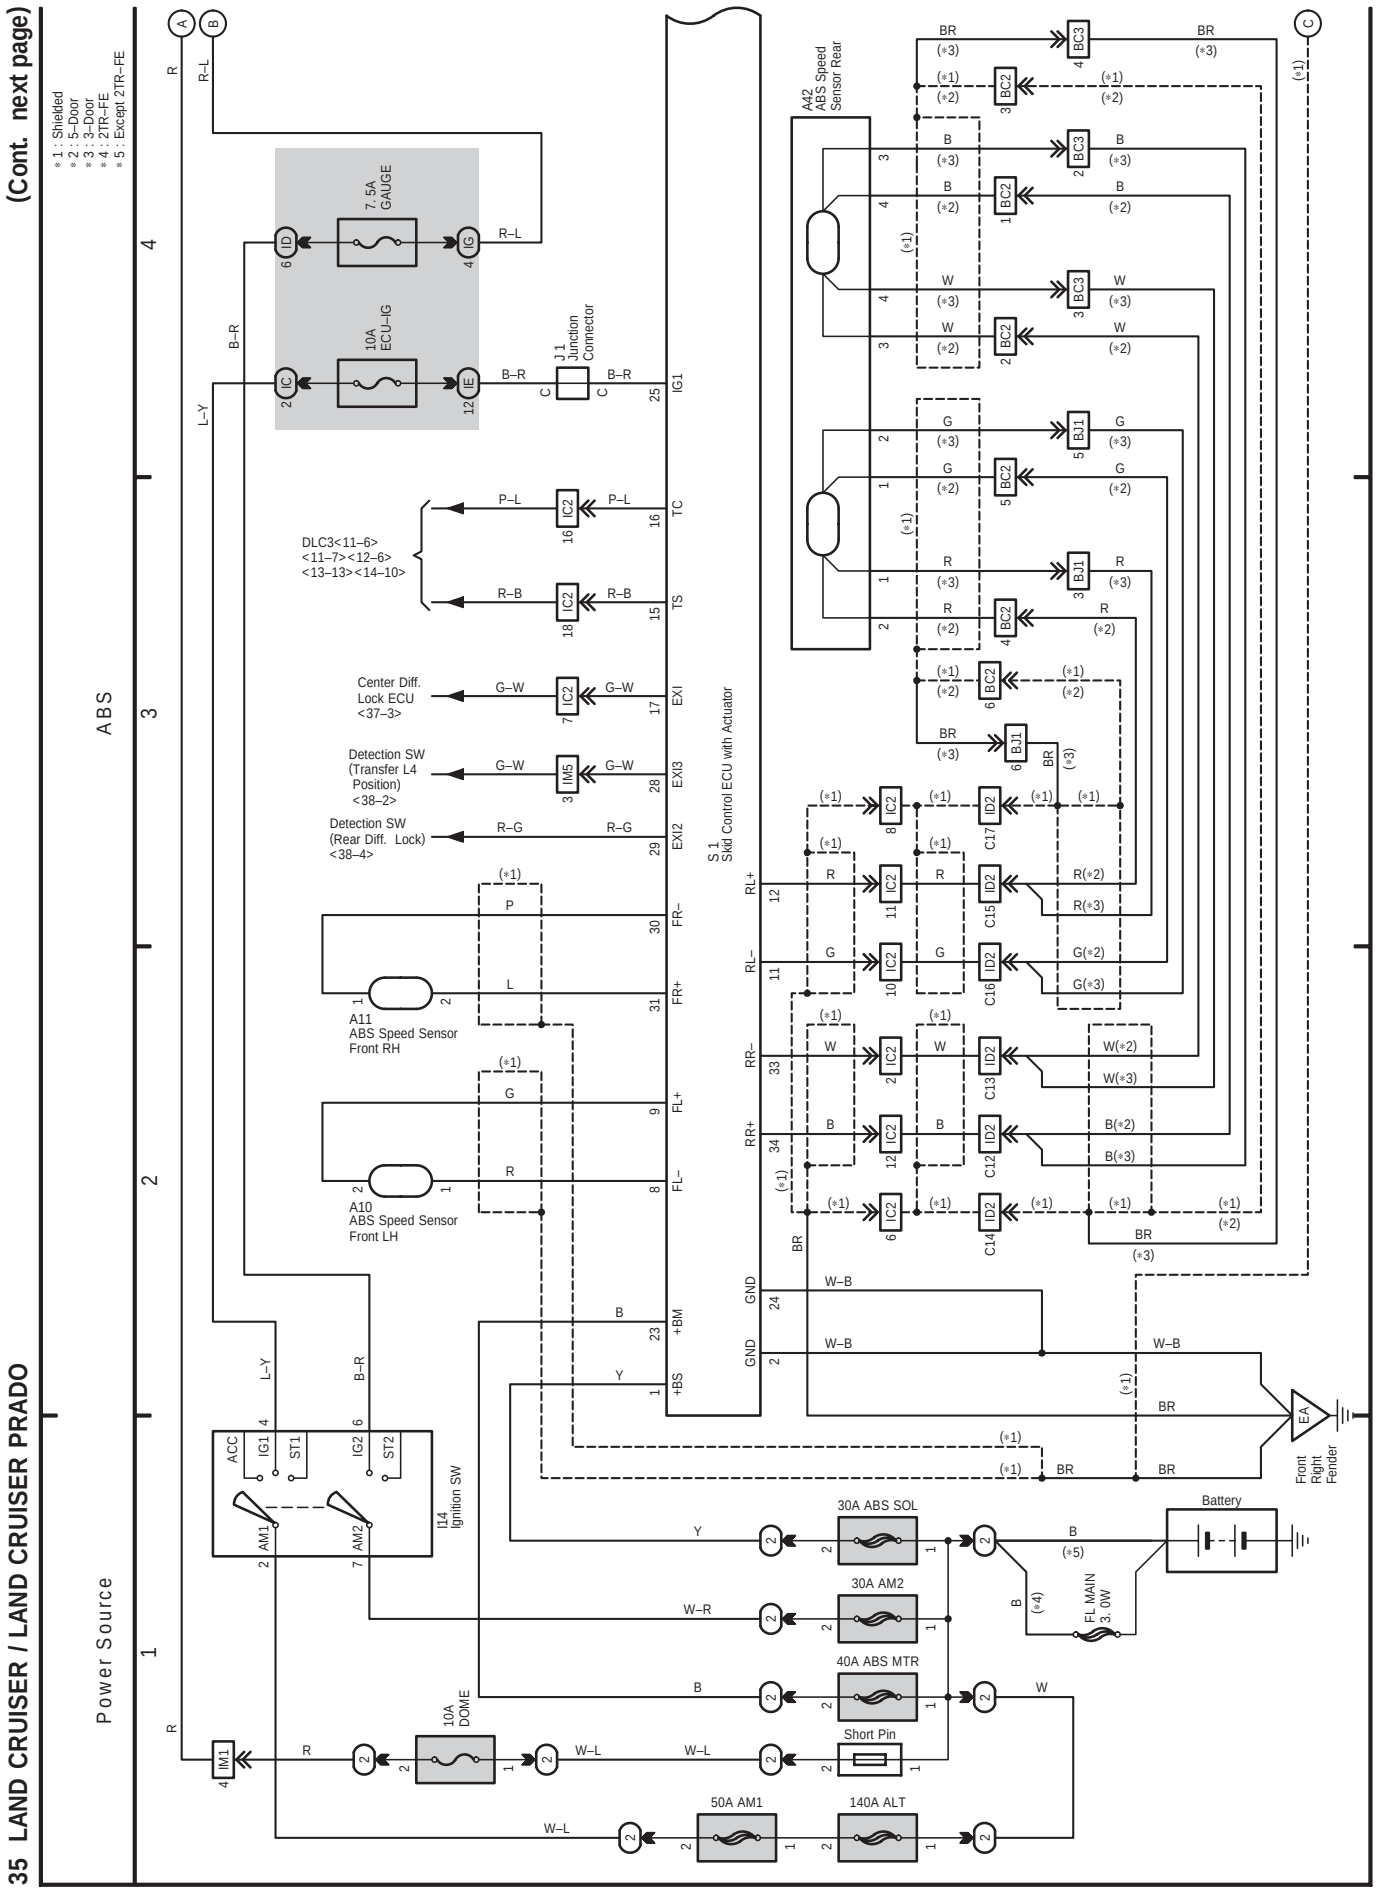

(Cont. next page)
* 1 : Shielded
* 2 : 5–Door
* 3 : 3–Door
* 4 : 2TR–FE
* 5 : Except 2TR–FE
35 LAND CRUISER / LAND CRUISER PRADO
Power Source
ABS
7.5A GAUGE
10A ECU–IG
J1 Junction Connector
DLC3<11–6> <11–7><12–6> <13–13><14–10>
Center Diff. Lock ECU <37–3>
Detection SW (Transfer L4 Position) <38–2>
Detection SW (Rear Diff. Lock) <38–4>
A11 ABS Speed Sensor Front RH
A10 ABS Speed Sensor Front LH
A42 ABS Speed Sensor Rear
S1 Skid Control ECU with Actuator
I14 Ignition SW
10A DOME
30A ABS SOL
30A AM2
40A ABS MTR
50A AM1
140A ALT
Short Pin
Battery
FL MAIN 3.0W
Front Right Fender
IG1
TC
TS
EXI
EXI3
EXI2
FR–
FR+
FL+
FL–
+BM
+BS
RL+
RL–
RR–
RR+
GND

35 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

