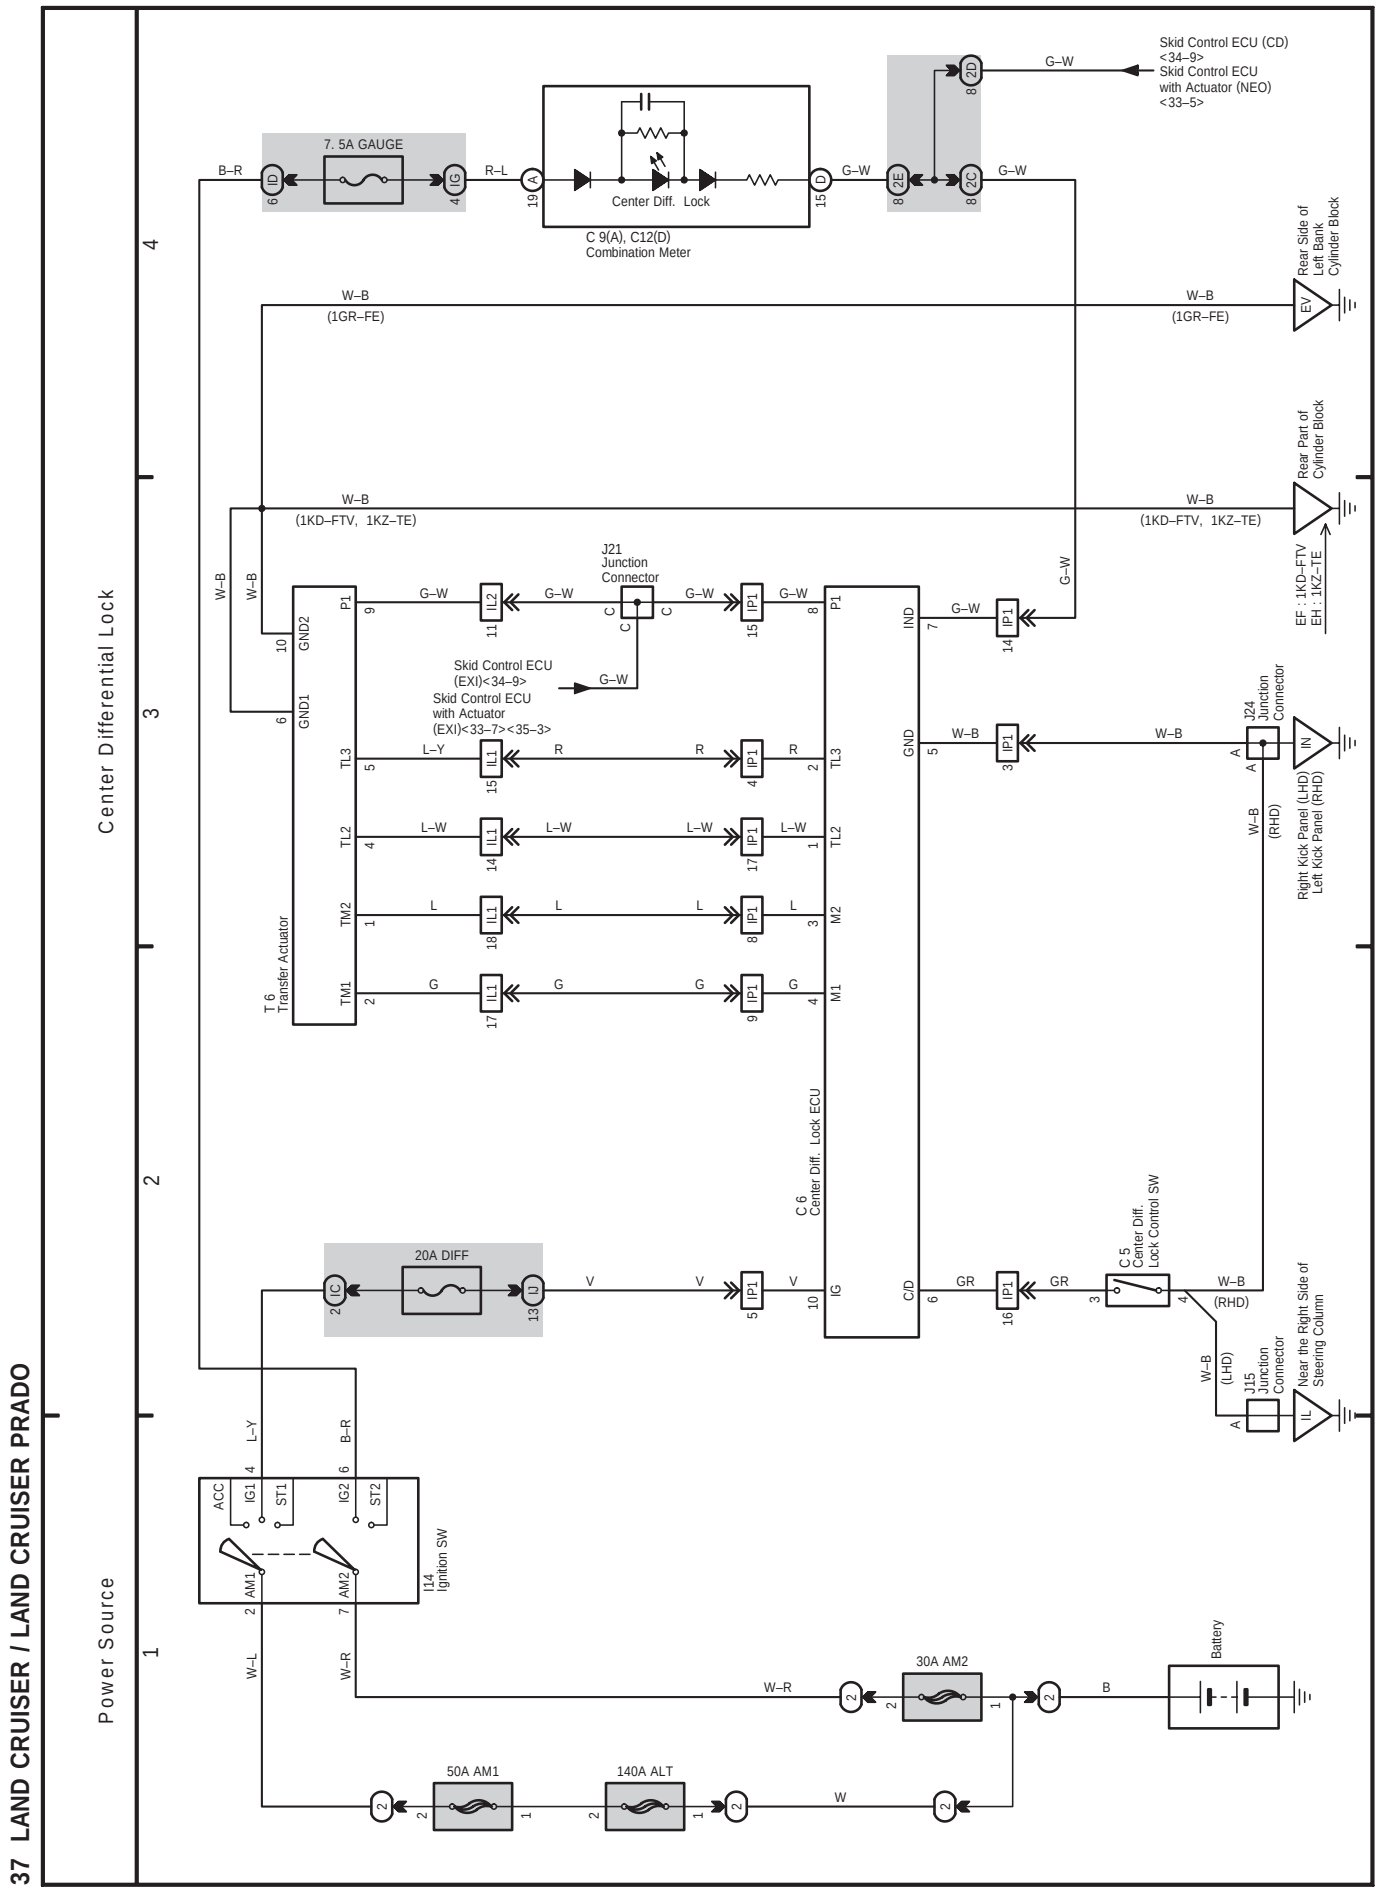

37 LAND CRUISER / LAND CRUISER PRADO
Power Source
Center Differential Lock
1
2
3
4
7. 5A GAUGE
Center Diff. Lock
C 9(A), C12(D)
Combination Meter
Skid Control ECU (CD)
<34–9>
Skid Control ECU
with Actuator (NEO)
<33–5>
Rear Side of
Left Bank
Cylinder Block
Rear Part of
Cylinder Block
EF : 1KD–FTV
EH : 1KZ–TE
J21
Junction
Connector
Skid Control ECU
(EXI)<34–9>
Skid Control ECU
with Actuator
(EXI)<33–7><35–3>
T 6
Transfer Actuator
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
C 6
Center Diff. Lock ECU
C 5
Center Diff.
Lock Control SW
20A DIFF
J15
Junction
Connector
Near the Right Side of
Steering Column
I14
Ignition SW
ACC
IG1
ST1
IG2
ST2
30A AM2
50A AM1
140A ALT
Battery
W–B
(1GR–FE)
W–B
(1KD–FTV, 1KZ–TE)
G–W
R–L
B–R
L–Y
B–R
W–L
W–R
V
L–W
L
G
R
GR
W
B