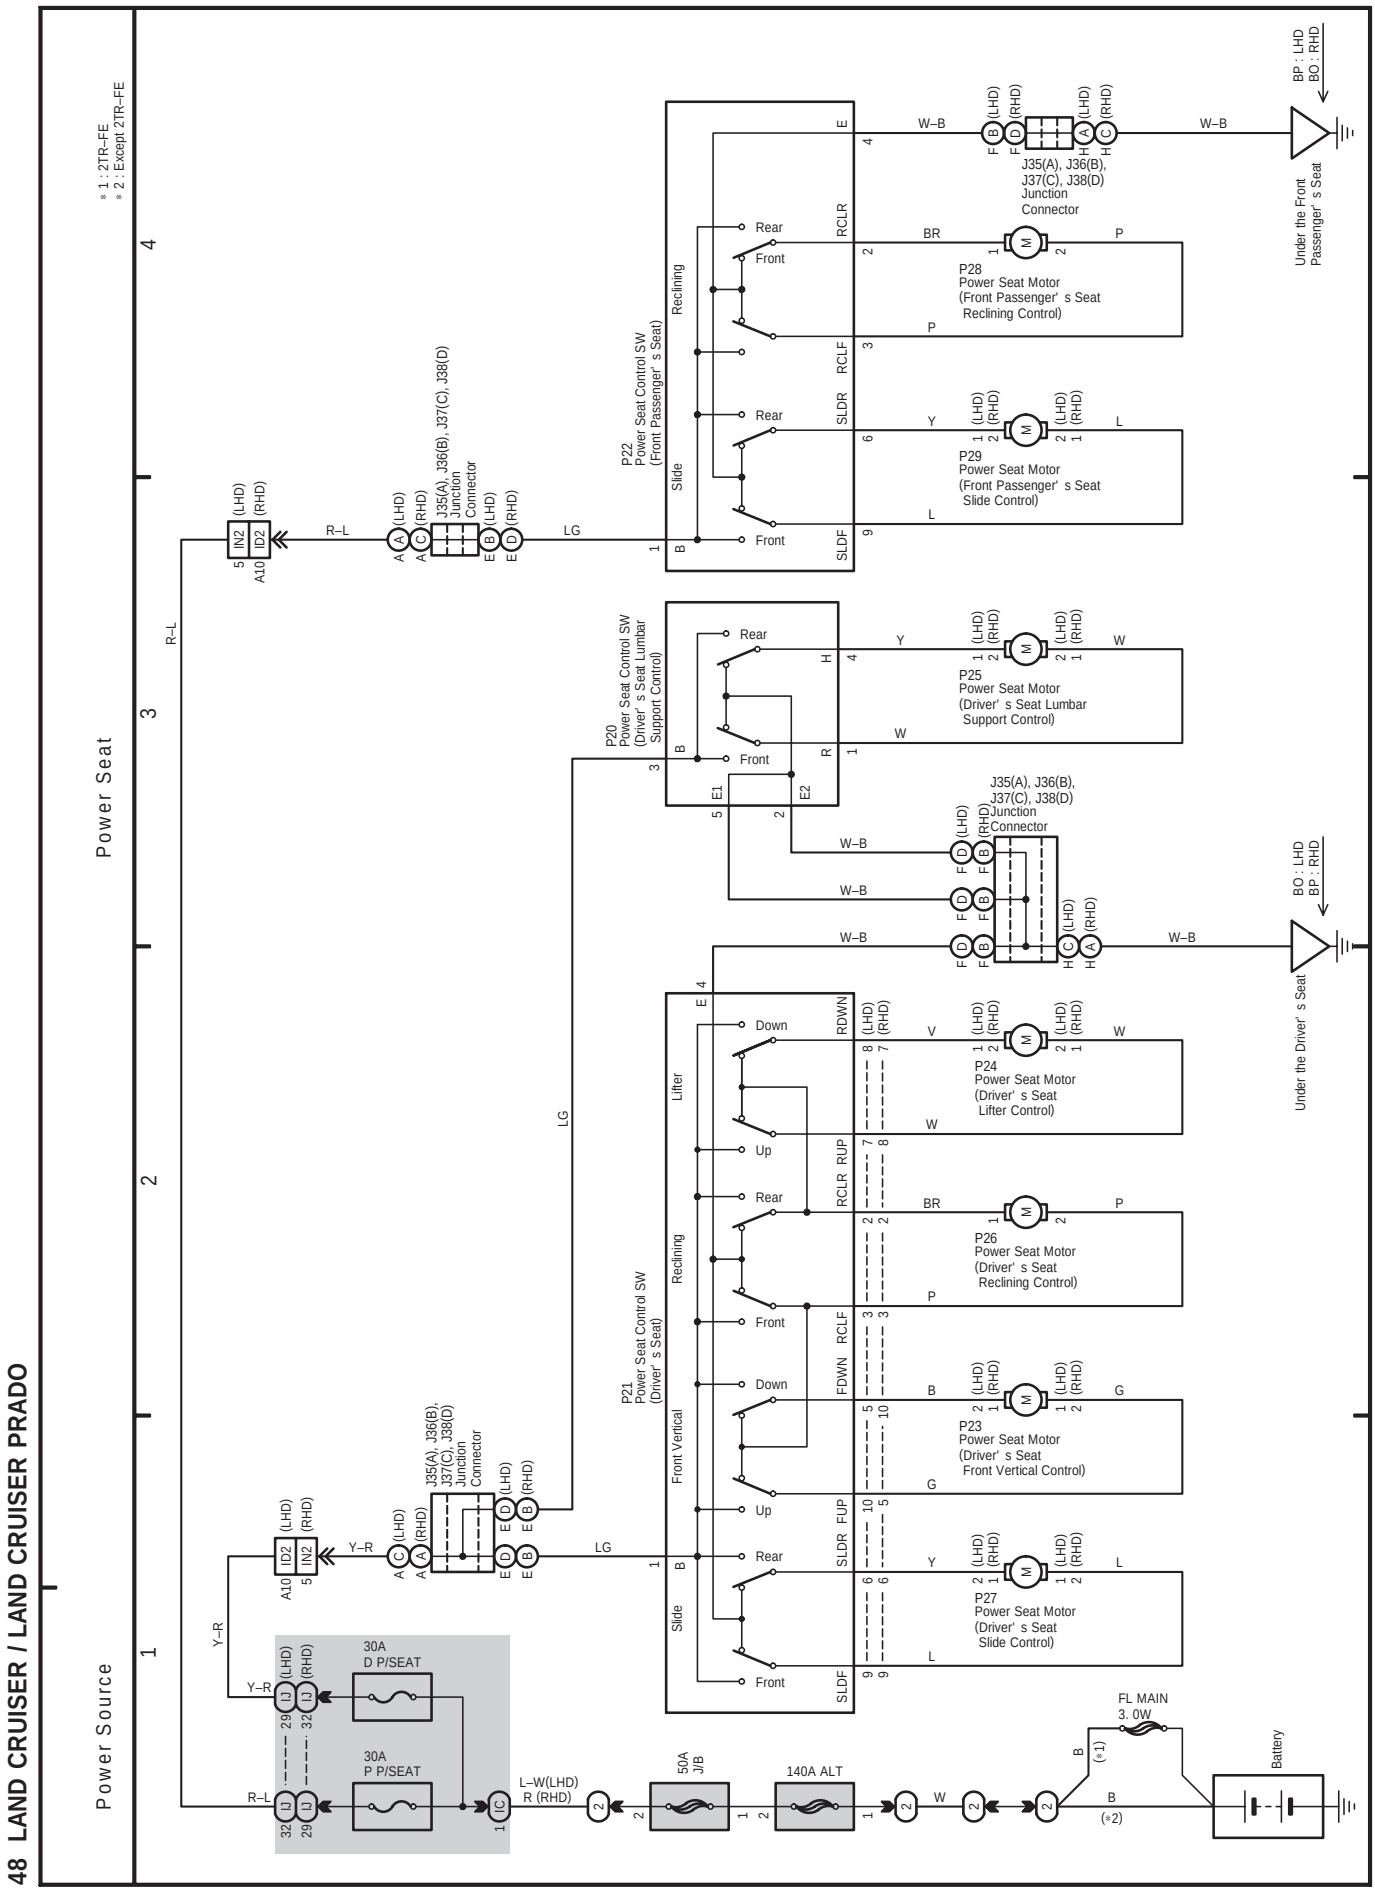

48 LAND CRUISER / LAND CRUISER PRADO
Power Source
Power Seat
1
2
3
4
* 1 : 2TR–FE
* 2 : Except 2TR–FE
P20 Power Seat Control SW (Driver' s Seat Lumbar Support Control)
P21 Power Seat Control SW (Driver' s Seat)
P22 Power Seat Control SW (Front Passenger' s Seat)
P23 Power Seat Motor (Driver' s Seat Front Vertical Control)
P24 Power Seat Motor (Driver' s Seat Lifter Control)
P25 Power Seat Motor (Driver' s Seat Lumbar Support Control)
P26 Power Seat Motor (Driver' s Seat Reclining Control)
P27 Power Seat Motor (Driver' s Seat Slide Control)
P28 Power Seat Motor (Front Passenger' s Seat Reclining Control)
P29 Power Seat Motor (Front Passenger' s Seat Slide Control)
J35(A), J36(B), J37(C), J38(D) Junction Connector
Under the Driver' s Seat
Under the Front Passenger' s Seat
BP : LHD
BO : RHD
BO : LHD
BP : RHD
30A D P/SEAT
30A P P/SEAT
50A J/B
140A ALT
FL MAIN
3. 0W
Battery
Reclining
Slide
Lifter
Front Vertical
Rear
Front
Up
Down
R–L
Y–R
LG
W–B
L–W(LHD)
R (RHD)