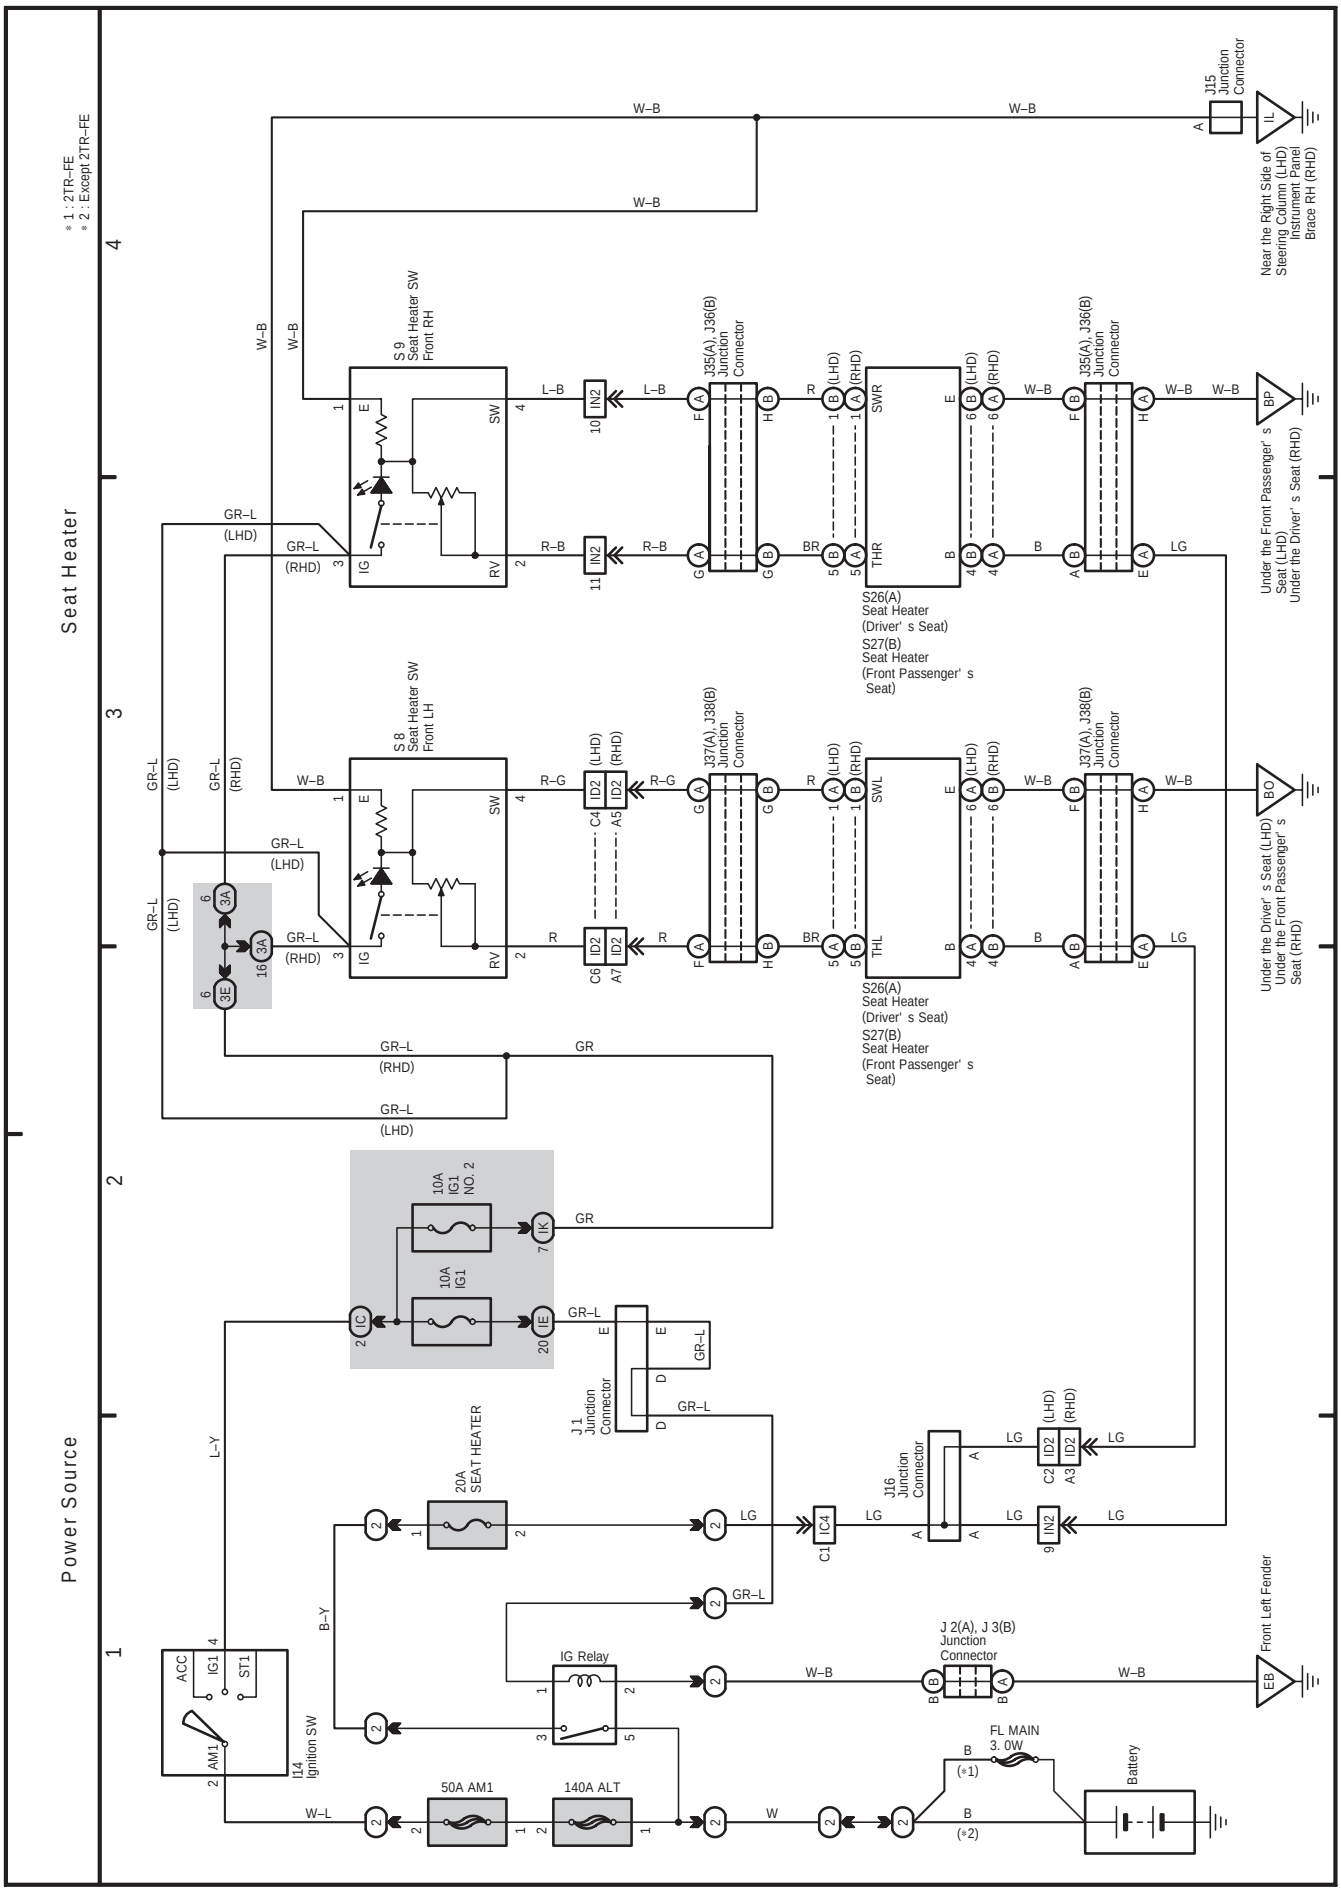

49 LAND CRUISER / LAND CRUISER PRADO
Power Source
Seat Heater
1
2
3
4
* 1 : 2TR–FE
* 2 : Except 2TR–FE
J15 Junction Connector
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
S 9 Seat Heater SW Front RH
S 8 Seat Heater SW Front LH
J35(A), J36(B) Junction Connector
J37(A), J38(B) Junction Connector
S26(A) Seat Heater (Driver' s Seat)
S27(B) Seat Heater (Front Passenger' s Seat)
Under the Front Passenger' s Seat (LHD) Under the Driver' s Seat (RHD)
Under the Driver' s Seat (LHD) Under the Front Passenger' s Seat (RHD)
10A IG1 NO. 2
10A IG1
20A SEAT HEATER
J1 Junction Connector
J16 Junction Connector
J 2(A), J 3(B) Junction Connector
IG Relay
I14 Ignition SW
ACC
IG1
ST1
AM1
50A AM1
140A ALT
FL MAIN 3. 0W
Battery
Front Left Fender
W–B
L–B
R–B
R–G
R
BR
B
LG
GR
GR–L (LHD)
GR–L (RHD)
L–Y
B–Y
W–L
W