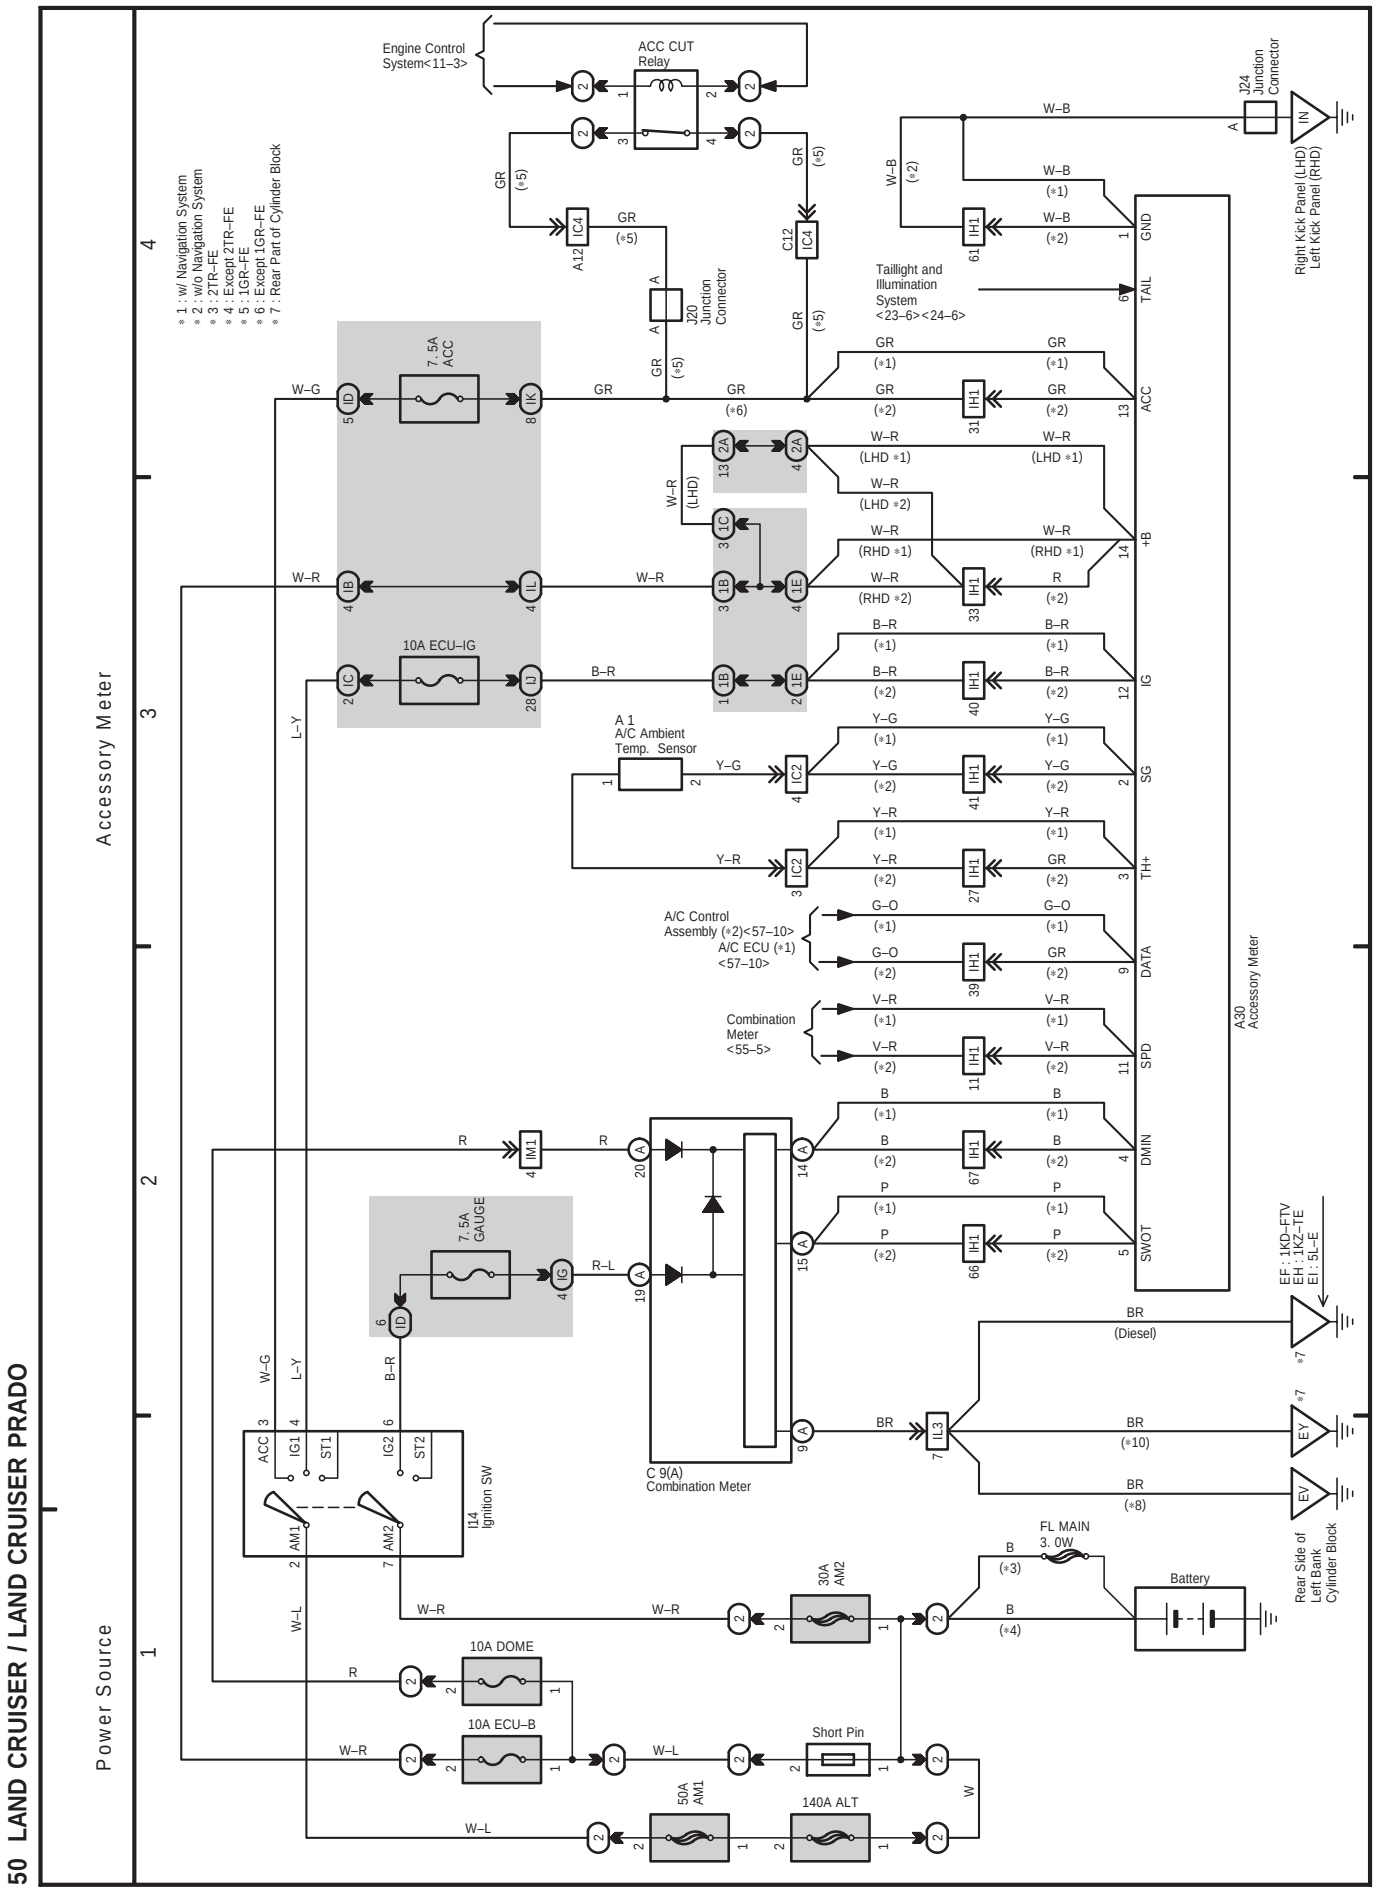

50 LAND CRUISER / LAND CRUISER PRADO
Power Source
Accessory Meter
1
2
3
4
＊1 : w/ Navigation System
＊2 : w/o Navigation System
＊3 : 2TR–FE
＊4 : Except 2TR–FE
＊5 : 1GR–FE
＊6 : Except 1GR–FE
＊7 : Rear Part of Cylinder Block
Engine Control System<11–3>
ACC CUT Relay
J24 Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
Taillight and Illumination System <23–6><24–6>
J20 Junction Connector
7.5A ACC
10A ECU–IG
A 1 A/C Ambient Temp. Sensor
A/C Control Assembly (＊2)<57–10>
A/C ECU (＊1) <57–10>
Combination Meter <55–5>
A30 Accessory Meter
GND
TAIL
ACC
+B
IG
SG
TH+
DATA
SPD
DMIN
SWOT
7.5A GAUGE
C 9(A) Combination Meter
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
BR (Diesel)
BR (＊10)
BR (＊8)
EY
EV
Rear Side of Left Bank Cylinder Block
J14 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
FL MAIN 3. 0W
30A AM2
Battery
10A DOME
10A ECU–B
Short Pin
50A AM1
140A ALT