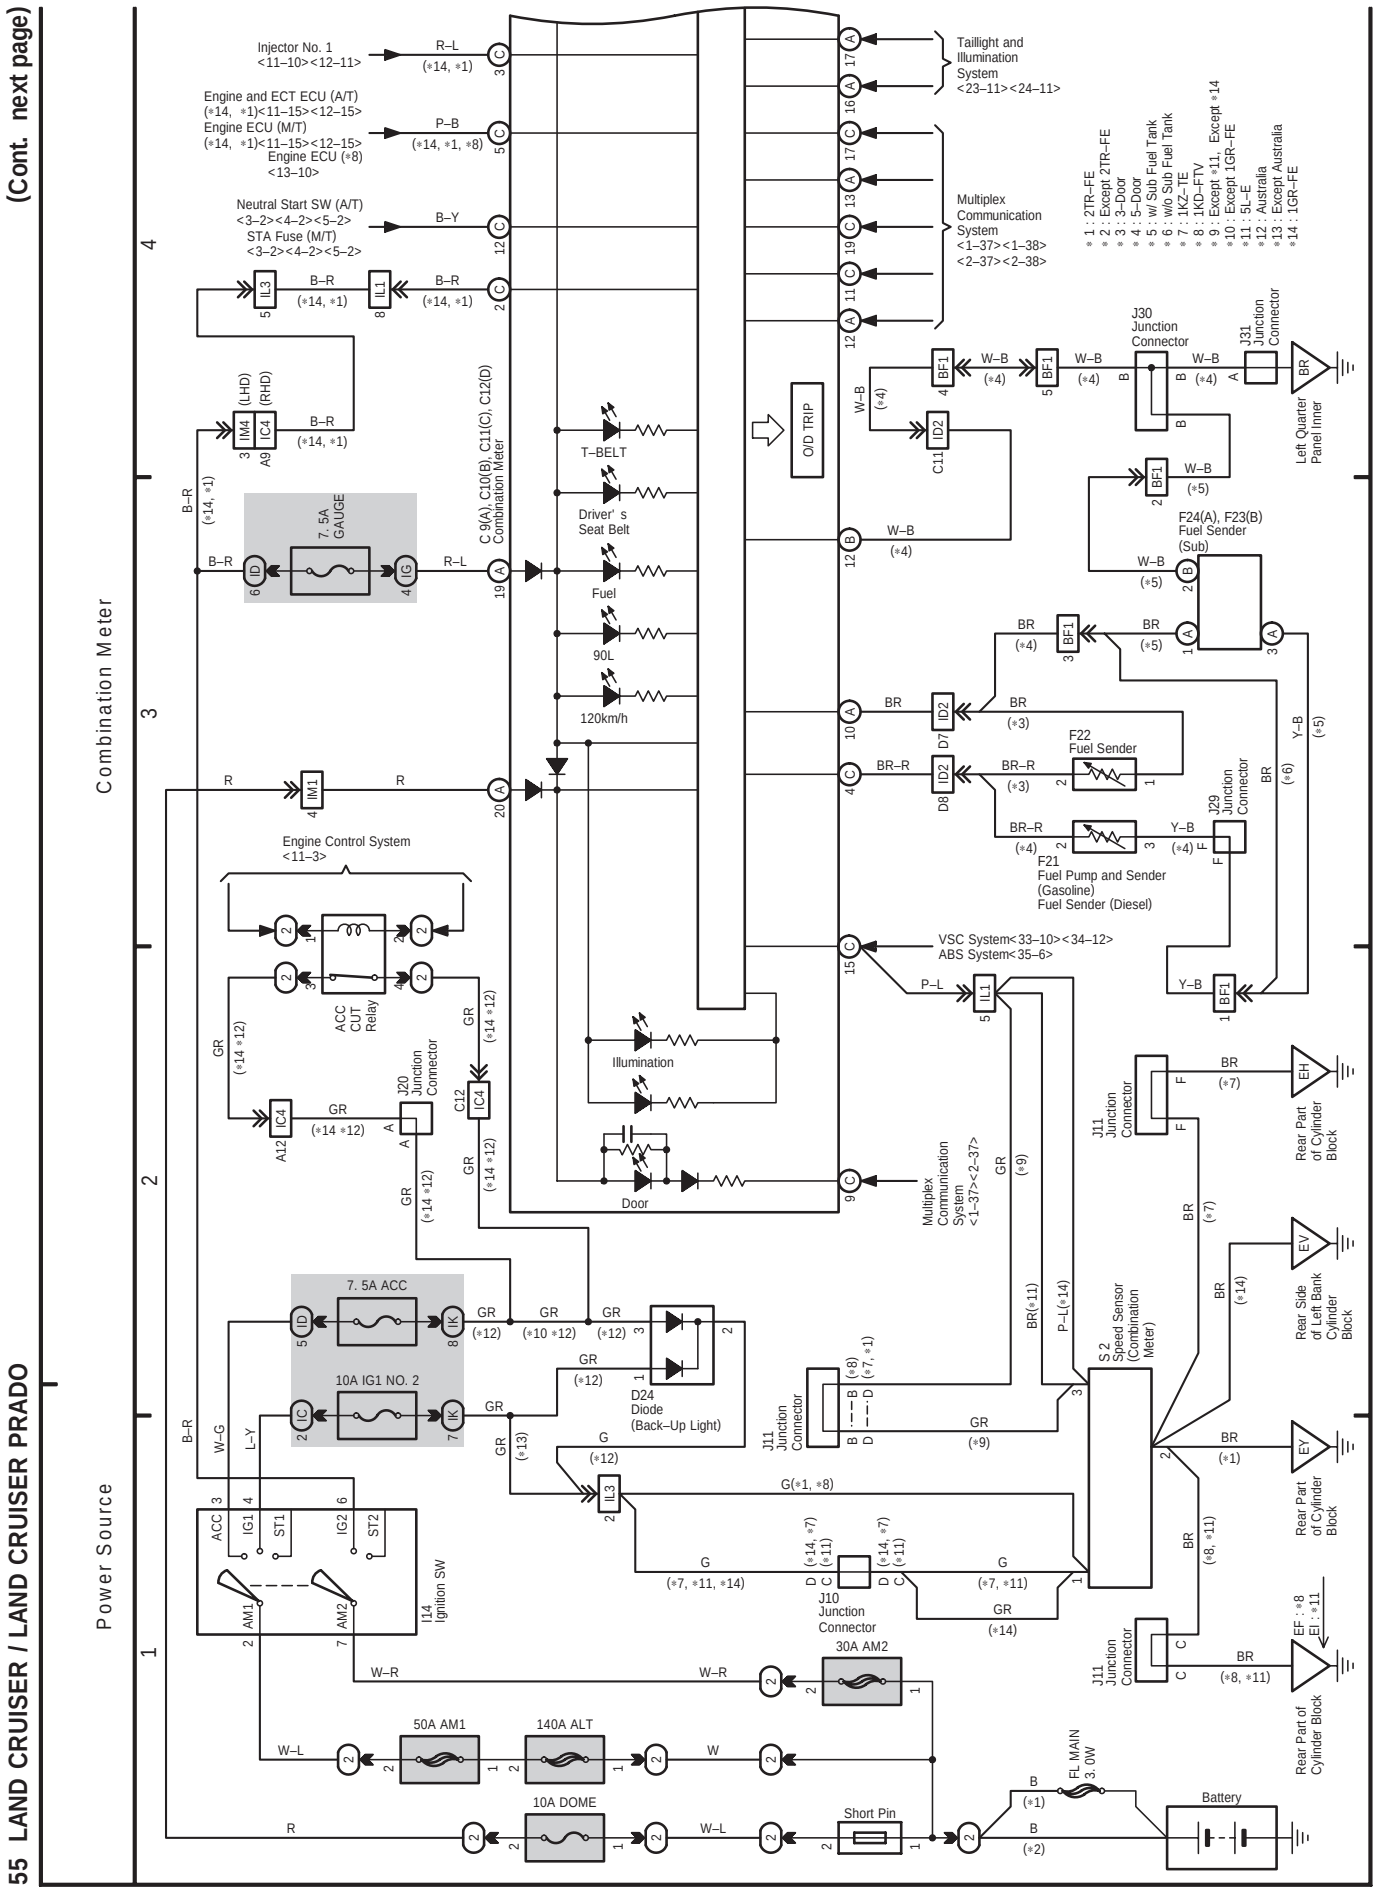
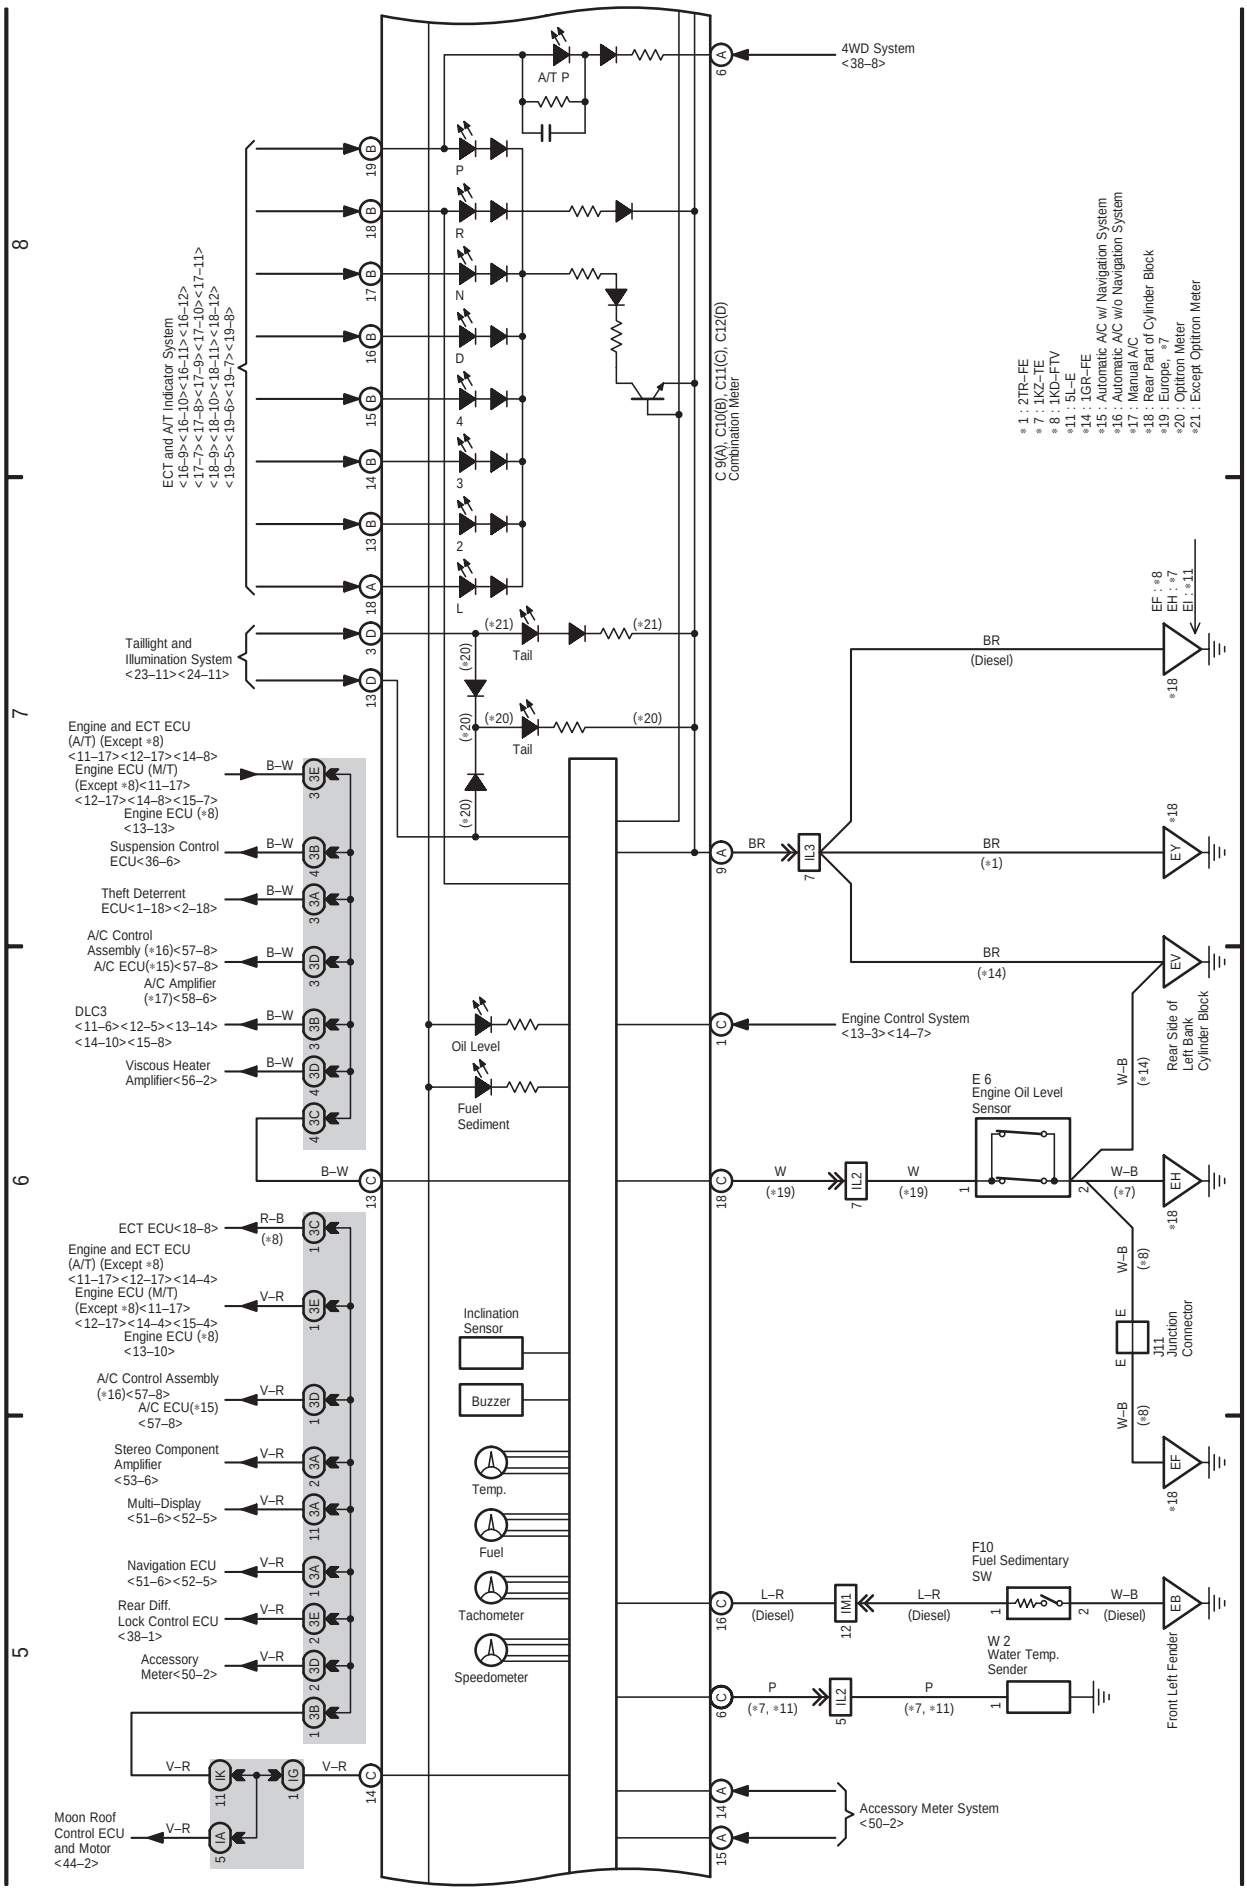
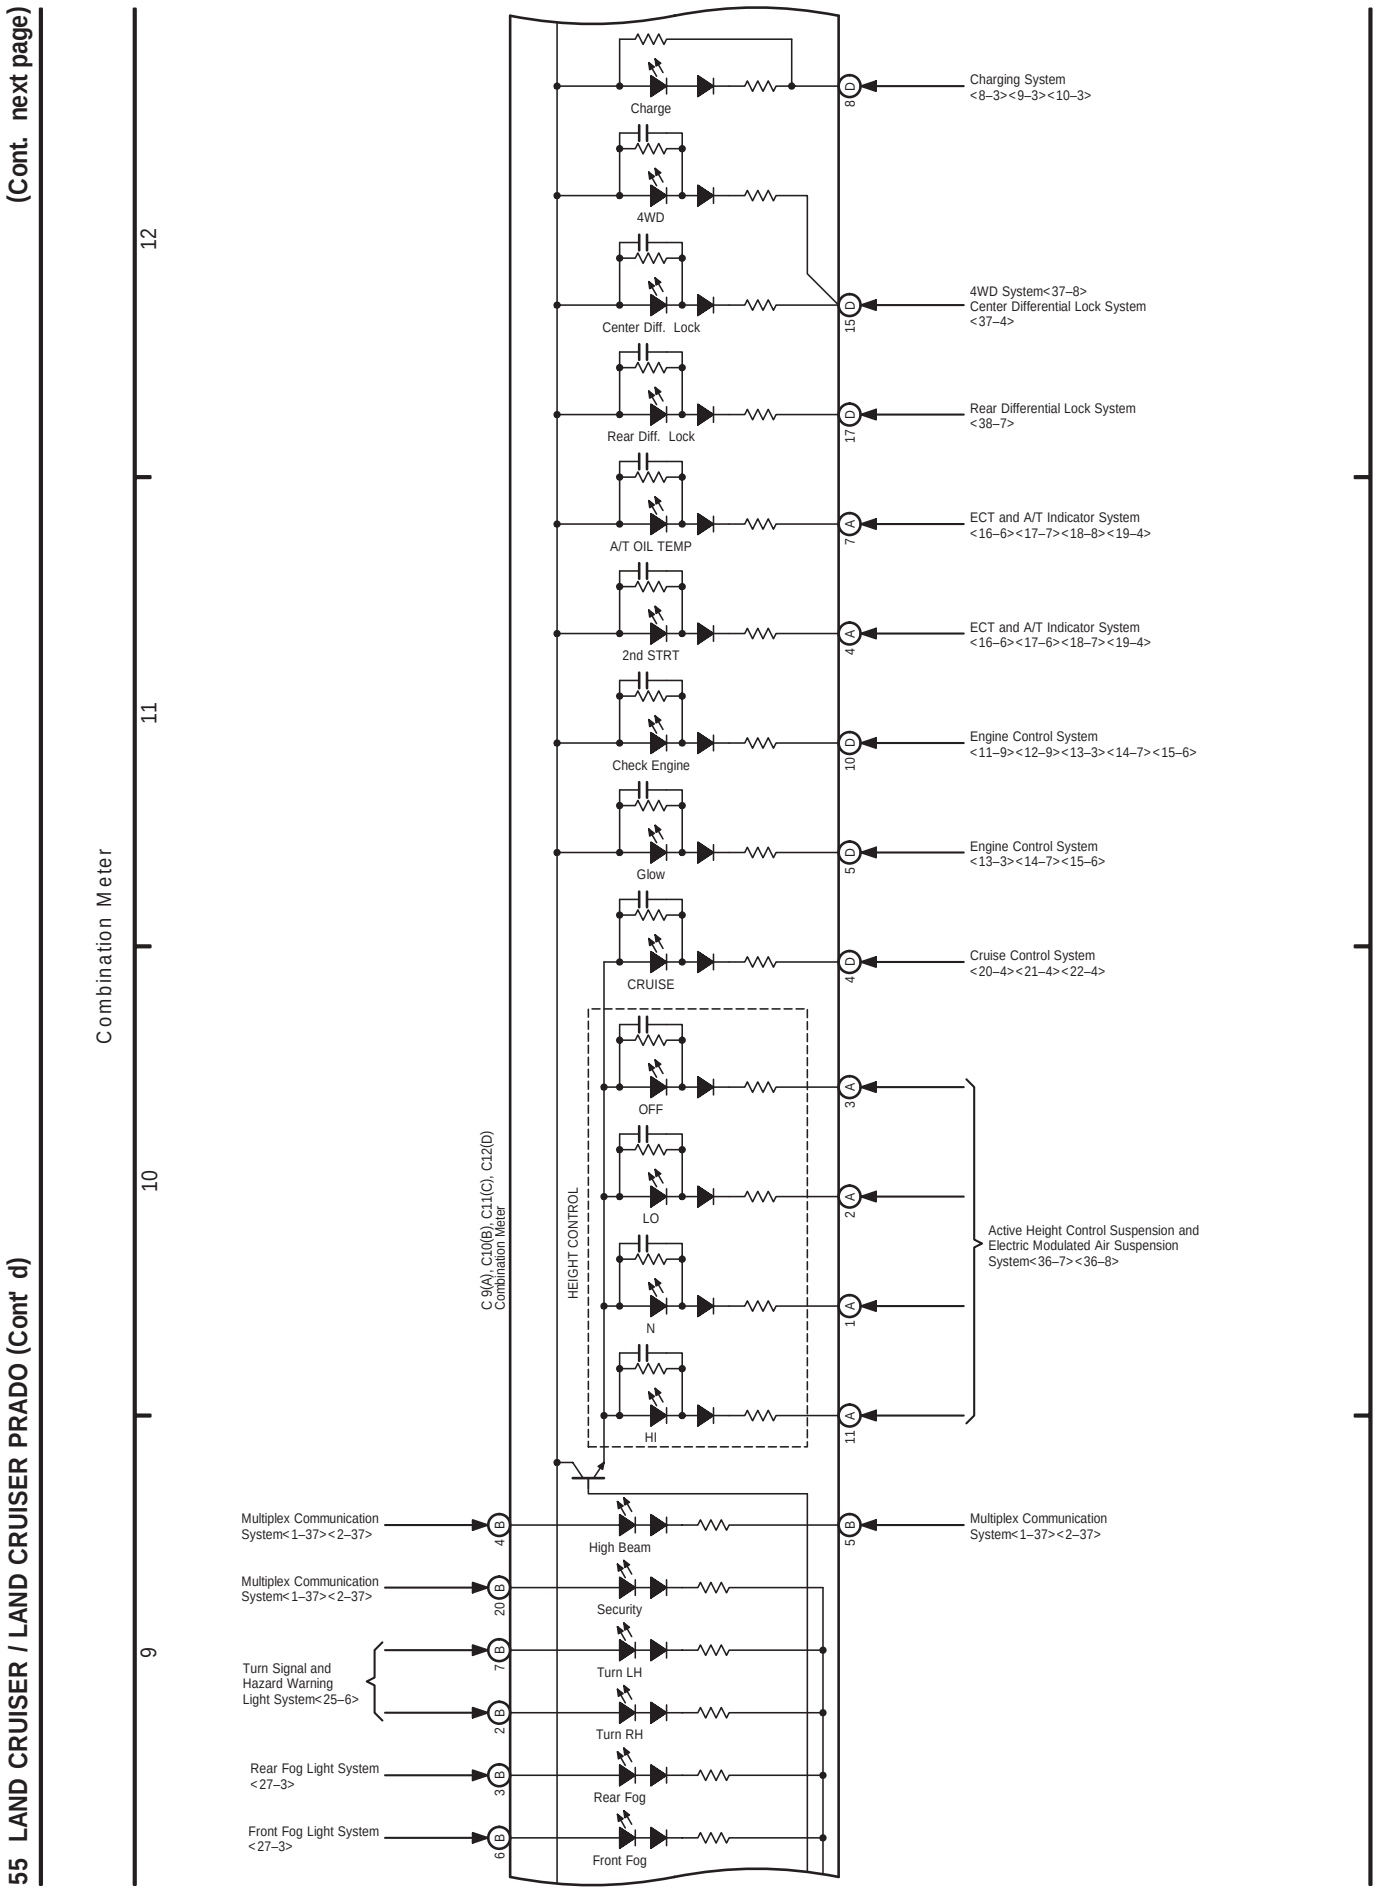

55 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
Combination Meter
Injector No. 1 <11–10><12–11>
Engine and ECT ECU (A/T) (*14, *1)<11–15><12–15>
Engine ECU (M/T) (*14, *1)<11–15><12–15>
Engine ECU (*8) <13–10>
Neutral Start SW (A/T) <3–2><4–2><5–2>
STA Fuse (M/T) <3–2><4–2><5–2>
Taillight and Illumination System <23–11><24–11>
Multiplex Communication System <1–37><1–38> <2–37><2–38>
*1 : 2TR–FE
*2 : Except 2TR–FE
*3 : 3–Door
*4 : 5–Door
*5 : w/ Sub Fuel Tank
*6 : w/o Sub Fuel Tank
*7 : 1KZ–TE
*8 : 1KD–FTV
*9 : Except *11, Except *14
*10 : Except 1GR–FE
*11 : 5L–E
*12 : Australia
*13 : Except Australia
*14 : 1GR–FE
J30 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
O/D TRIP
C 9(A), C10(B), C11(C), C12(D) Combination Meter
T–BELT
Driver' s Seat Belt
Fuel
90L
120km/h
7. 5A GAUGE
F24(A), F23(B) Fuel Sender (Sub)
F22 Fuel Sender
F21 Fuel Pump and Sender (Gasoline) Fuel Sender (Diesel)
J29 Junction Connector
Engine Control System <11–3>
ACC CUT Relay
J20 Junction Connector
Illumination
Door
VSC System<33–10><34–12>
ABS System<35–6>
Multiplex Communication System <1–37><2–37>
J11 Junction Connector
Rear Part of Cylinder Block
Rear Side of Left Bank Cylinder Block
7. 5A ACC
10A IG1 NO. 2
D24 Diode (Back–Up Light)
S 2 Speed Sensor (Combination Meter)
J10 Junction Connector
I14 Ignition SW
30A AM2
50A AM1
140A ALT
10A DOME
Short Pin
FL MAIN 3. 0W
Battery

55 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




(Cont. next page)
55 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
12
11
10
9
Combination Meter
Charge
4WD
Center Diff. Lock
Rear Diff. Lock
A/T OIL TEMP
2nd STRT
Check Engine
Glow
CRUISE
HEIGHT CONTROL
OFF
LO
N
HI
High Beam
Security
Turn LH
Turn RH
Rear Fog
Front Fog
C 9(A), C10(B), C11(C), C12(D)
Combination Meter
Charging System
<8–3><9–3><10–3>
4WD System<37–8>
Center Differential Lock System
<37–4>
Rear Differential Lock System
<38–7>
ECT and A/T Indicator System
<16–6><17–7><18–8><19–4>
ECT and A/T Indicator System
<16–6><17–6><18–7><19–4>
Engine Control System
<11–9><12–9><13–3><14–7><15–6>
Engine Control System
<13–3><14–7><15–6>
Cruise Control System
<20–4><21–4><22–4>
Active Height Control Suspension and
Electric Modulated Air Suspension
System<36–7><36–8>
Multiplex Communication
System<1–37><2–37>
Multiplex Communication
System<1–37><2–37>
Multiplex Communication
System<1–37><2–37>
Turn Signal and
Hazard Warning
Light System<25–6>
Rear Fog Light System
<27–3>
Front Fog Light System
<27–3>

55 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

