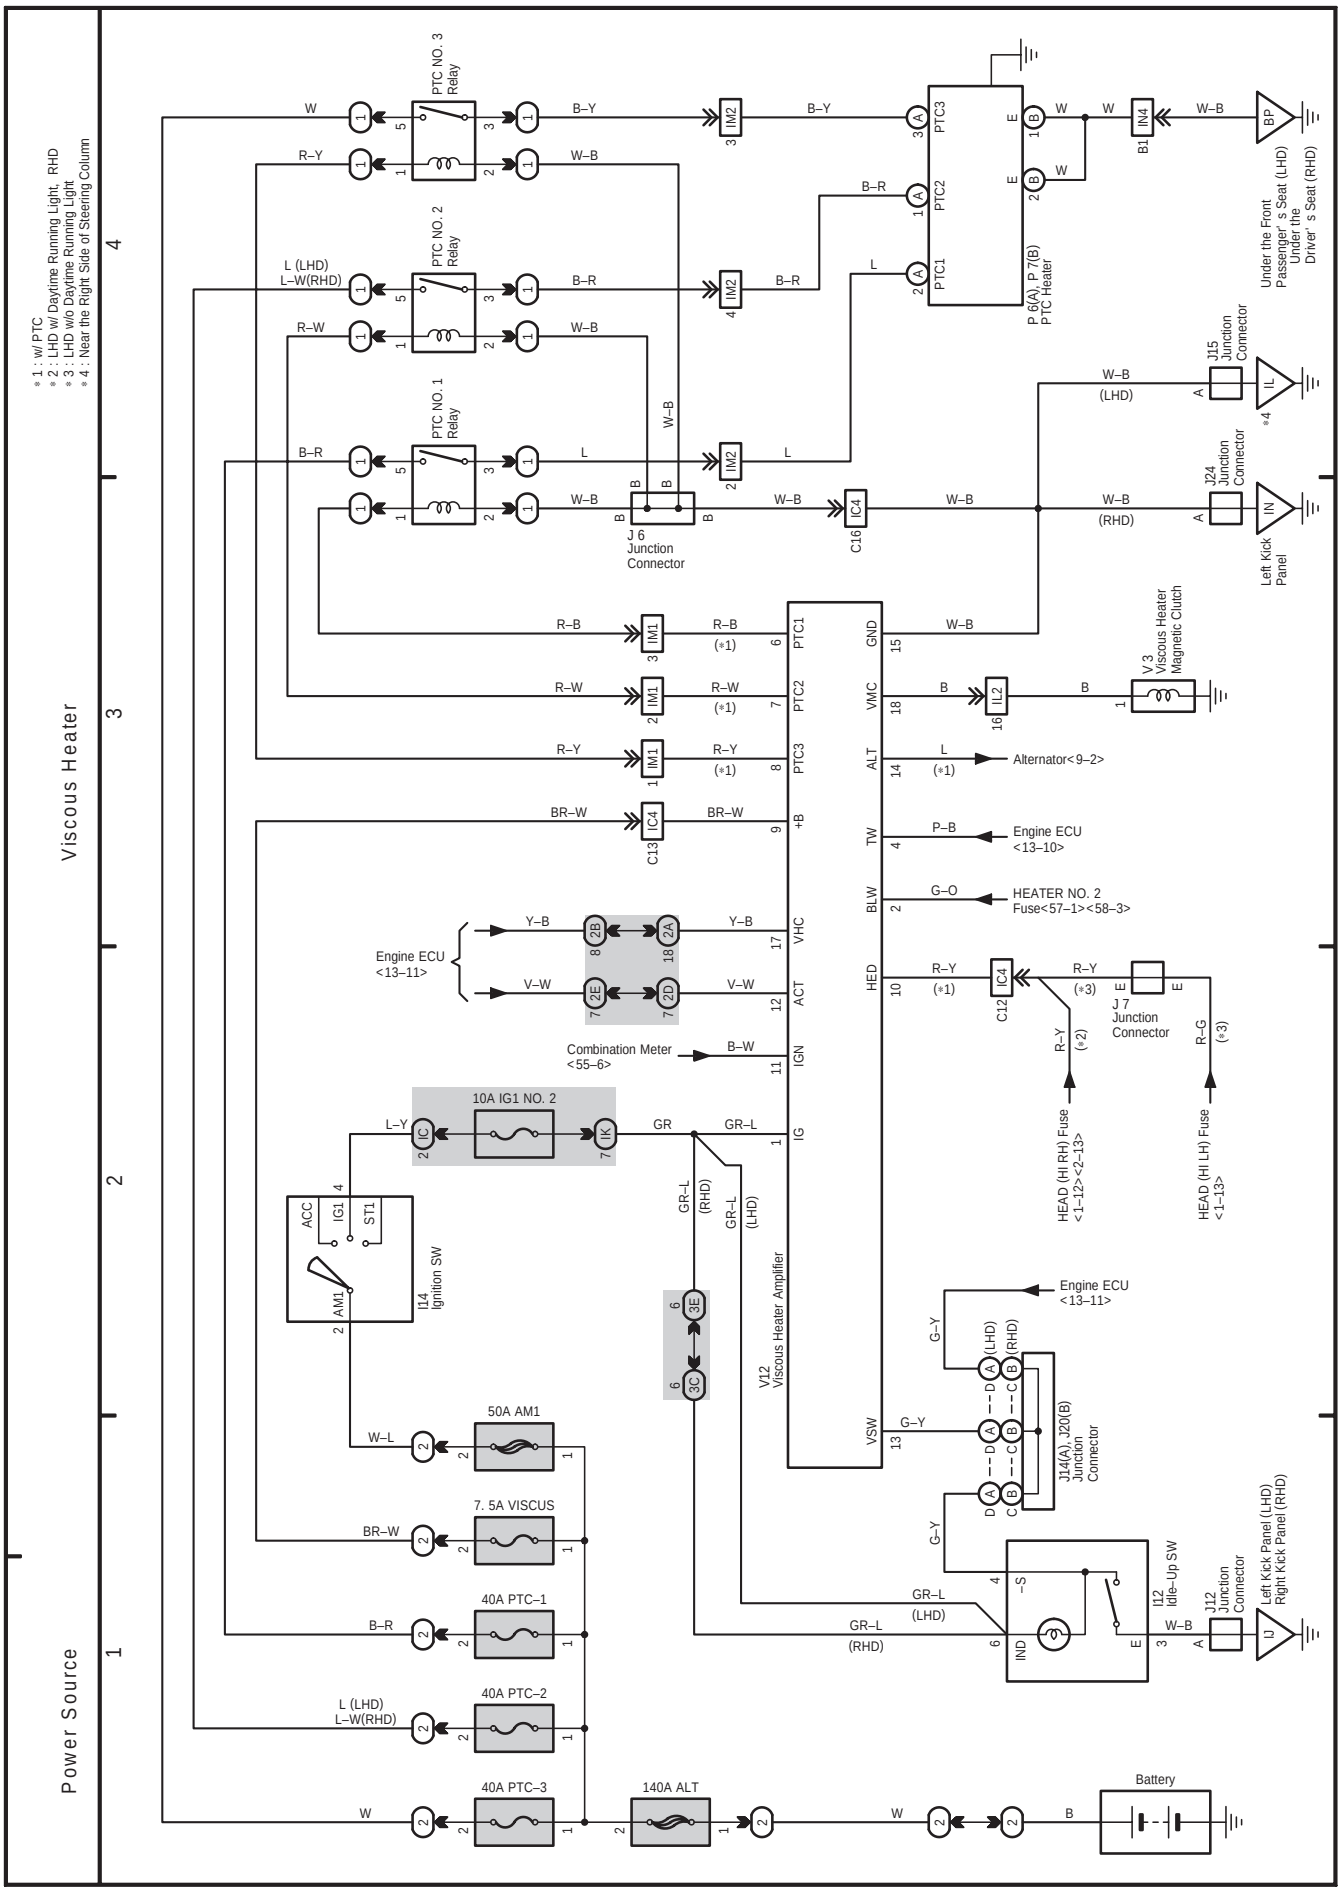

56 LAND CRUISER / LAND CRUISER PRADO
Power Source
Viscous Heater
1
2
3
4
*1 : w/ PTC
*2 : LHD w/ Daytime Running Light, RHD
*3 : LHD w/o Daytime Running Light
*4 : Near the Right Side of Steering Column
PTC NO. 3 Relay
PTC NO. 2 Relay
PTC NO. 1 Relay
P 6(A), P 7(B) PTC Heater
Under the Front Passenger' s Seat (LHD) Under the Driver' s Seat (RHD)
J15 Junction Connector
J24 Junction Connector
J 6 Junction Connector
Left Kick Panel
V3 Viscous Heater Magnetic Clutch
Alternator<9–2>
Engine ECU <13–10>
HEATER NO. 2 Fuse<57–1><58–3>
Engine ECU <13–11>
Combination Meter <55–6>
J 7 Junction Connector
HEAD (HI RH) Fuse <1–12><2–13>
HEAD (HI LH) Fuse <1–13>
10A IG1 NO. 2
I14 Ignition SW
V12 Viscous Heater Amplifier
J14(A), J20(B) Junction Connector
I12 Idle–Up SW
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
50A AM1
7. 5A VISCUS
40A PTC–1
40A PTC–2
40A PTC–3
140A ALT
Battery