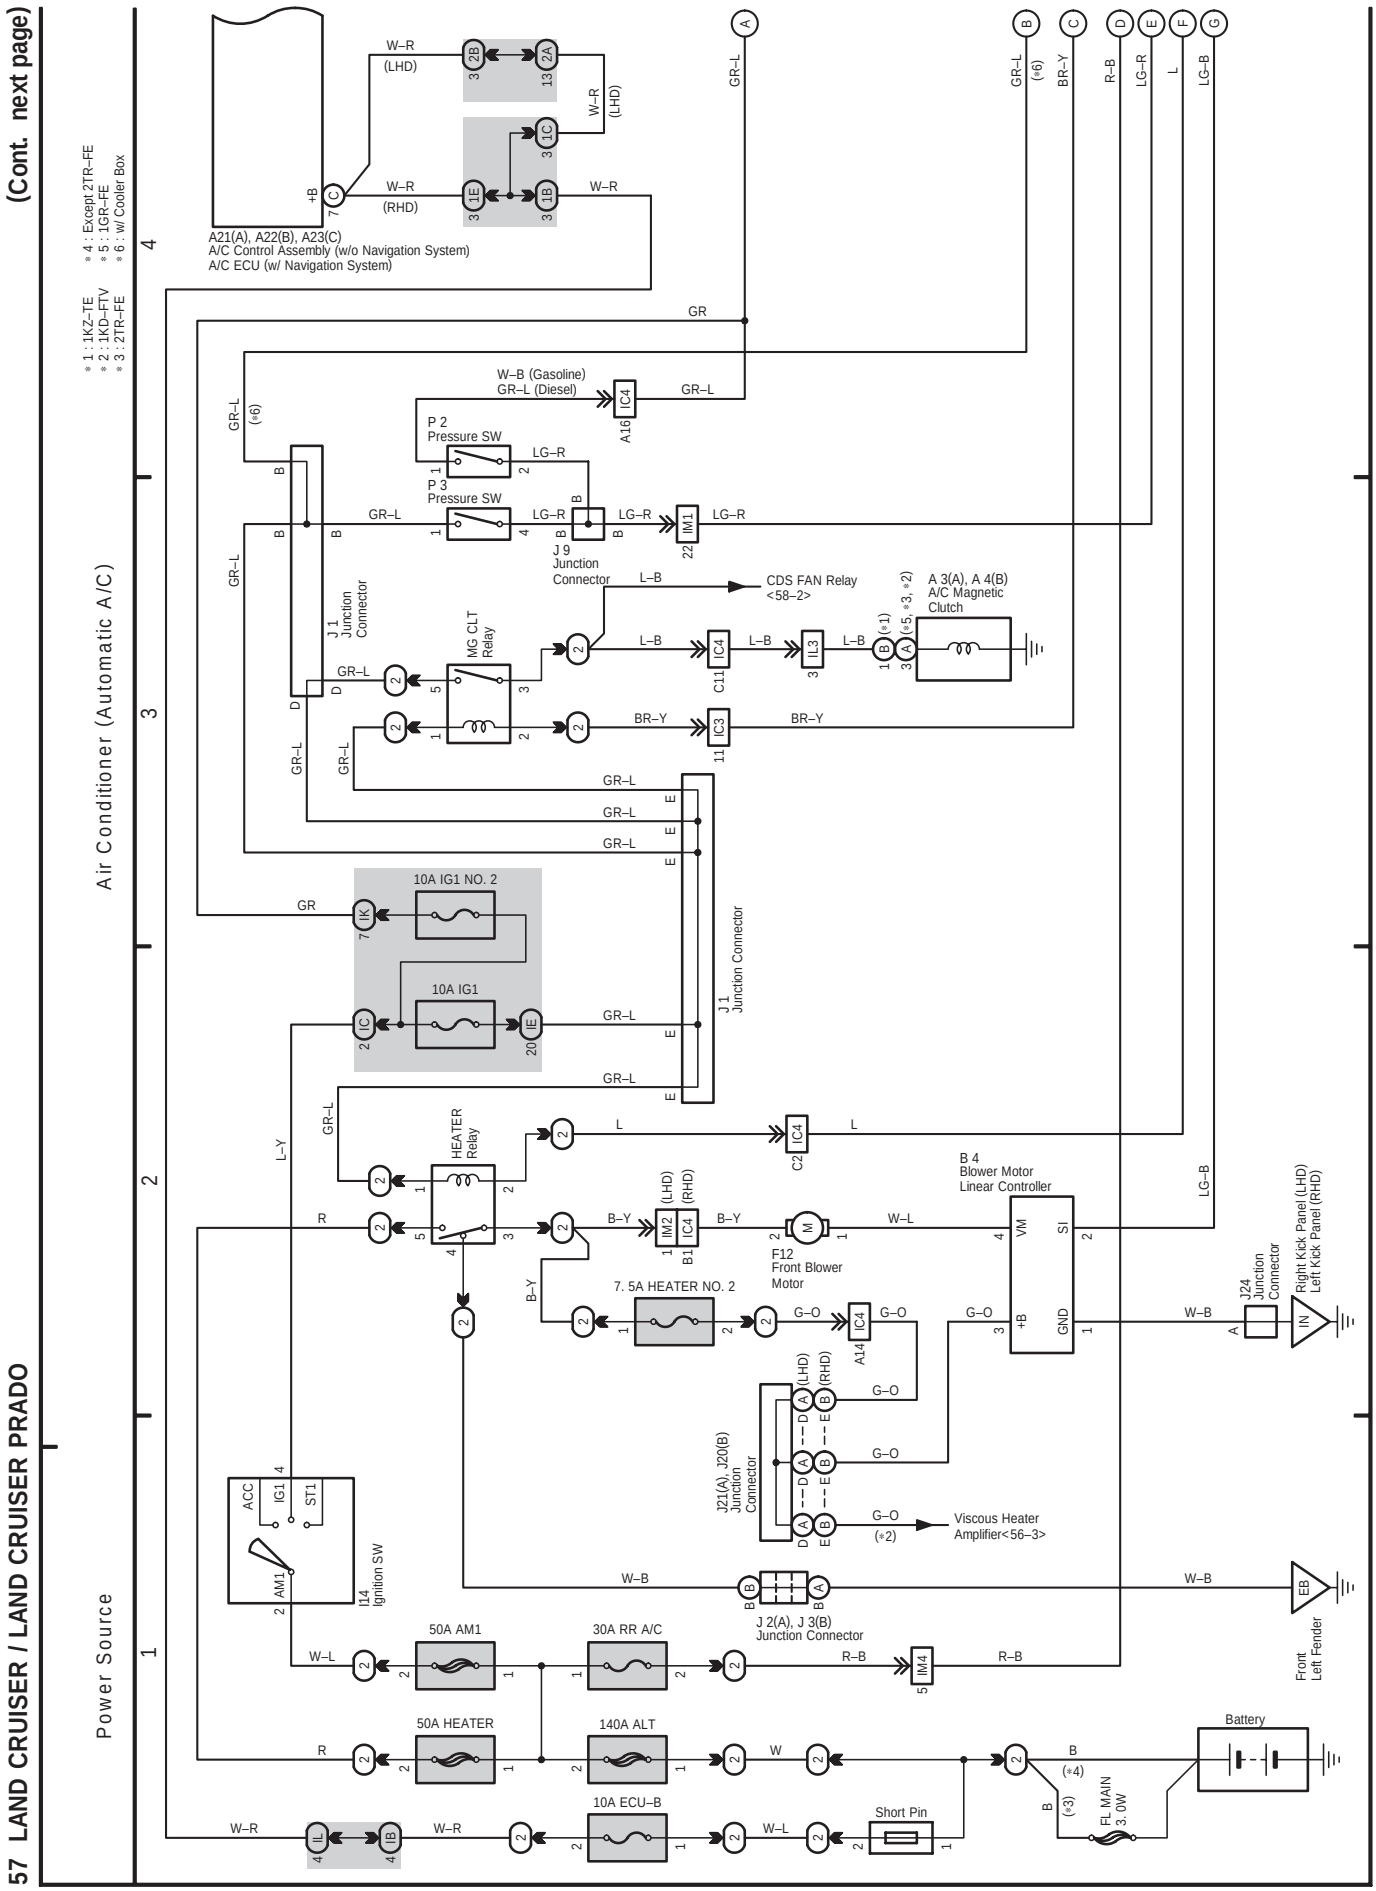
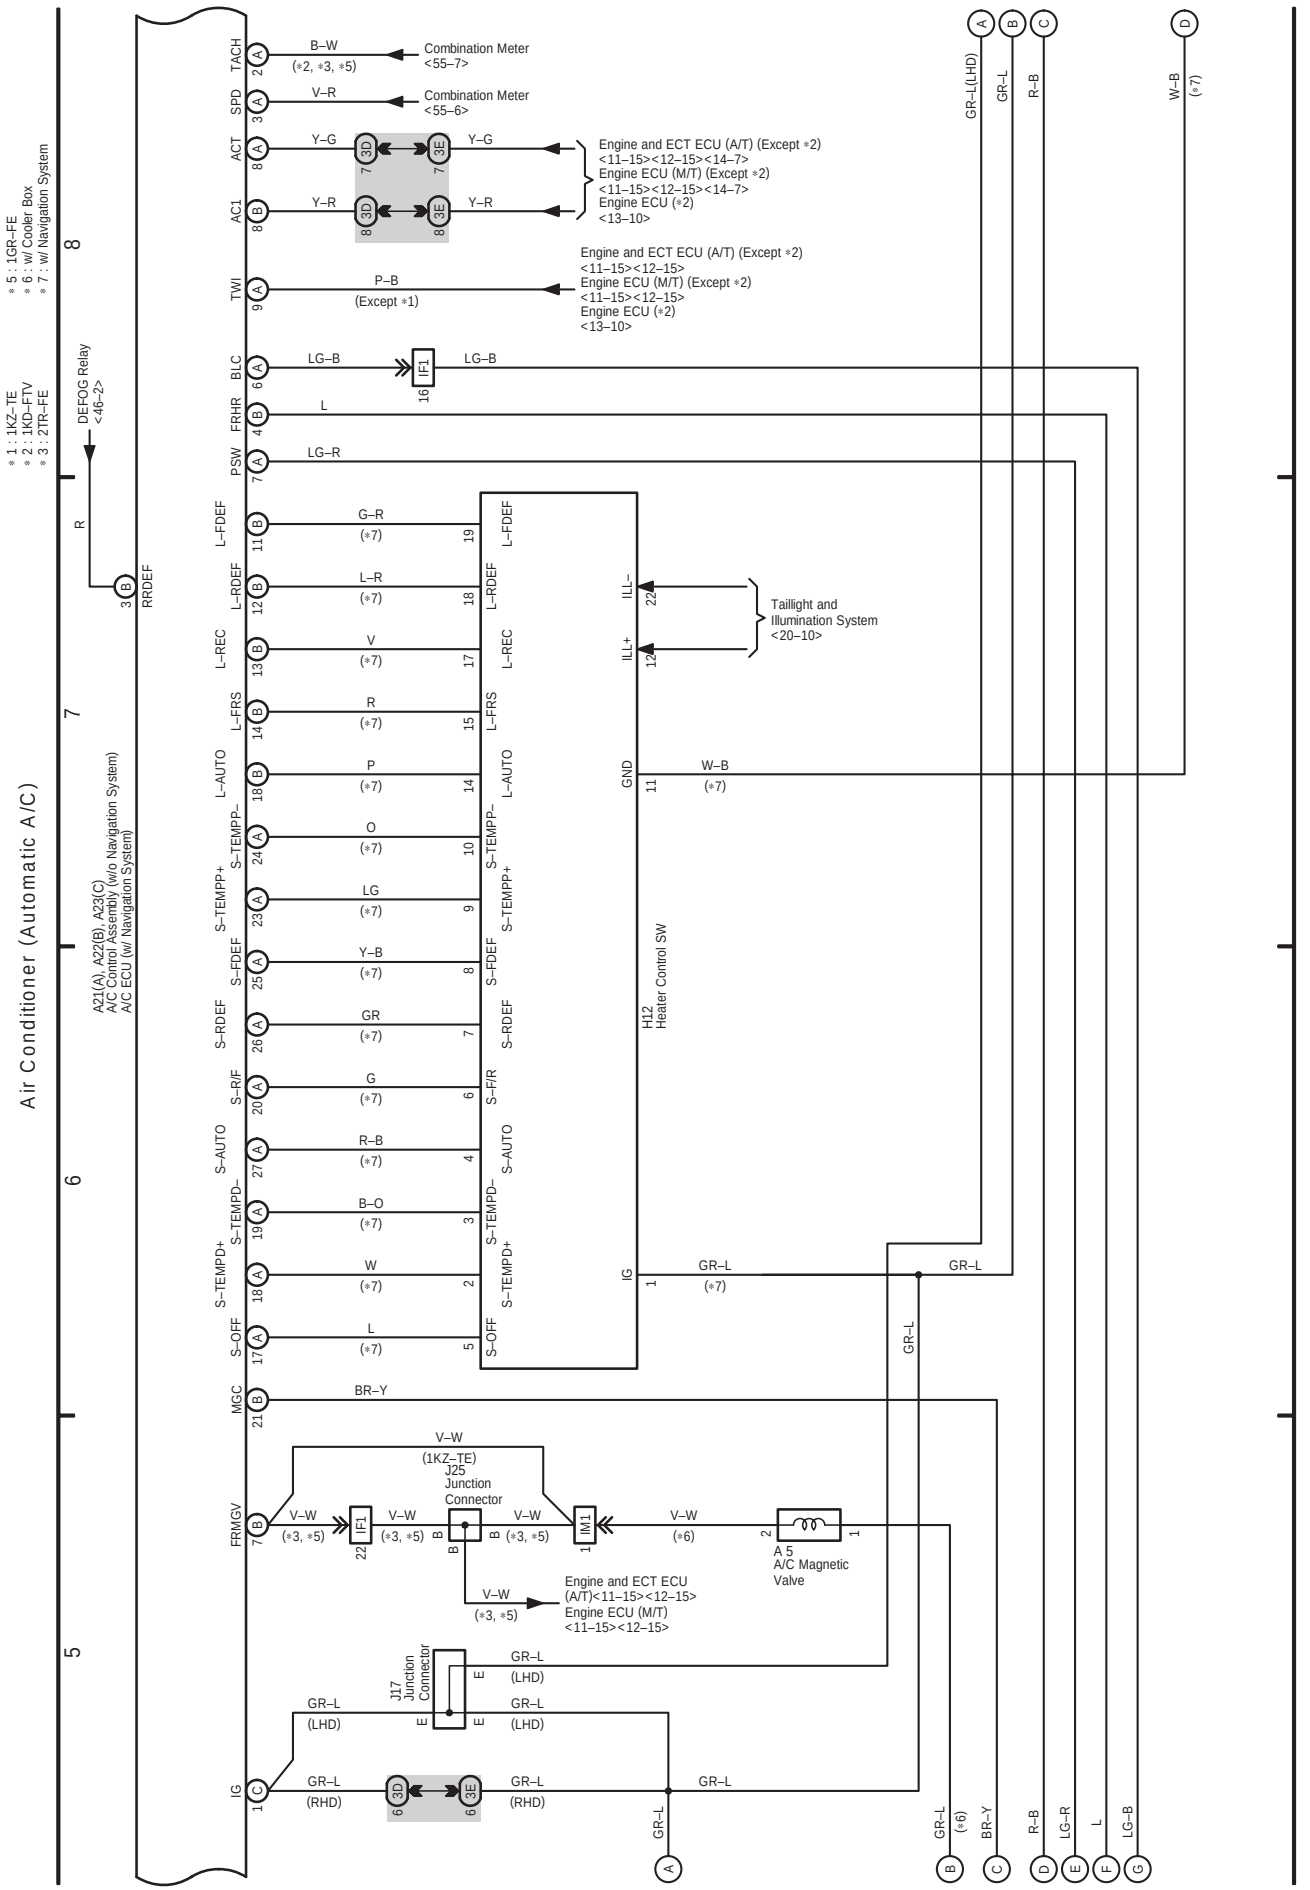
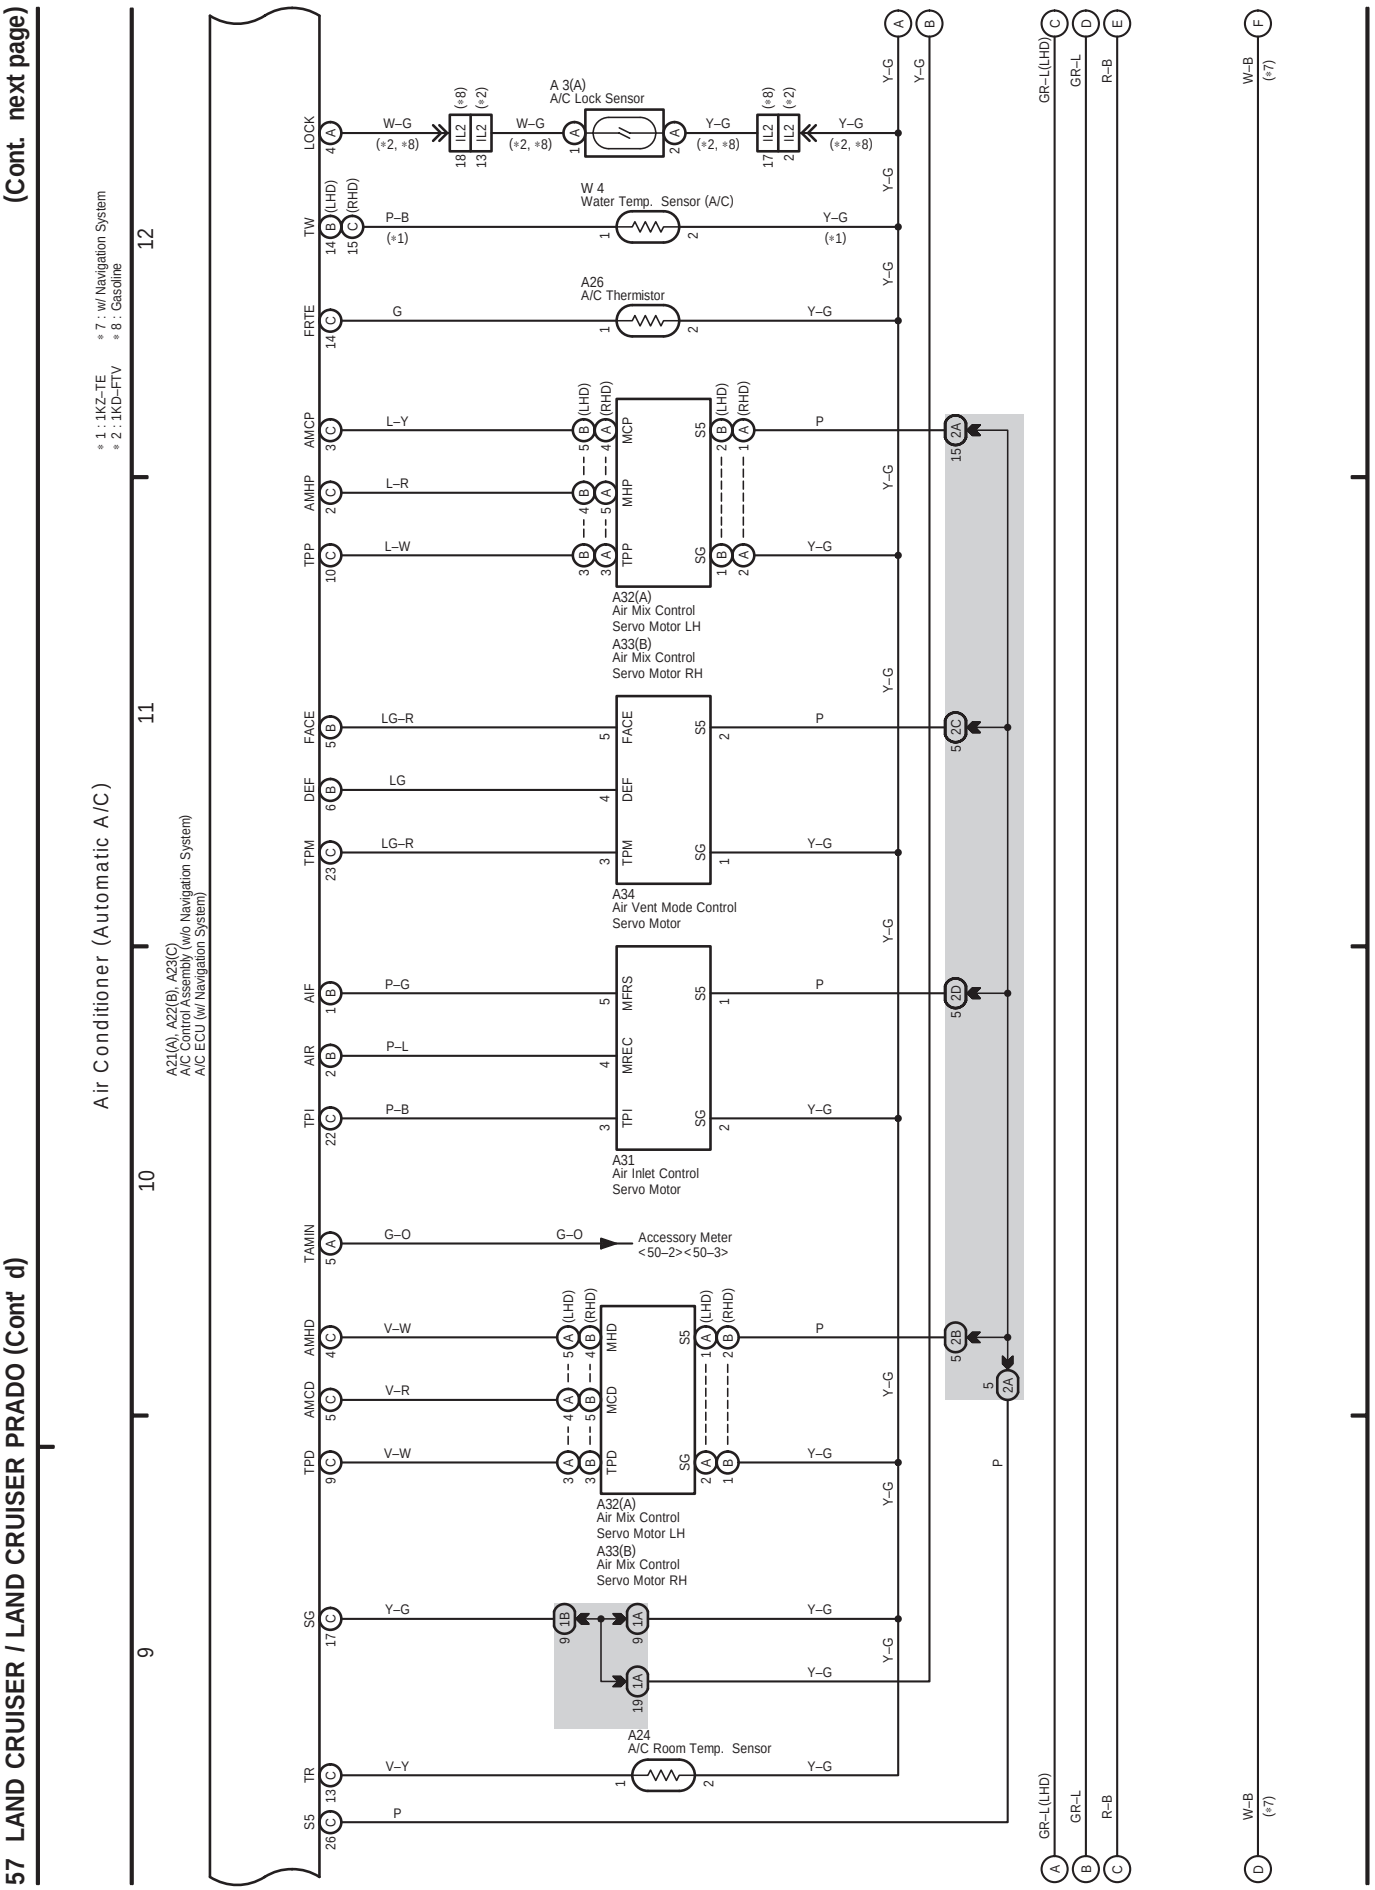
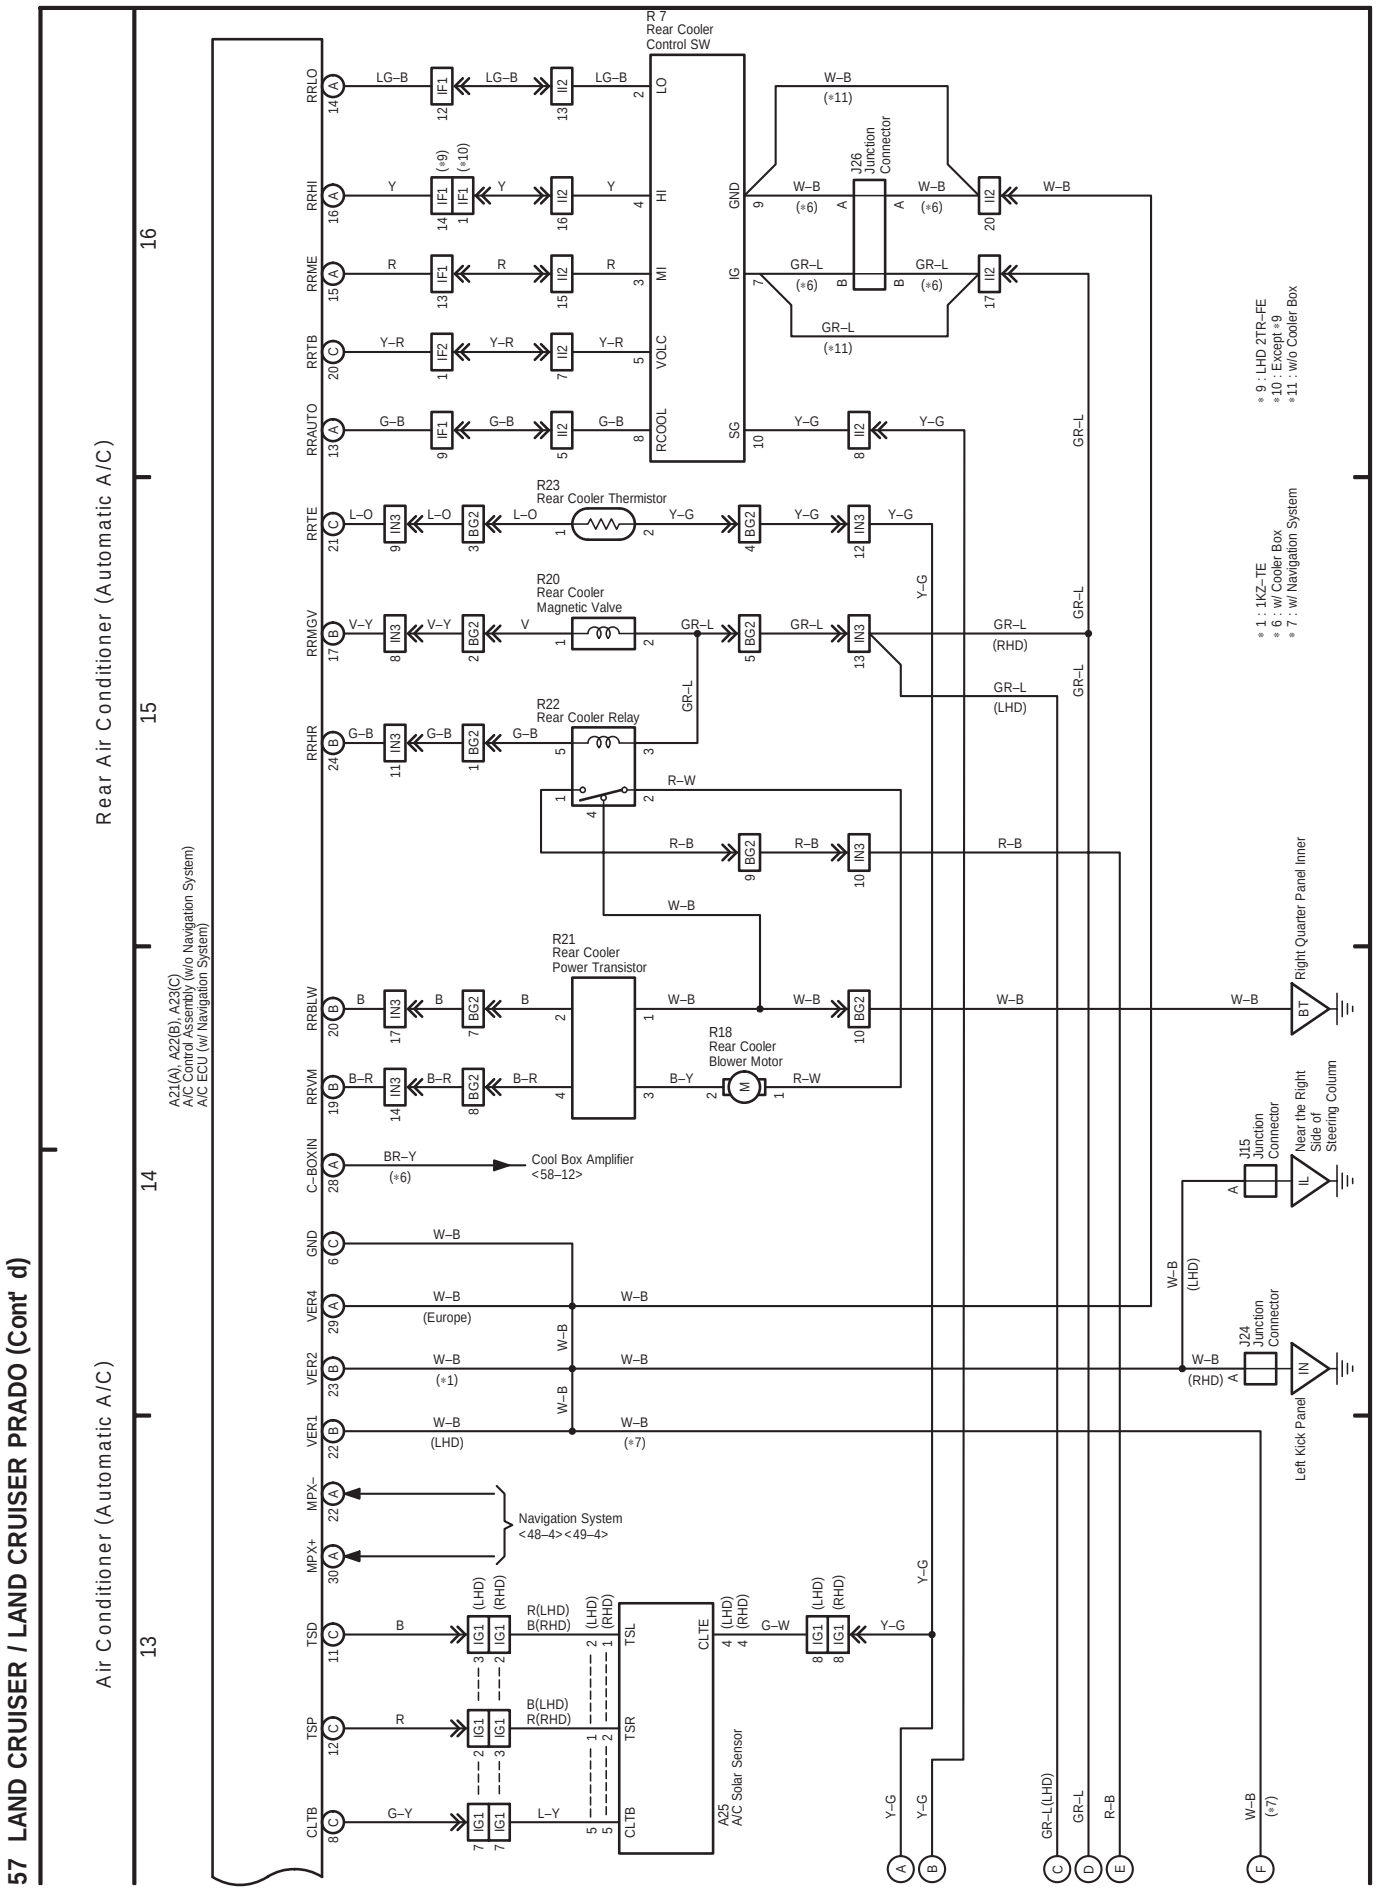

(Cont. next page)
57 LAND CRUISER / LAND CRUISER PRADO
Power Source
Air Conditioner (Automatic A/C)
* 1 : 1KZ–TE
* 2 : 1KD–FTV
* 3 : 2TR–FE
* 4 : Except 2TR–FE
* 5 : 1GR–FE
* 6 : w/ Cooler Box
A21(A), A22(B), A23(C)
A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
W–R (LHD)
W–R (RHD)
GR
GR–L
W–B (Gasoline)
GR–L (Diesel)
P 2 Pressure SW
P 3 Pressure SW
LG–R
J 9 Junction Connector
L–B
CDS FAN Relay <58–2>
A 3(A), A 4(B) A/C Magnetic Clutch
J 1 Junction Connector
MG CLT Relay
BR–Y
10A IG1 NO. 2
10A IG1
HEATER Relay
L–Y
L
B 4 Blower Motor Linear Controller
B–Y
W–L
F12 Front Blower Motor
7. 5A HEATER NO. 2
G–O
J24 Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
W–B
J21(A), J20(B) Junction Connector
Viscous Heater Amplifier<56–3>
I14 Ignition SW
ACC
IG1
ST1
AM1
J 2(A), J 3(B) Junction Connector
EB
Front Left Fender
50A AM1
30A RR A/C
R–B
50A HEATER
140A ALT
Battery
10A ECU–B
Short Pin
FL MAIN 3. 0W

57 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




(Cont. next page)
57 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Air Conditioner (Automatic A/C)
A21(A), A22(B), A23(C)
A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
∗1 : 1KZ–TE
∗2 : 1KD–FTV
∗7 : w/ Navigation System
∗8 : Gasoline
A 3(A)
A/C Lock Sensor
W 4
Water Temp. Sensor (A/C)
A26
A/C Thermistor
A32(A)
Air Mix Control
Servo Motor LH
A33(B)
Air Mix Control
Servo Motor RH
A34
Air Vent Mode Control
Servo Motor
A31
Air Inlet Control
Servo Motor
Accessory Meter
<50–2><50–3>
A24
A/C Room Temp. Sensor
LOCK
TW
FRTE
AMCP
AMHP
TPP
FACE
DEF
TPM
AIF
AIR
TPI
TAMIN
AMHD
AMCD
TPD
SG
TR
S5
GR–L(LHD)
GR–L
R–B
W–B


57 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Air Conditioner (Automatic A/C)
Rear Air Conditioner (Automatic A/C)
13
14
15
16
A21(A), A22(B), A23(C)
A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
R 7
Rear Cooler
Control SW
R23
Rear Cooler Thermistor
R20
Rear Cooler
Magnetic Valve
R22
Rear Cooler Relay
R21
Rear Cooler
Power Transistor
R18
Rear Cooler
Blower Motor
J26
Junction
Connector
J15
Junction
Connector
J24
Junction
Connector
Near the Right
Side of
Steering Column
Left Kick Panel
Right Quarter Panel Inner
Cool Box Amplifier
<58–12>
Navigation System
<48–4><49–4>
A25
A/C Solar Sensor
RRLO
RRHI
RRME
RRTB
RRAUTO
RRTE
RRMGV
RRHR
RRBLW
RRVM
C–BOXIN
GND
VER4
VER2
VER1
MPX–
MPX+
TSD
TSP
CLTB
TSL
TSR
CLTE
LO
HI
MI
VOLC
RCOOL
GND
IG
SG
(RHD)
(LHD)
(Europe)
(*1)
(*6)
(*7)
(*9)
(*10)
(*11)
* 1 : 1KZ– TE
* 6 : w/ Cooler Box
* 7 : w/ Navigation System
* 9 : LHD 2TR–FE
*10 : Except *9
*11 : w/o Cooler Box