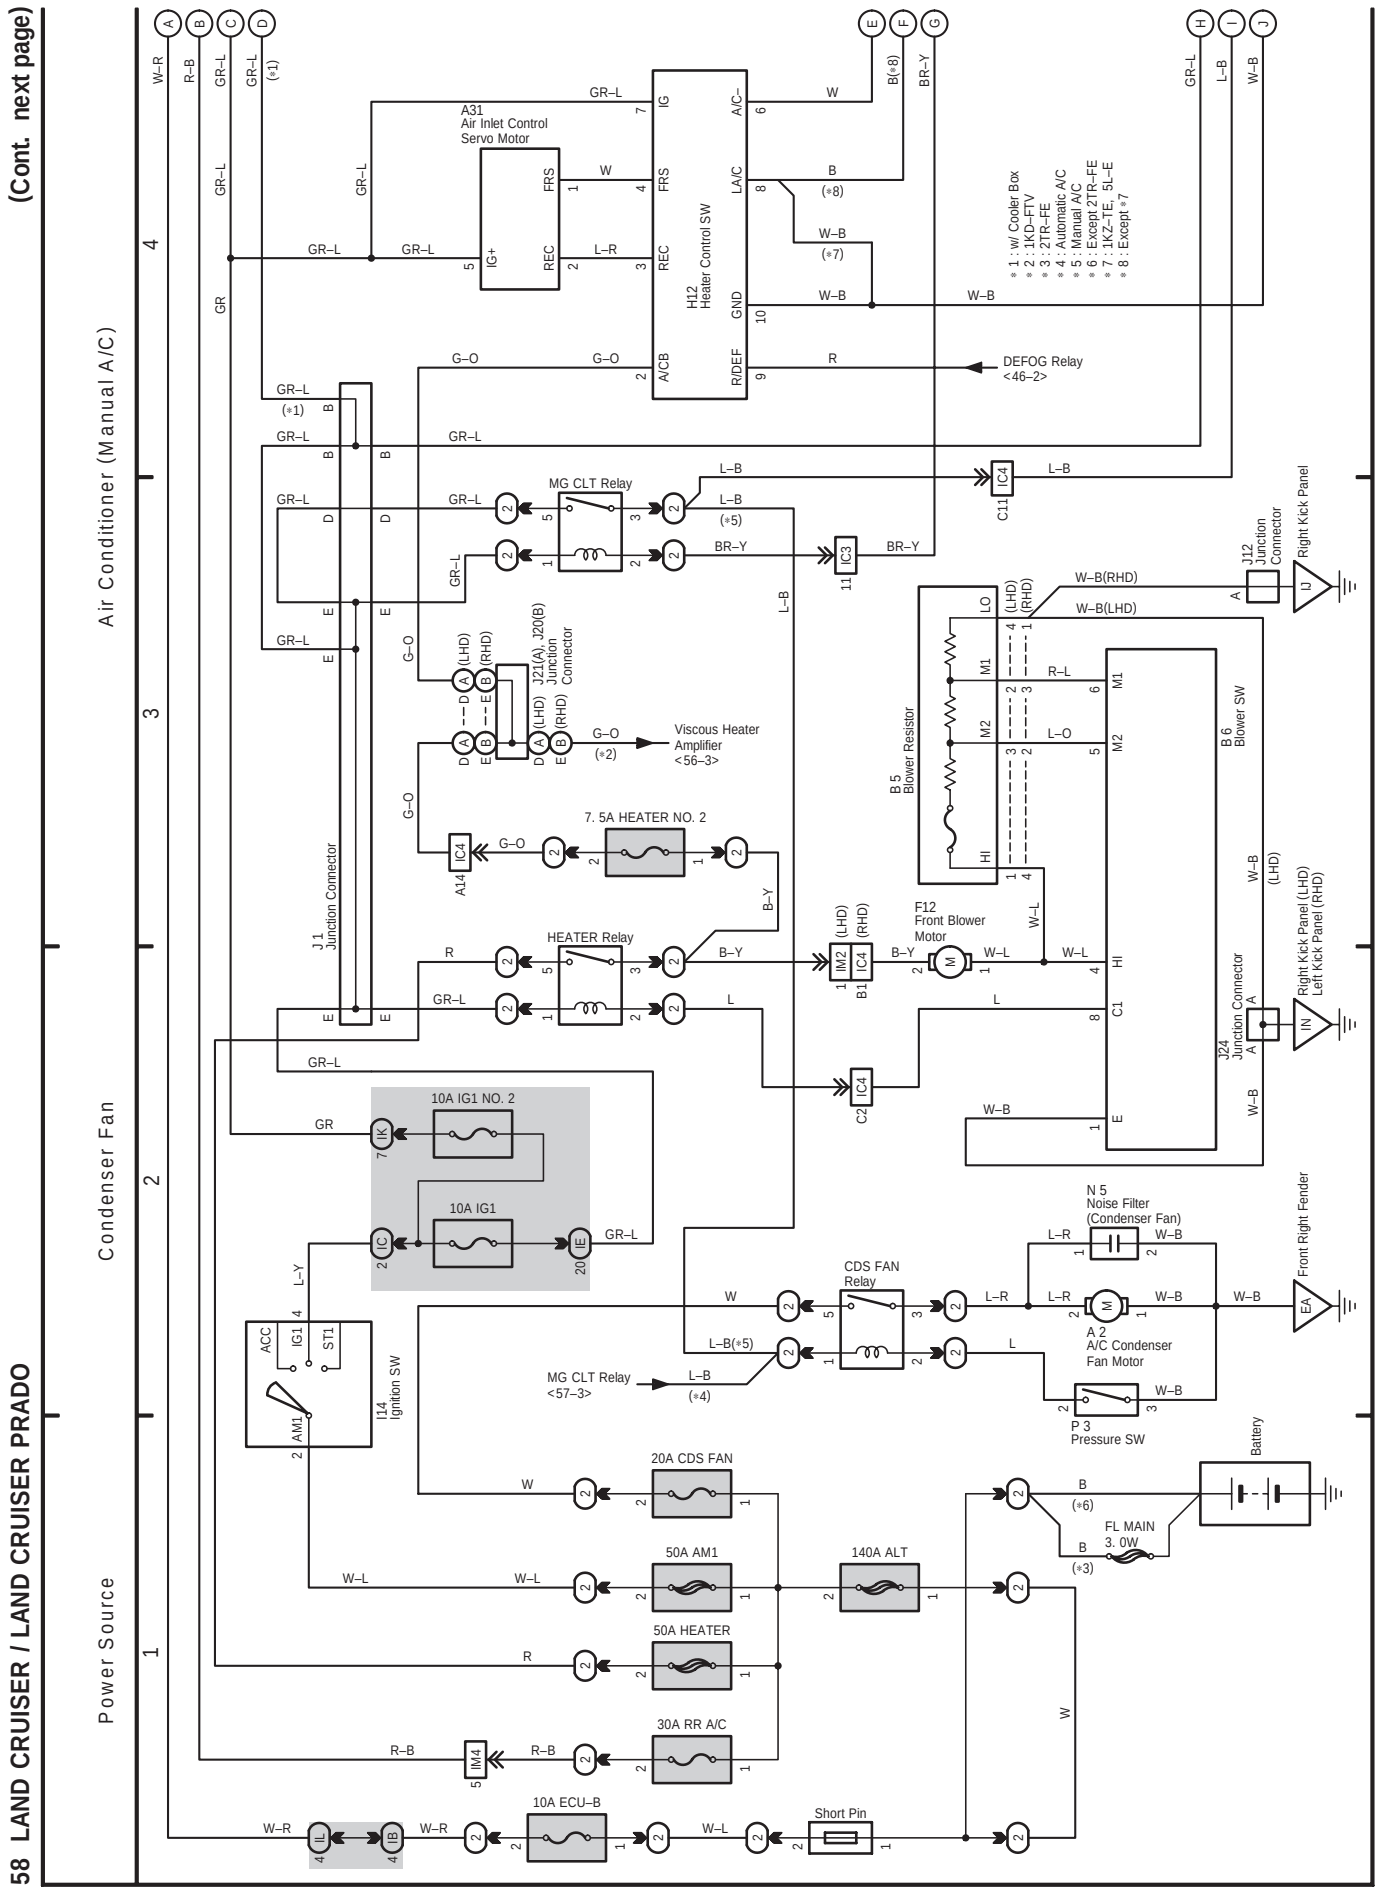
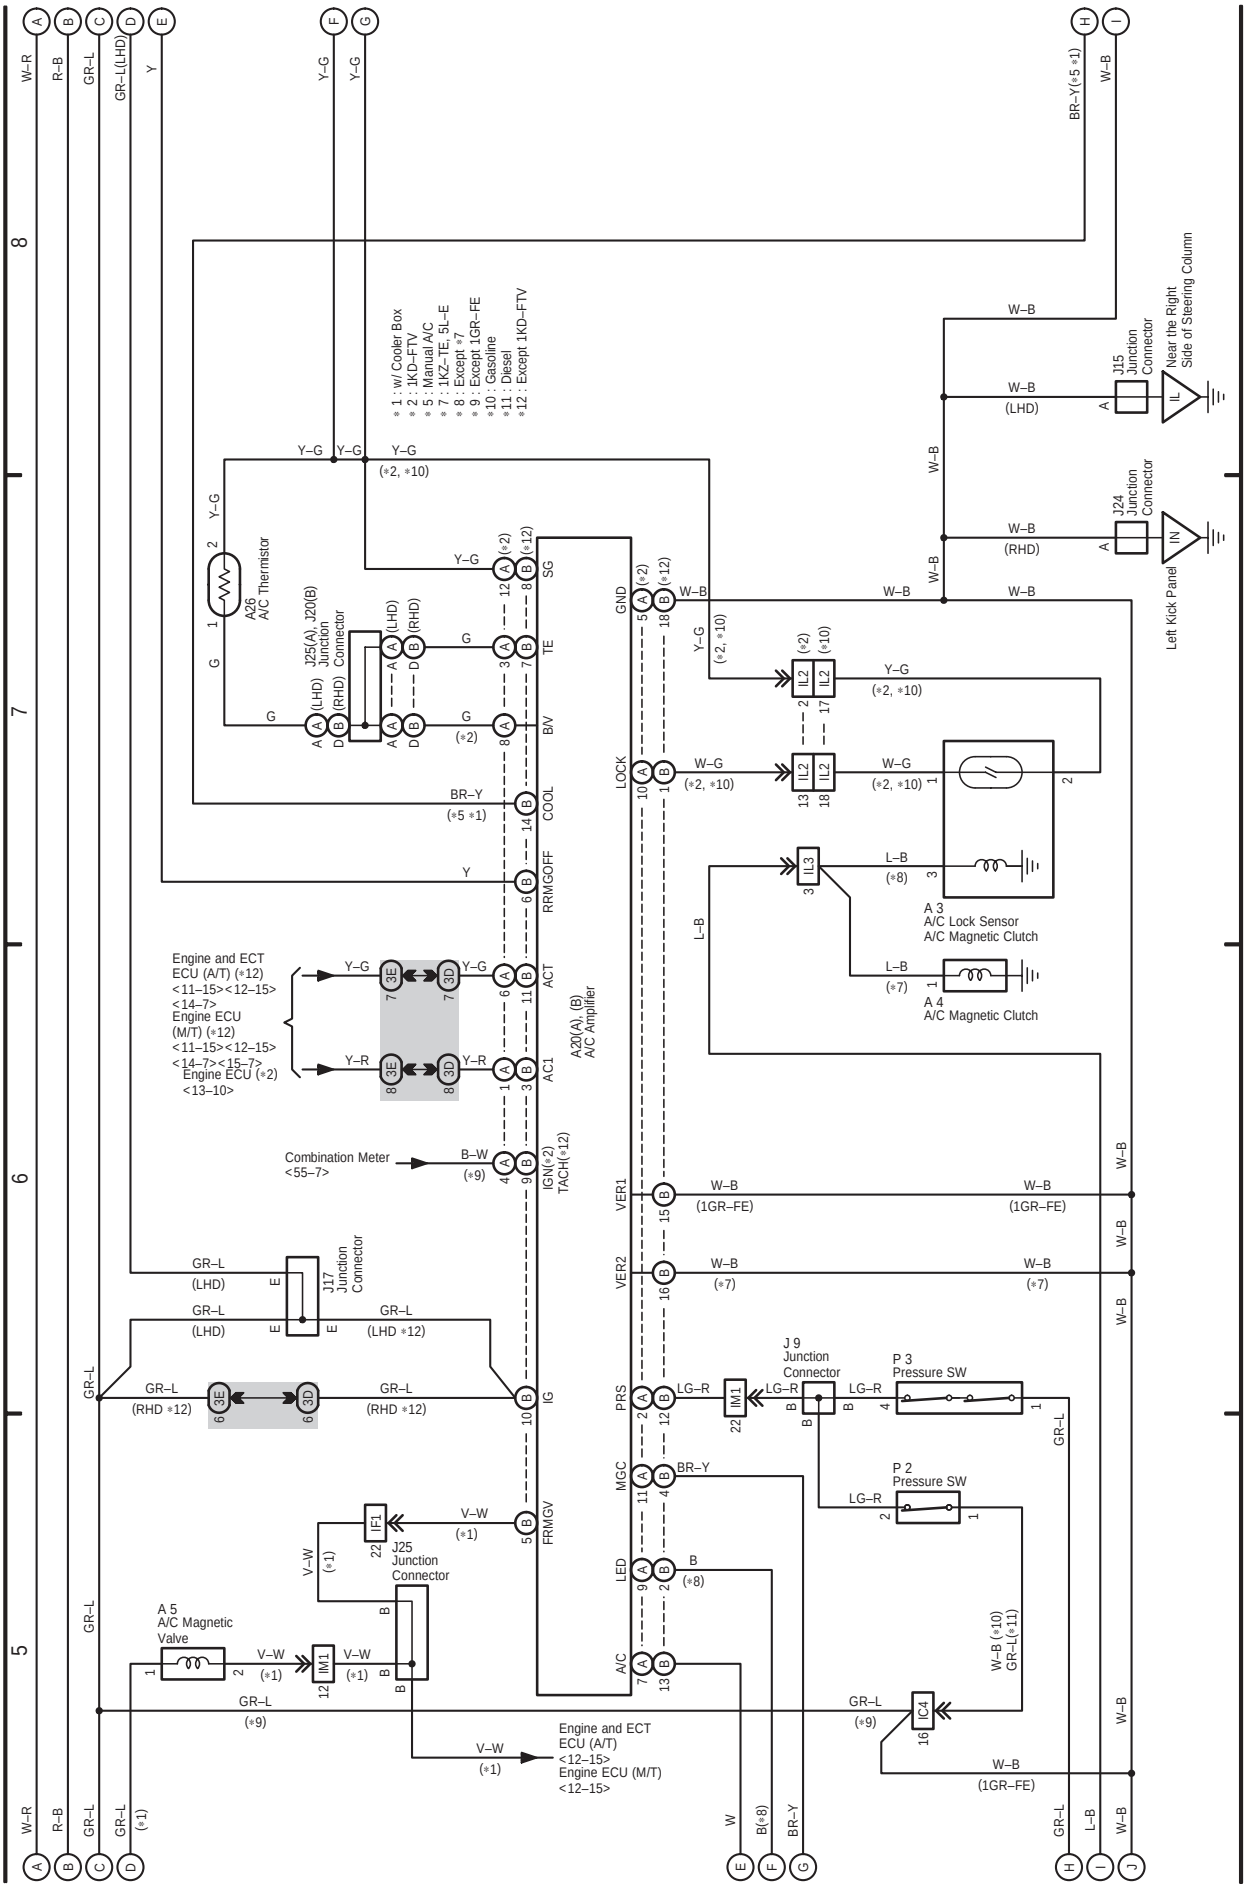
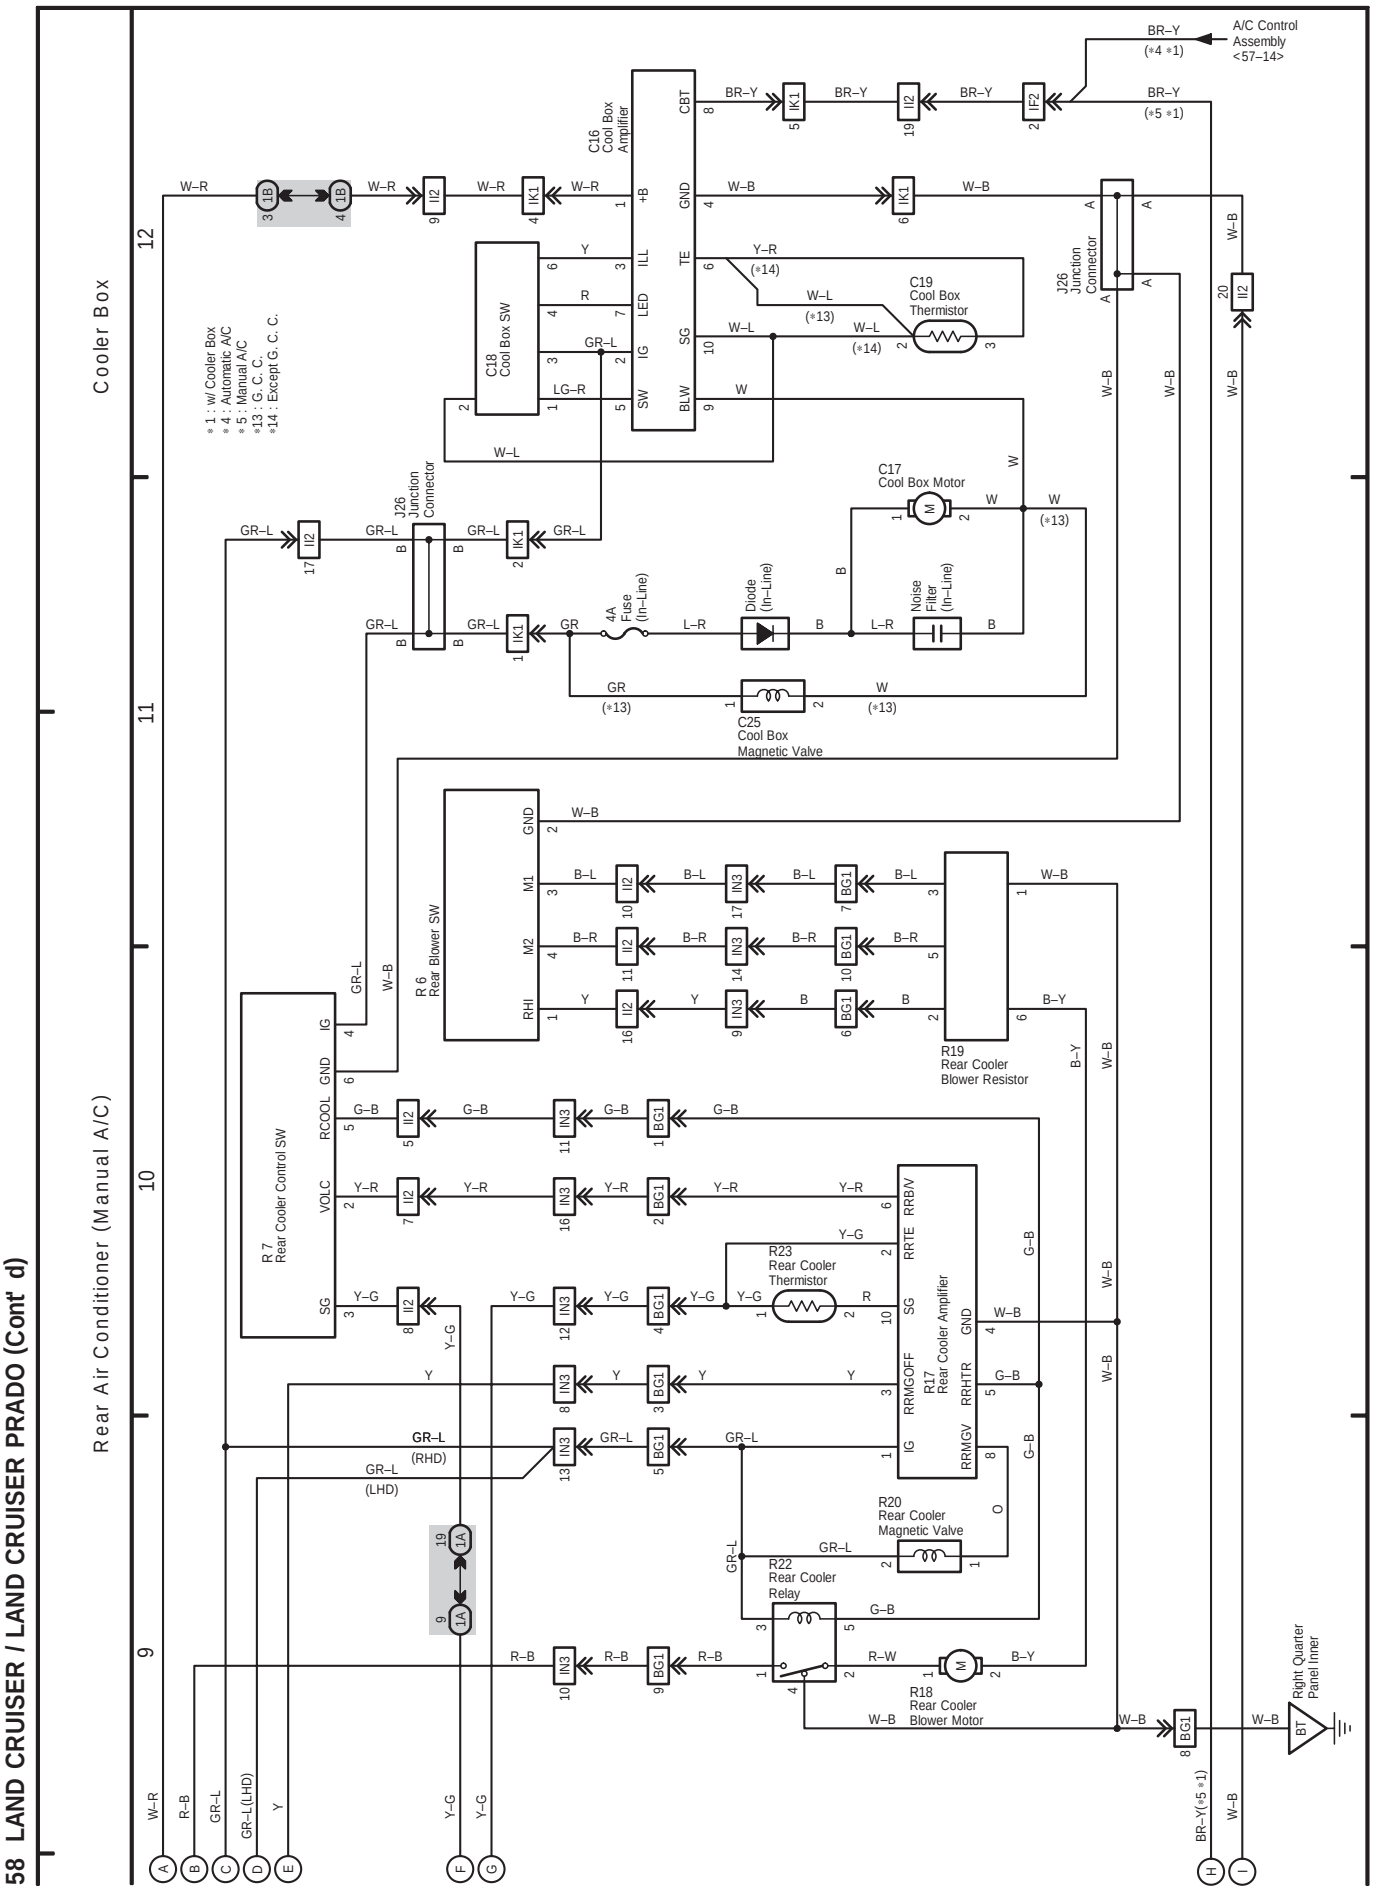

(Cont. next page)
58 LAND CRUISER / LAND CRUISER PRADO
Power Source
Condenser Fan
Air Conditioner (Manual A/C)
A31
Air Inlet Control
Servo Motor
H12
Heater Control SW
DEFOG Relay
<46–2>
MG CLT Relay
HEATER Relay
CDS FAN
Relay
MG CLT Relay
<57–3>
Viscous Heater
Amplifier
<56–3>
J21(A), J20(B)
Junction
Connector
J1
Junction Connector
B 5
Blower Resistor
B 6
Blower SW
F12
Front Blower
Motor
N 5
Noise Filter
(Condenser Fan)
A 2
A/C Condenser
Fan Motor
P 3
Pressure SW
I14
Ignition SW
J12
Junction
Connector
Right Kick Panel
J24
Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
Front Right Fender
Battery
7. 5A HEATER NO. 2
10A IG1 NO. 2
10A IG1
20A CDS FAN
50A AM1
140A ALT
50A HEATER
30A RR A/C
10A ECU–B
FL MAIN
3. 0W
Short Pin
* 1 : w/ Cooler Box
* 2 : 1KD–FTV
* 3 : 2TR–FE
* 4 : Automatic A/C
* 5 : Manual A/C
* 6 : Except 2TR–FE
* 7 : 1KZ–TE, 5L–E
* 8 : Except * 7

58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




Cooler Box
Rear Air Conditioner (Manual A/C)
58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
*1 : w/ Cooler Box
*4 : Automatic A/C
*5 : Manual A/C
*13 : G. C. C.
*14 : Except G. C. C.
A/C Control Assembly <57–14>
C16 Cool Box Amplifier
C18 Cool Box SW
C19 Cool Box Thermistor
C17 Cool Box Motor
C25 Cool Box Magnetic Valve
J26 Junction Connector
4A Fuse (In–Line)
Diode (In–Line)
Noise Filter (In–Line)
R 6 Rear Blower SW
R19 Rear Cooler Blower Resistor
R 7 Rear Cooler Control SW
R23 Rear Cooler Thermistor
R17 Rear Cooler Amplifier
R20 Rear Cooler Magnetic Valve
R22 Rear Cooler Relay
R18 Rear Cooler Blower Motor
Right Quarter Panel Inner
(RHD)
(LHD)