
WATER PUMP ASSY (1GR–FE)

160J0–01

INSPECTION

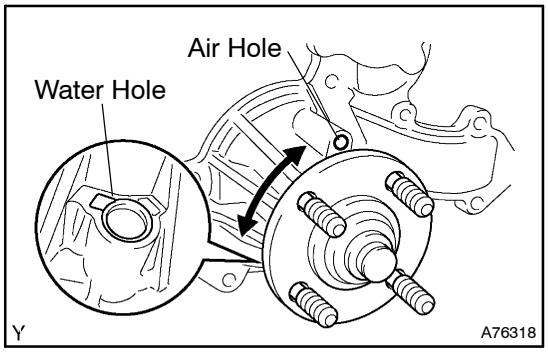

1. INSPECT WATER PUMP ASSY

(a) Visually check the air hole and water hole for coolant leakage.

If leakage is found, replace the water pump.

(b) Turn the pulley seat, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.