
010J7–02

VEHICLE LIFT AND SUPPORT LOCATIONS

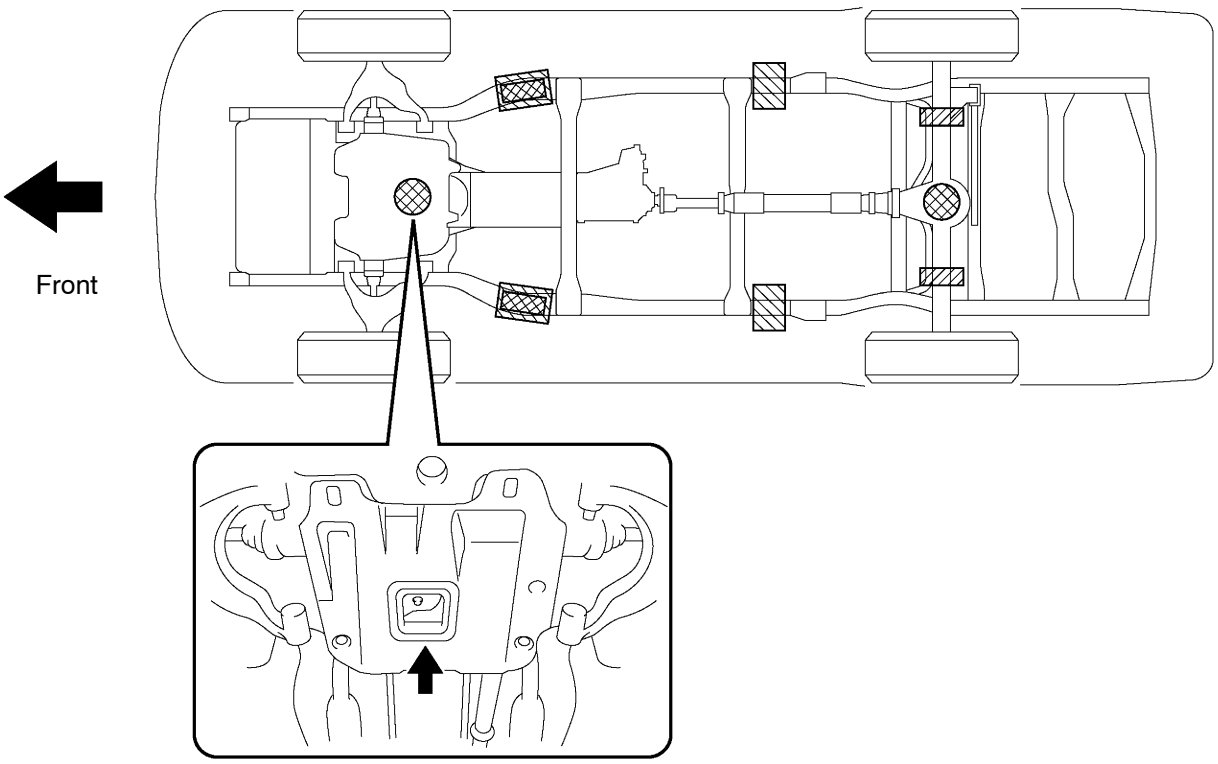

JACK POSITION -

Front - - - - - - - - - - - - - - - - - - Center of crossmember

Rear - - - - - - - - - - - - - - - - - - Center of rear axle housing

CAUTION: When jacking–up the front and rear, make sure the vehicle is not carrying any extra weight.

SUPPORT POSITION

Safety stand -

Swing arm type lift -

Y

D29295