


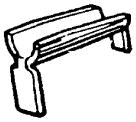
AUTOMATIC TRANSMISSION / TRANS



022H9–01

PREPARATION

SST

	09023–12700	Union Nut Wrench 17mm	AUTOMATIC TRANSMISSION ASSY(1GR–FE) TEMPERATURE SENSOR(1GR–FE)
	09032–00100	Oil Pan Seal Cutter	TRANSMISSION WIRE(1GR–FE) TRANSMISSION VALVE BODY ASSY(1GR–FE)
	09350–32014	TOYOTA Automatic Transmission Tool Set	AUTOMATIC TRANSMISSION ASSY(1GR–FE)
	(09351–32010)	One–way Clutch Test Tool	AUTOMATIC TRANSMISSION ASSY(1GR–FE)
	(09351–32020)	Stator Stopper	AUTOMATIC TRANSMISSION ASSY(1GR–FE)

Recomended Tools

	09040–00011	Hexagon Wrench Set	TRANSMISSION WIRE(1GR–FE) TRANSMISSION VALVE BODY ASSY(1GR–FE)
	(09043–20100)	Socket Hexagon Wrench 10	TRANSMISSION WIRE(1GR–FE) TRANSMISSION VALVE BODY ASSY(1GR–FE)

Equipment

Straight edge	Torque converter
Vernier calipers	Torque converter
Dial indicator or dial indicator with magnetic base	Drive plate
Punch	
Torque wrench	

Lubricant

Item	Capacity	Classification
Automatic transaxle fluid Dry fill Drain and refill	 12.3 liters (13.0 US qts, 10.8 lmp.qts) 2.0 liters (2.1 US qts, 1.8 lmp.qts)	ATF Type T–IV