
DTC	P0660	INTAKE MANIFOLD TUNING VALVE CONTROL CIRCUIT/OPEN (BANK 1)


CIRCUIT DESCRIPTION

The acoustic control induction system (ACIS) has been adopted for obtaining high power torque in all engine speed range from low to high. This circuit is used to open and close the intake air control valve (IACV) in response to an engine load and helps that increasing the intake air efficiency inside the intake manifold. When the engine speed is between 2,200 and 4,100 rpm and an opening angle of the throttle valve is 60° or more, the ECM supplies current to the VSV to close the IACV (The VSV is ON). Other than this, the IACV is usually open and the VSV is off.

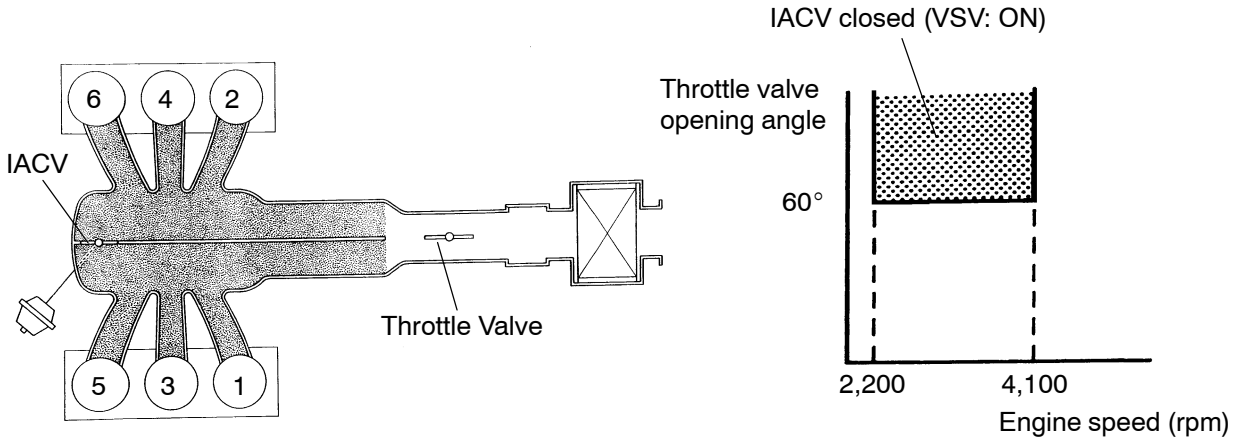


DTC No.	DTC Detection Condition	Trouble Area
P0660	Following conditions are met simultaneously for 0.5 sec. or more (2 trip detection logic) (a) Voltage of terminal ACIS of the ECM is low when VSV is OFF. (b) After engine has started.	• Open or short in VSV for ACIS circuit • VSV for ACIS • ECM

WIRING DIAGRAM

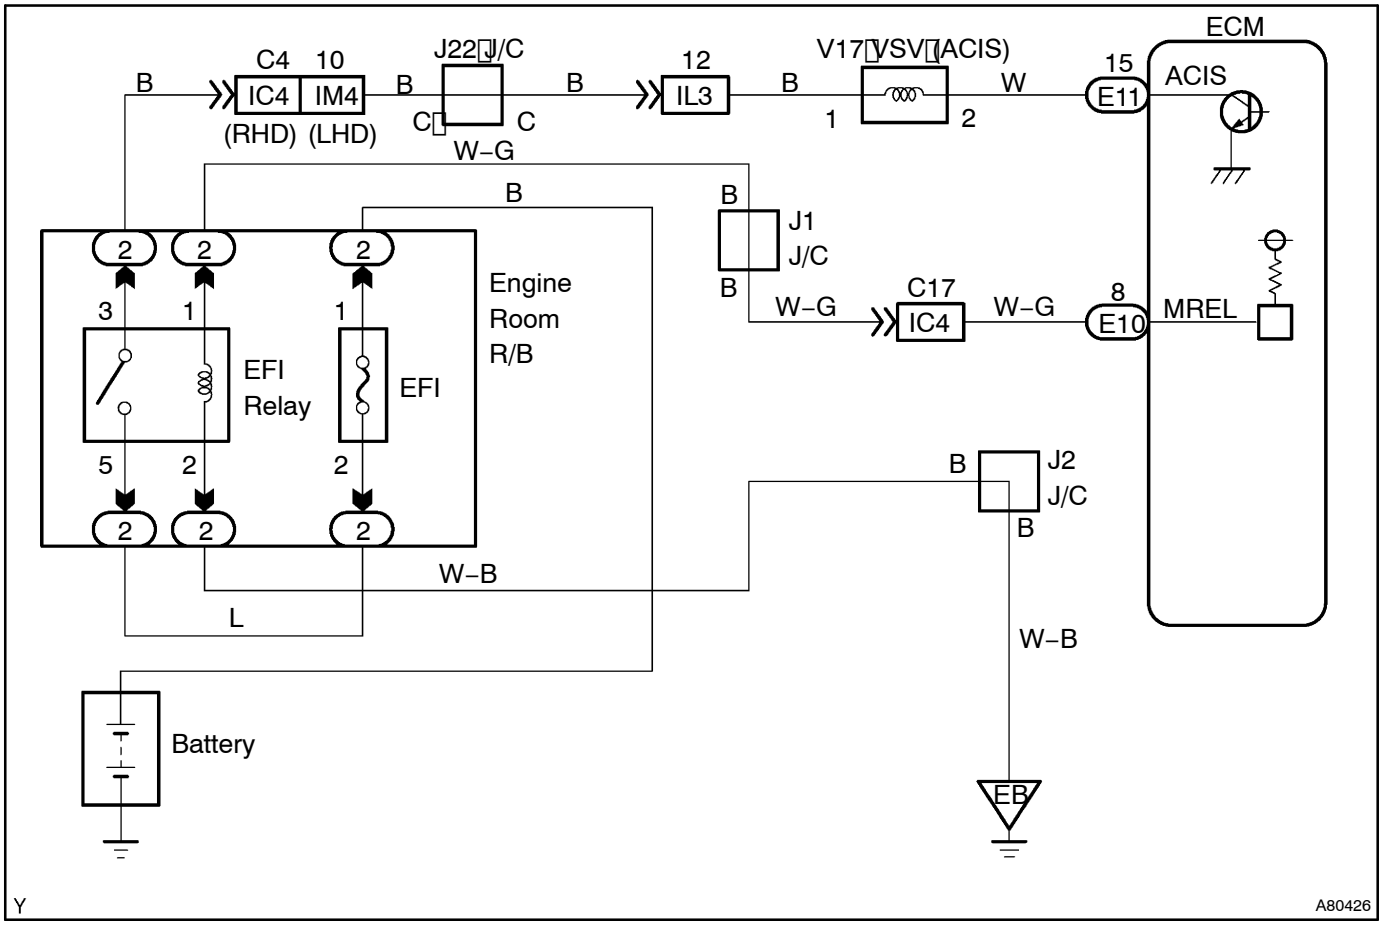

INSPECTION PROCEDURE

1	PERFORM ACTIVE TEST BY HAND–HELD TESTER (OPERATE VSV FOR ACIS)

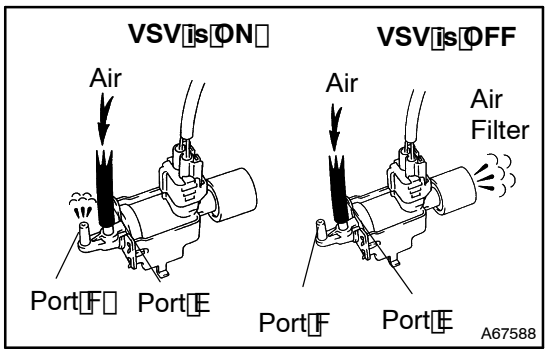

(a) Disconnect the vacuum hose.
(b) Connect the hand–held tester to the DLC3.
(c) Turn the ignition switch ON and hand–held tester main switch ON.
(d) Select the item "DIAGNOSIS / OBD/MOBD / ACTIVE TEST / INTAKE CTL VSV1" and operate the VSV for AICS.
(e) Select the ACTIVE TEST mode on the hand–held tester.
(f) Check the VSV operation when it is operated by the hand–held tester.


Standard:

Tester operation	Specified condition
VSV is ON	Air from port E flows out through port F
VSV is OFF	Air from port E flows out through the air filter


OK	CHECK FOR INTERMITTENT PROBLEMS (See page 05–7)

NG

2	CHECK VSV FOR ACIS(OPERATION)

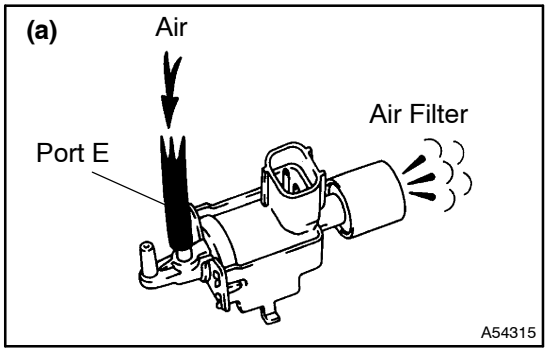

(a) Check that air flows from port E to the air filter.

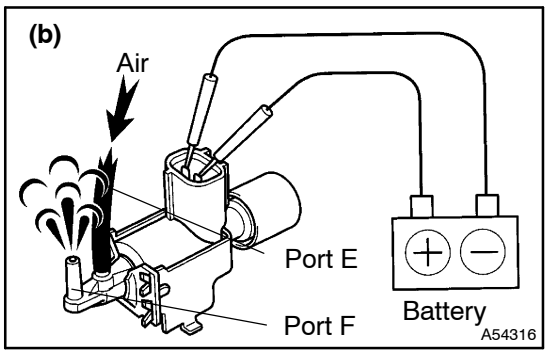


(b) Apply battery positive voltage across the terminals.
(c) Check that air flows from port E to port F.

NG → **REPLACE VSV FOR ACIS**

OK

3	CHECK HARNESS AND CONNECTOR (VSV FOR ACIS – ECM, VSV FOR ACIS – EFI RELAY)

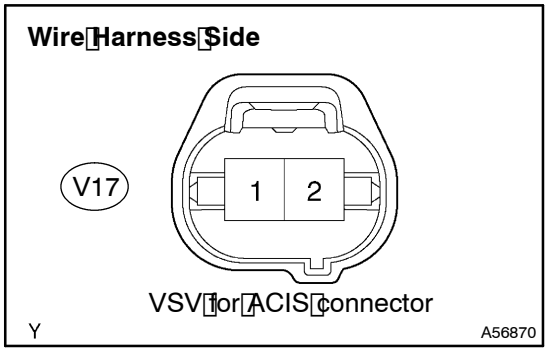


(a) Check the wire harness between the VSV for ACIS connector and the ECM connector.
(1) Disconnect the VSV for ACIS connector.
(2) Disconnect the E11 ECM connector.
(3) Check for continuity between the wire harness side connectors.

Standard (Check for open):

Symbols (Terminal No.)	Specified condition
VSV for ACIS (V17–2) – ACIS (E11–15)	Continuity

Standard (Check for short):


Symbols (Terminal No.)	Specified condition
VSV for ACIS (V17–2) or ACIS (E11–15) – E1 (E13–1)	No continuity

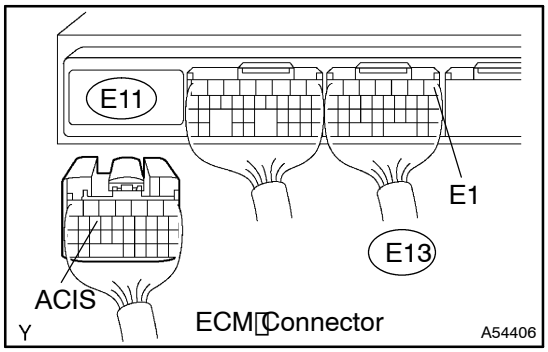

(b) Check the wire harness between the VSV for ACIS connector and the EFI relay.
(1) Disconnect the VSV for ACIS connector.
(2) Remove the EFI relay from the engine room R/B.
(3) Check for continuity between the wire harness side connectors.

Standard (Check for open):

Symbols (Terminal No.)	Specified condition
VSV for ACIS (V17–1) – EFI relay terminal 3 of R/B	Continuity

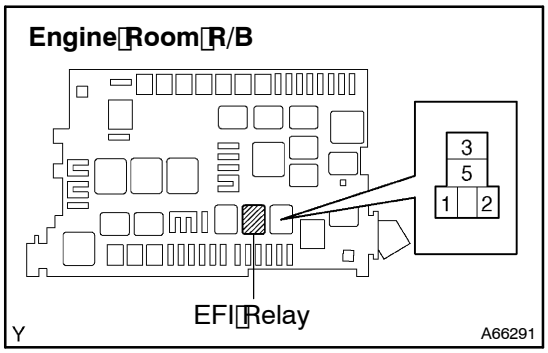

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE ECM (See page 01–35)