
ACCELERATOR PEDAL ROD ASSY (1GR–FE)

100DC–02

REPLACEMENT

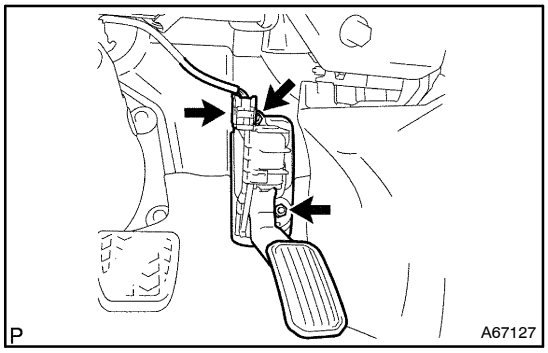

1. REMOVE ACCELERATOR PEDAL ROD ASSY

(a) Disconnect the accelerator pedal connector.

(b) Remove the 2 nuts and the accelerator pedal assembly.

2. INSTALL ACCELERATOR PEDAL ROD ASSY

NOTICE:

- **Avoid physical shock to the accelerator pedal assembly.**
- **Do not disassemble the accelerator pedal assembly.**

(a) Install the accelerator pedal assy with the 2 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

(b) Connect the accelerator pedal connector.