
FUEL PRESSURE REGULATOR ASSY (1GR–FE)


110OW–02

REPLACEMENT

1. DISCHARGE FUEL SYSTEM PRESSURE (See page 11–1)
2. REMOVE V–BANK COVER (See page 10–7)

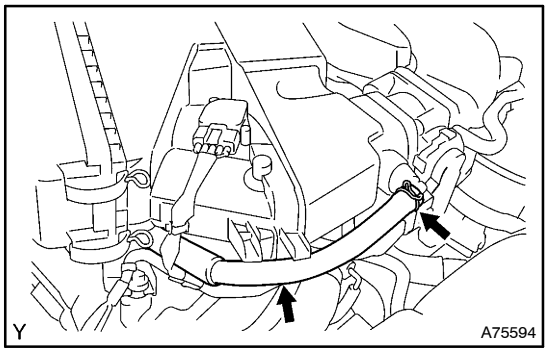

3. DISCONNECT VENTILATION HOSE NO.2
4. REMOVE AIR CLEANER ASSY (See page 10–7)
5. DISCONNECT FUEL PIPE SUB–ASSY NO.2 (See page 11–12)

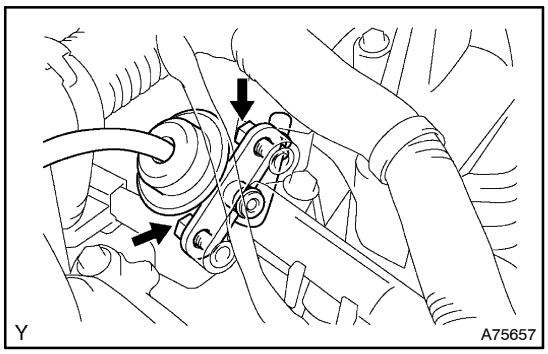

6. REMOVE FUEL PRESSURE REGULATOR ASSY
(a) Remove the 2 bolts and the fuel pressure regulator.
(b) Remove the vacuum hose.

7. INSTALL FUEL PRESSURE REGULATOR ASSY
(a) Install the vacuum hose.
(b) Apply a light coat of spindle oil or gasoline to a new O–ring and install it to the fuel pressure regulator.
(c) Install the fuel pressure regulator with the 2 bolts.
Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)
8. CONNECT FUEL PIPE SUB–ASSY NO.2 (See page 11–12)
9. INSTALL AIR CLEANER ASSY (See page 10–7)
10. CONNECT VENTILATION HOSE NO.2
11. INSTALL V–BANK COVER (See page 10–7)
12. CHECK FOR FUEL LEAKS (See page 11–5)