
FUEL PRESSURE PULSATION DAMPER ASSY (1GR–FE)

110OY–02

REPLACEMENT

1. **DISCHARGE FUEL SYSTEM PRESSURE (See page 11–1)**
2. **REMOVE V–BANK COVER (See page 10–7)**

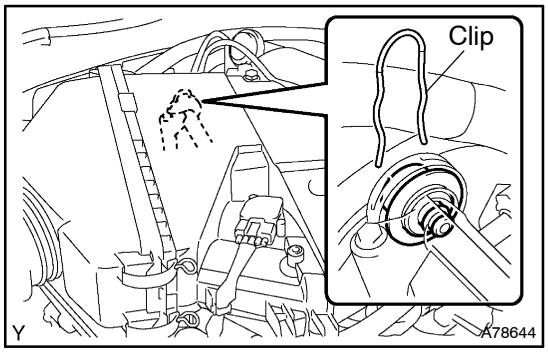

3. **REMOVE FUEL PRESSURE PULSATION DAMPER ASSY**

(a) Remove the clip.

(b) Pull out the fuel pressure pulsation damper from the fuel delivery pipe.

4. **INSTALL FUEL PRESSURE PULSATION DAMPER ASSY**

(a) Apply a light coat of spindle oil or gasoline to a new O–ring and install it to the fuel pressure pulsation damper.

(b) Install the fuel pressure pulsation damper to the fuel delivery pipe.

(c) Install the clip.

5. **INSTALL V–BANK COVER (See page 10–7)**
6. **CHECK FOR FUEL LEAKS (See page 11–5)**