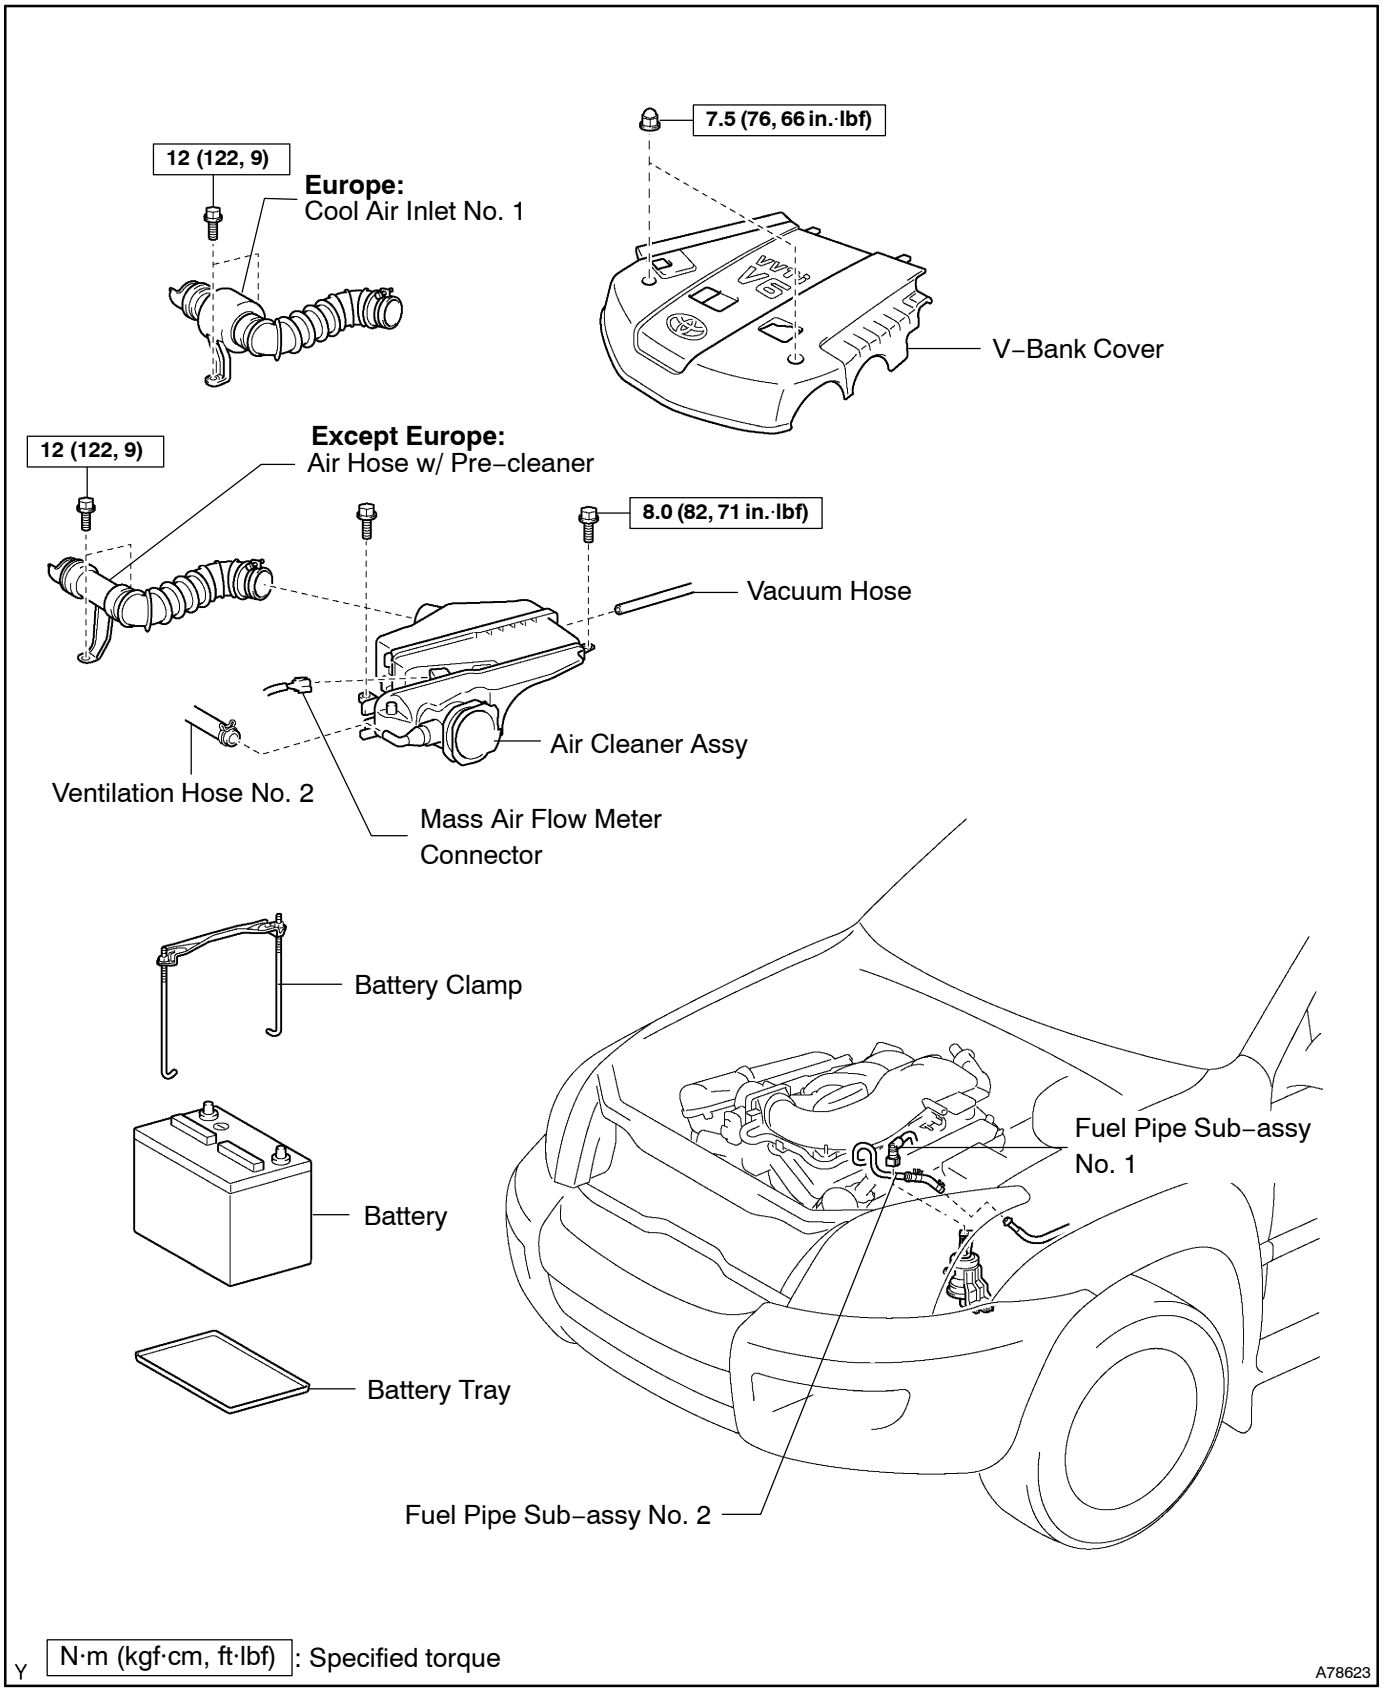
CYLINDER HEAD GASKET (1GR–FE)

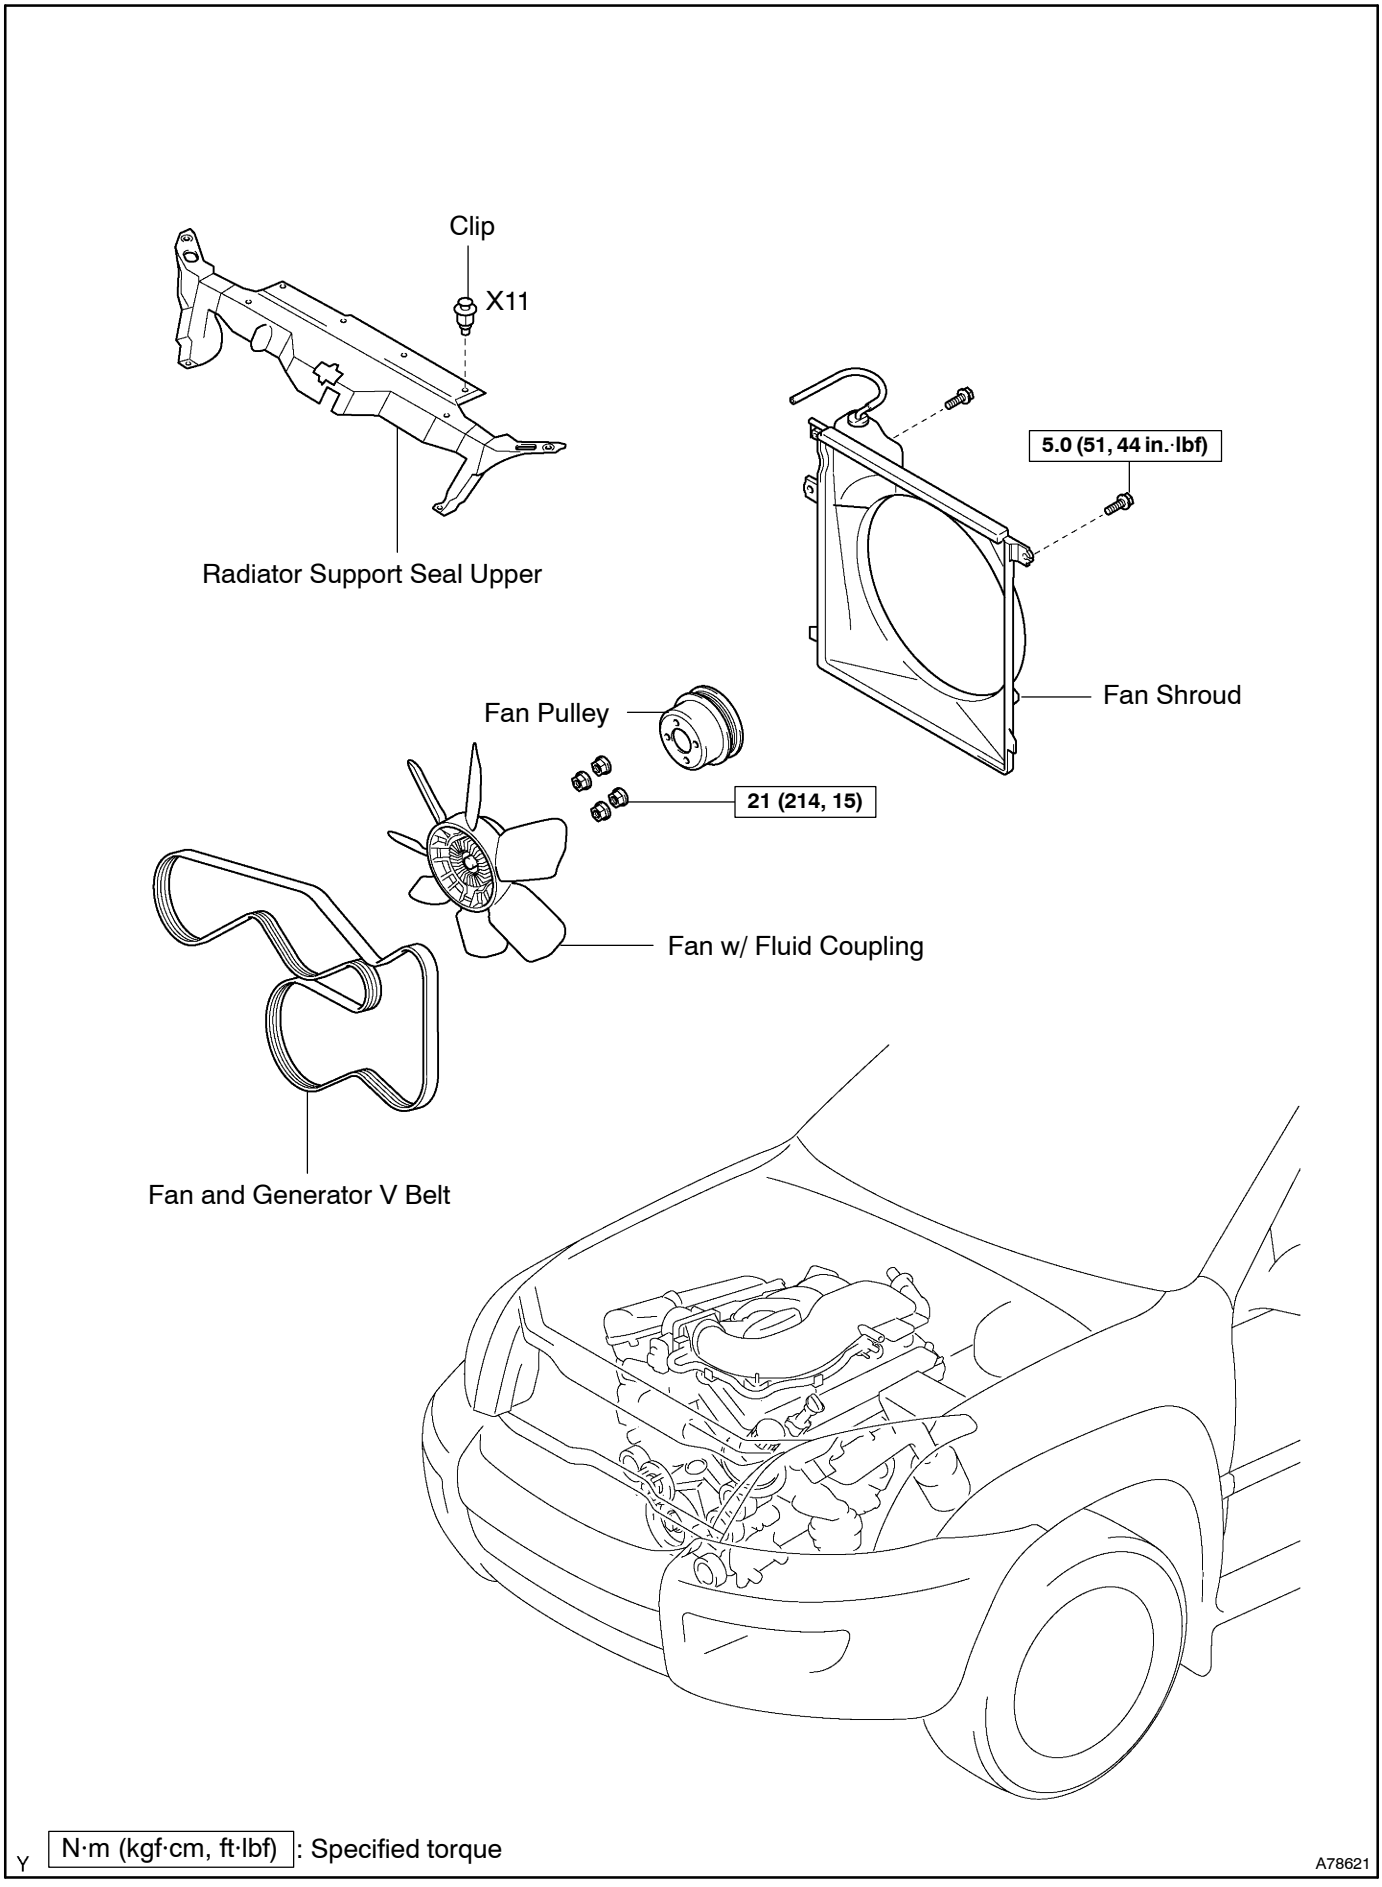
COMPONENTS

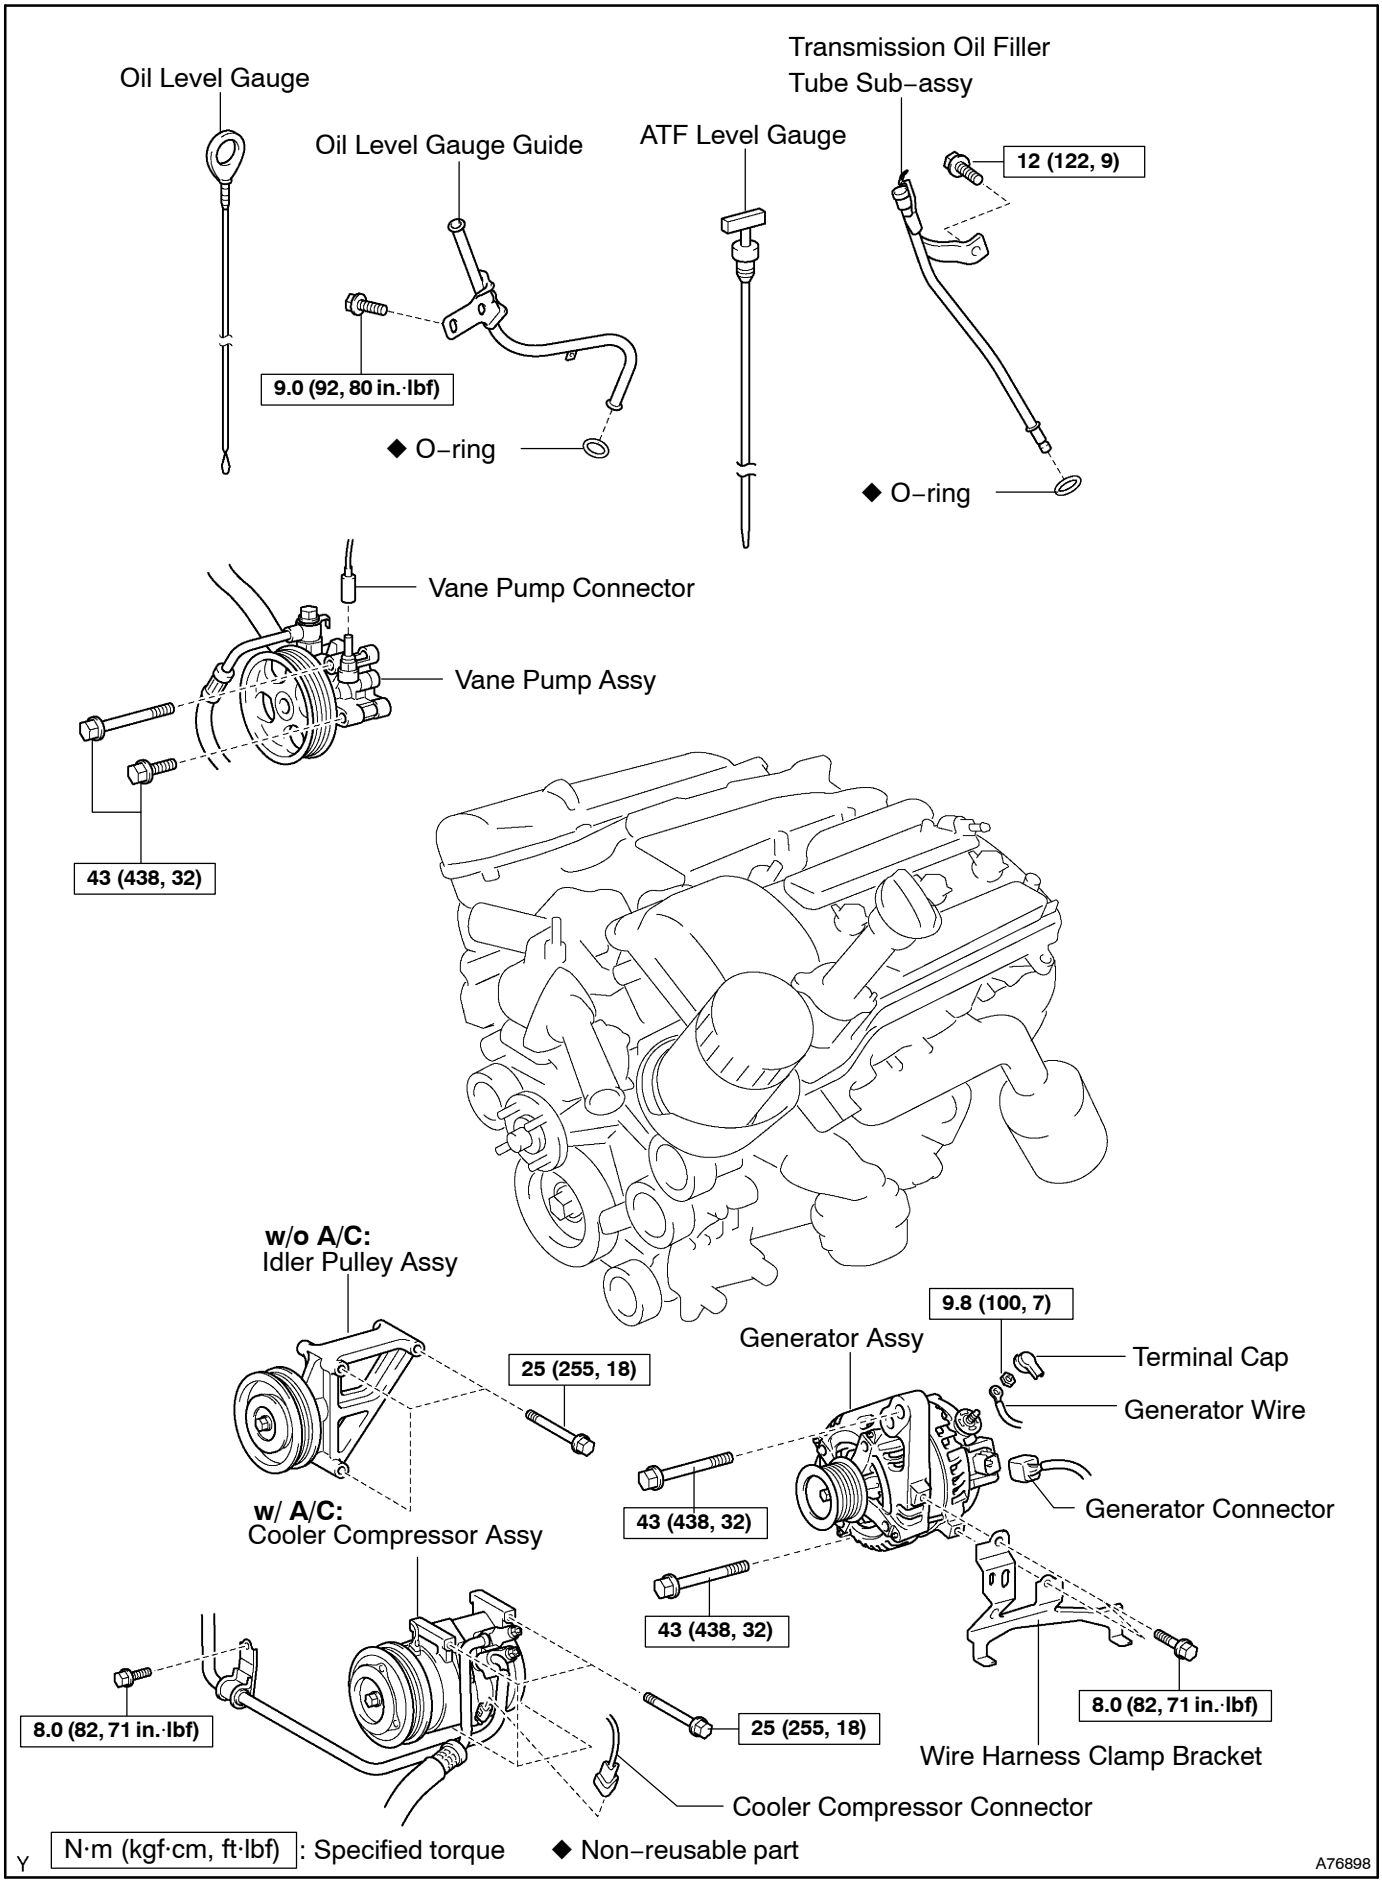
14161–02

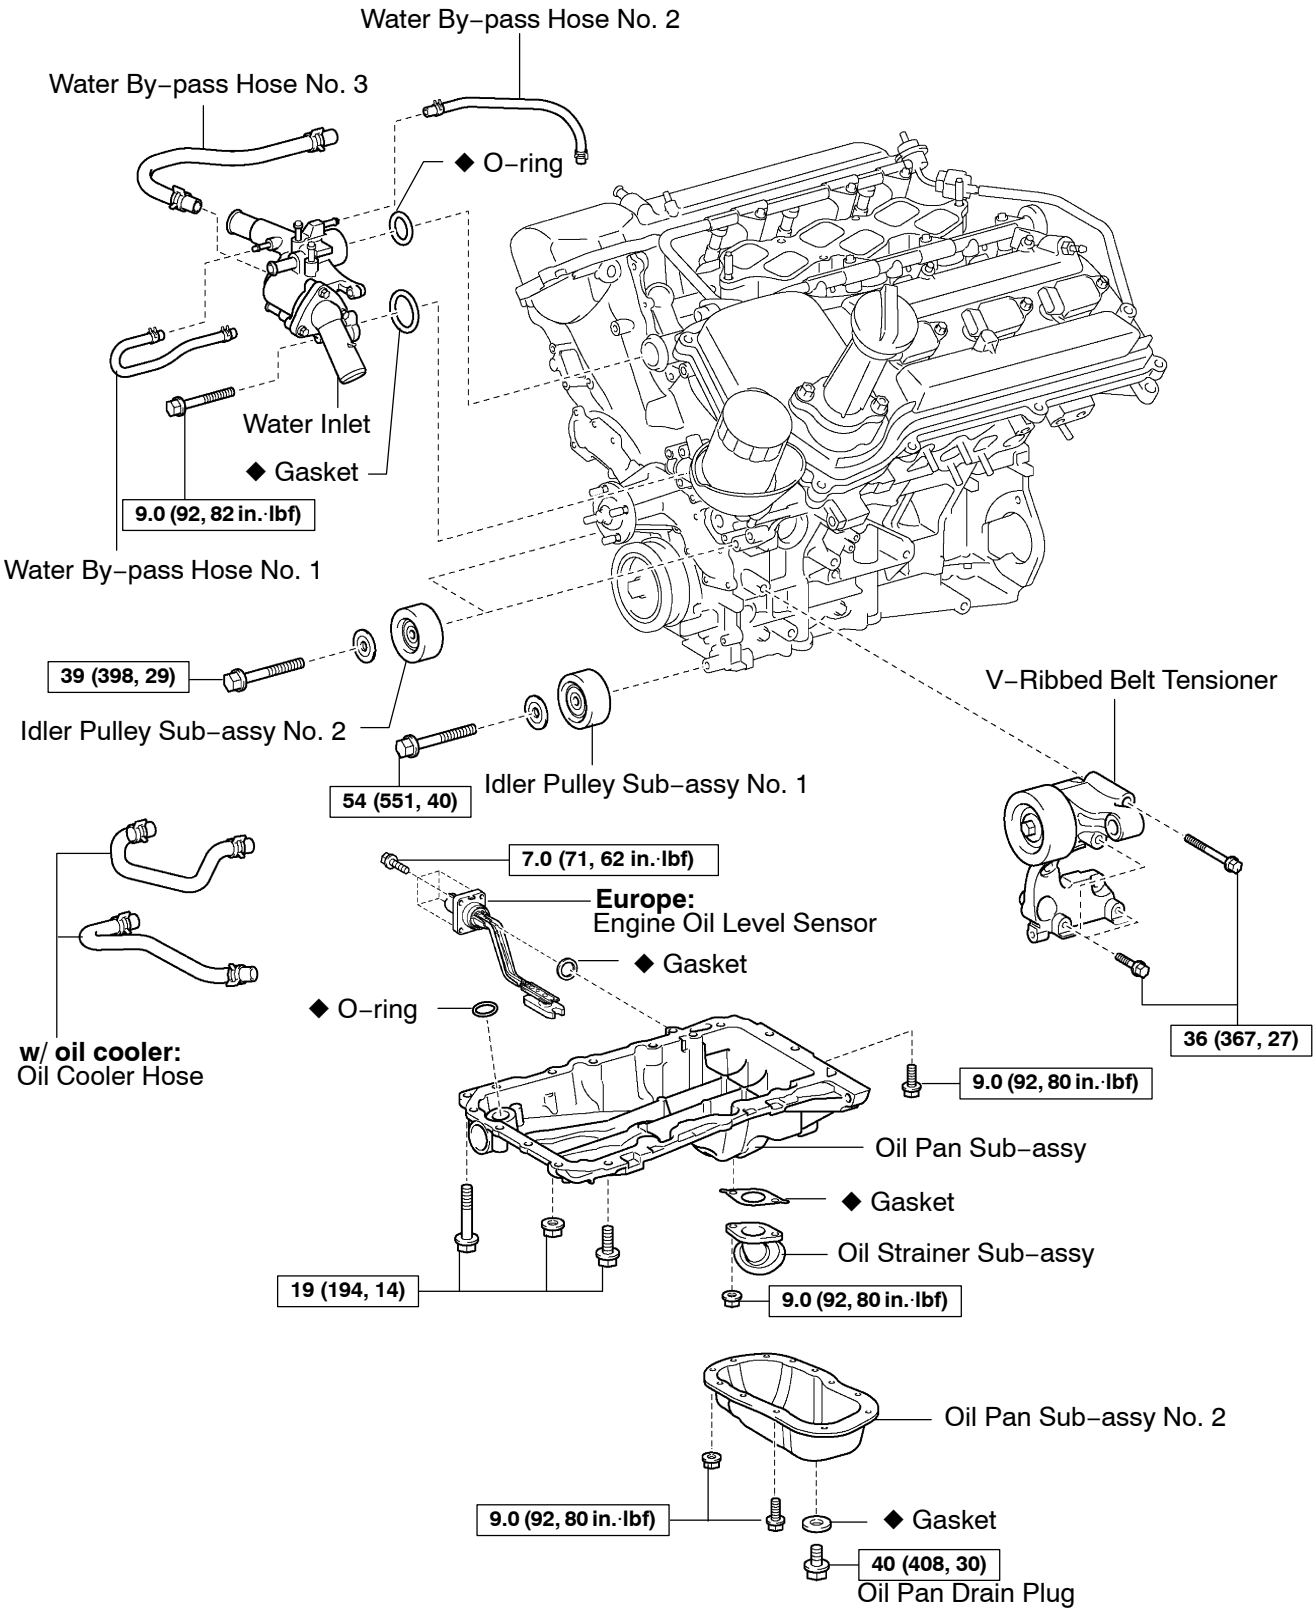


Y N·m (kgf·cm, ft·lbf) : Specified torque

A78623


Clip
X11
Radiator Support Seal Upper
5.0 (51, 44 in.·lbf)
Fan Shroud
Fan Pulley
21 (214, 15)
Fan w/ Fluid Coupling
Fan and Generator V Belt
Y
N·m (kgf·cm, ft·lbf) : Specified torque
A78621

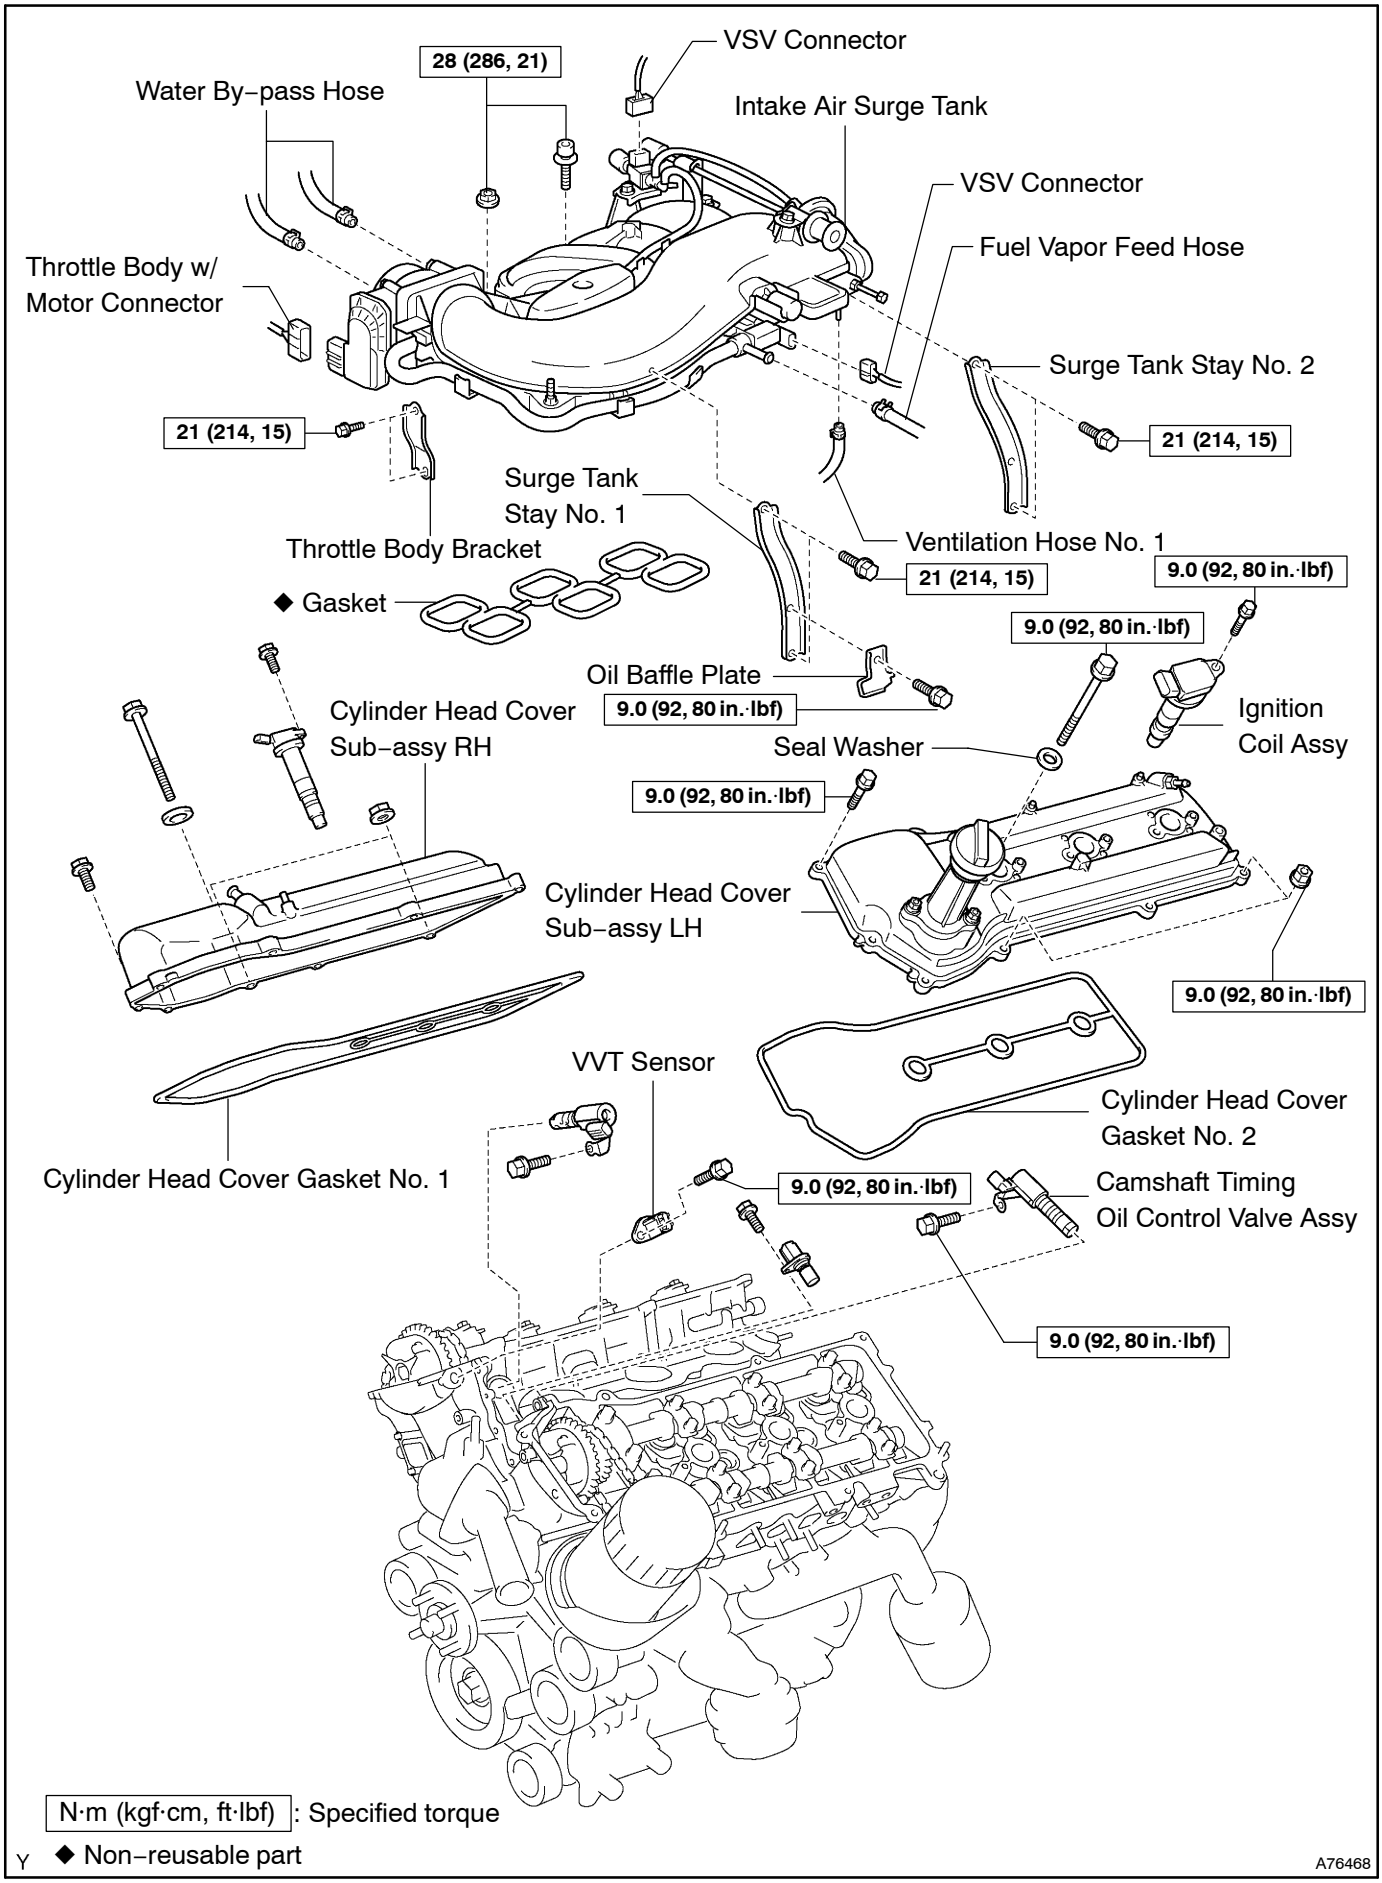

Oil Level Gauge
Oil Level Gauge Guide
9.0 (92, 80 in.·lbf)
◆ O–ring
ATF Level Gauge
Transmission Oil Filler Tube Sub–assy
12 (122, 9)
◆ O–ring
Vane Pump Connector
Vane Pump Assy
43 (438, 32)
w/o A/C:
Idler Pulley Assy
25 (255, 18)
w/ A/C:
Cooler Compressor Assy
8.0 (82, 71 in.·lbf)
25 (255, 18)
Cooler Compressor Connector
9.8 (100, 7)
Generator Assy
Terminal Cap
Generator Wire
Generator Connector
43 (438, 32)
43 (438, 32)
8.0 (82, 71 in.·lbf)
Wire Harness Clamp Bracket
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
Y
A76898

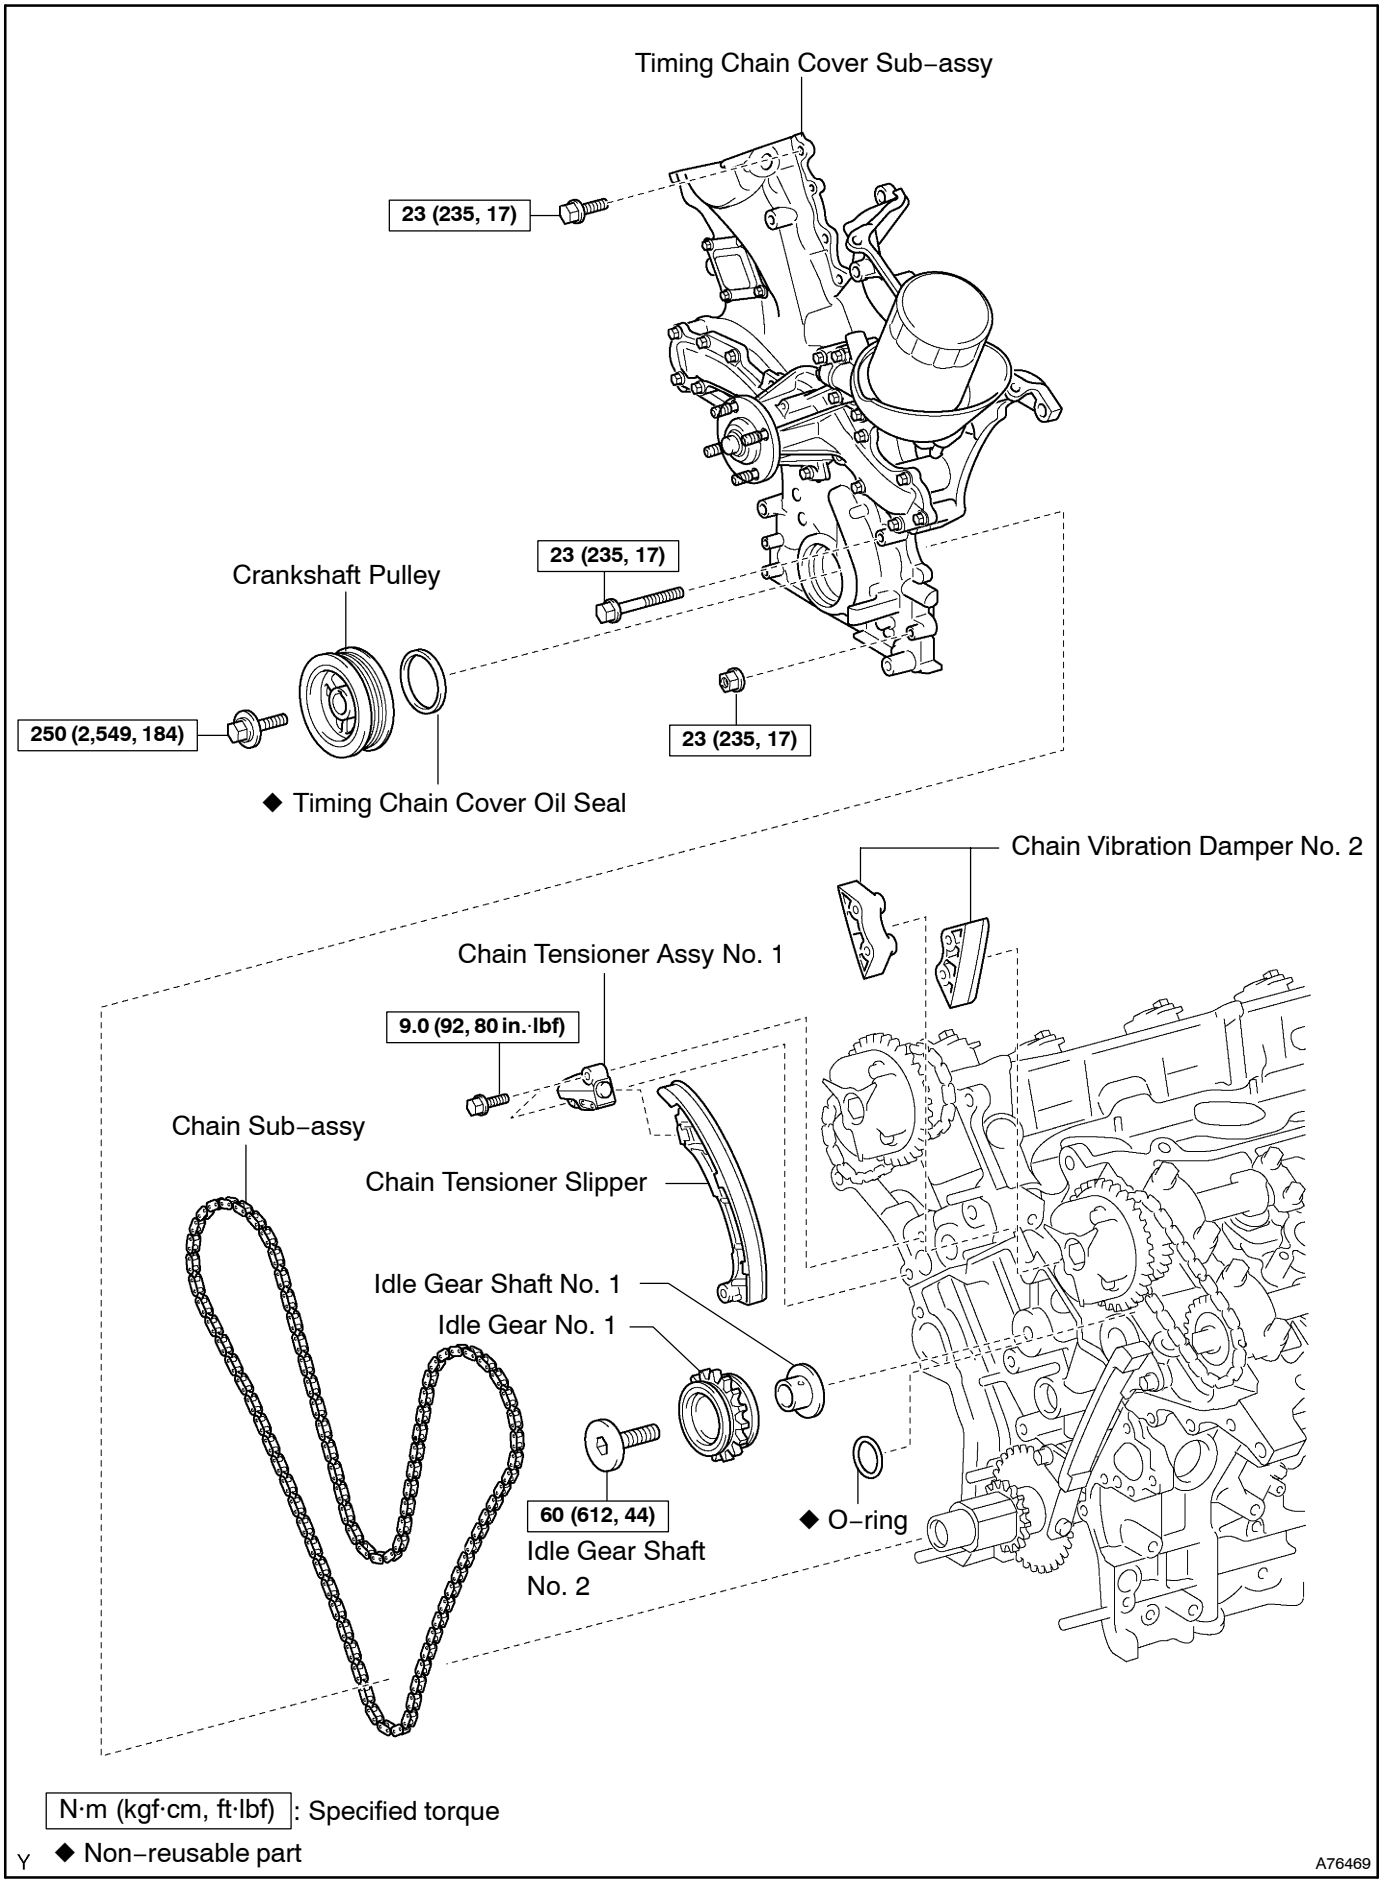


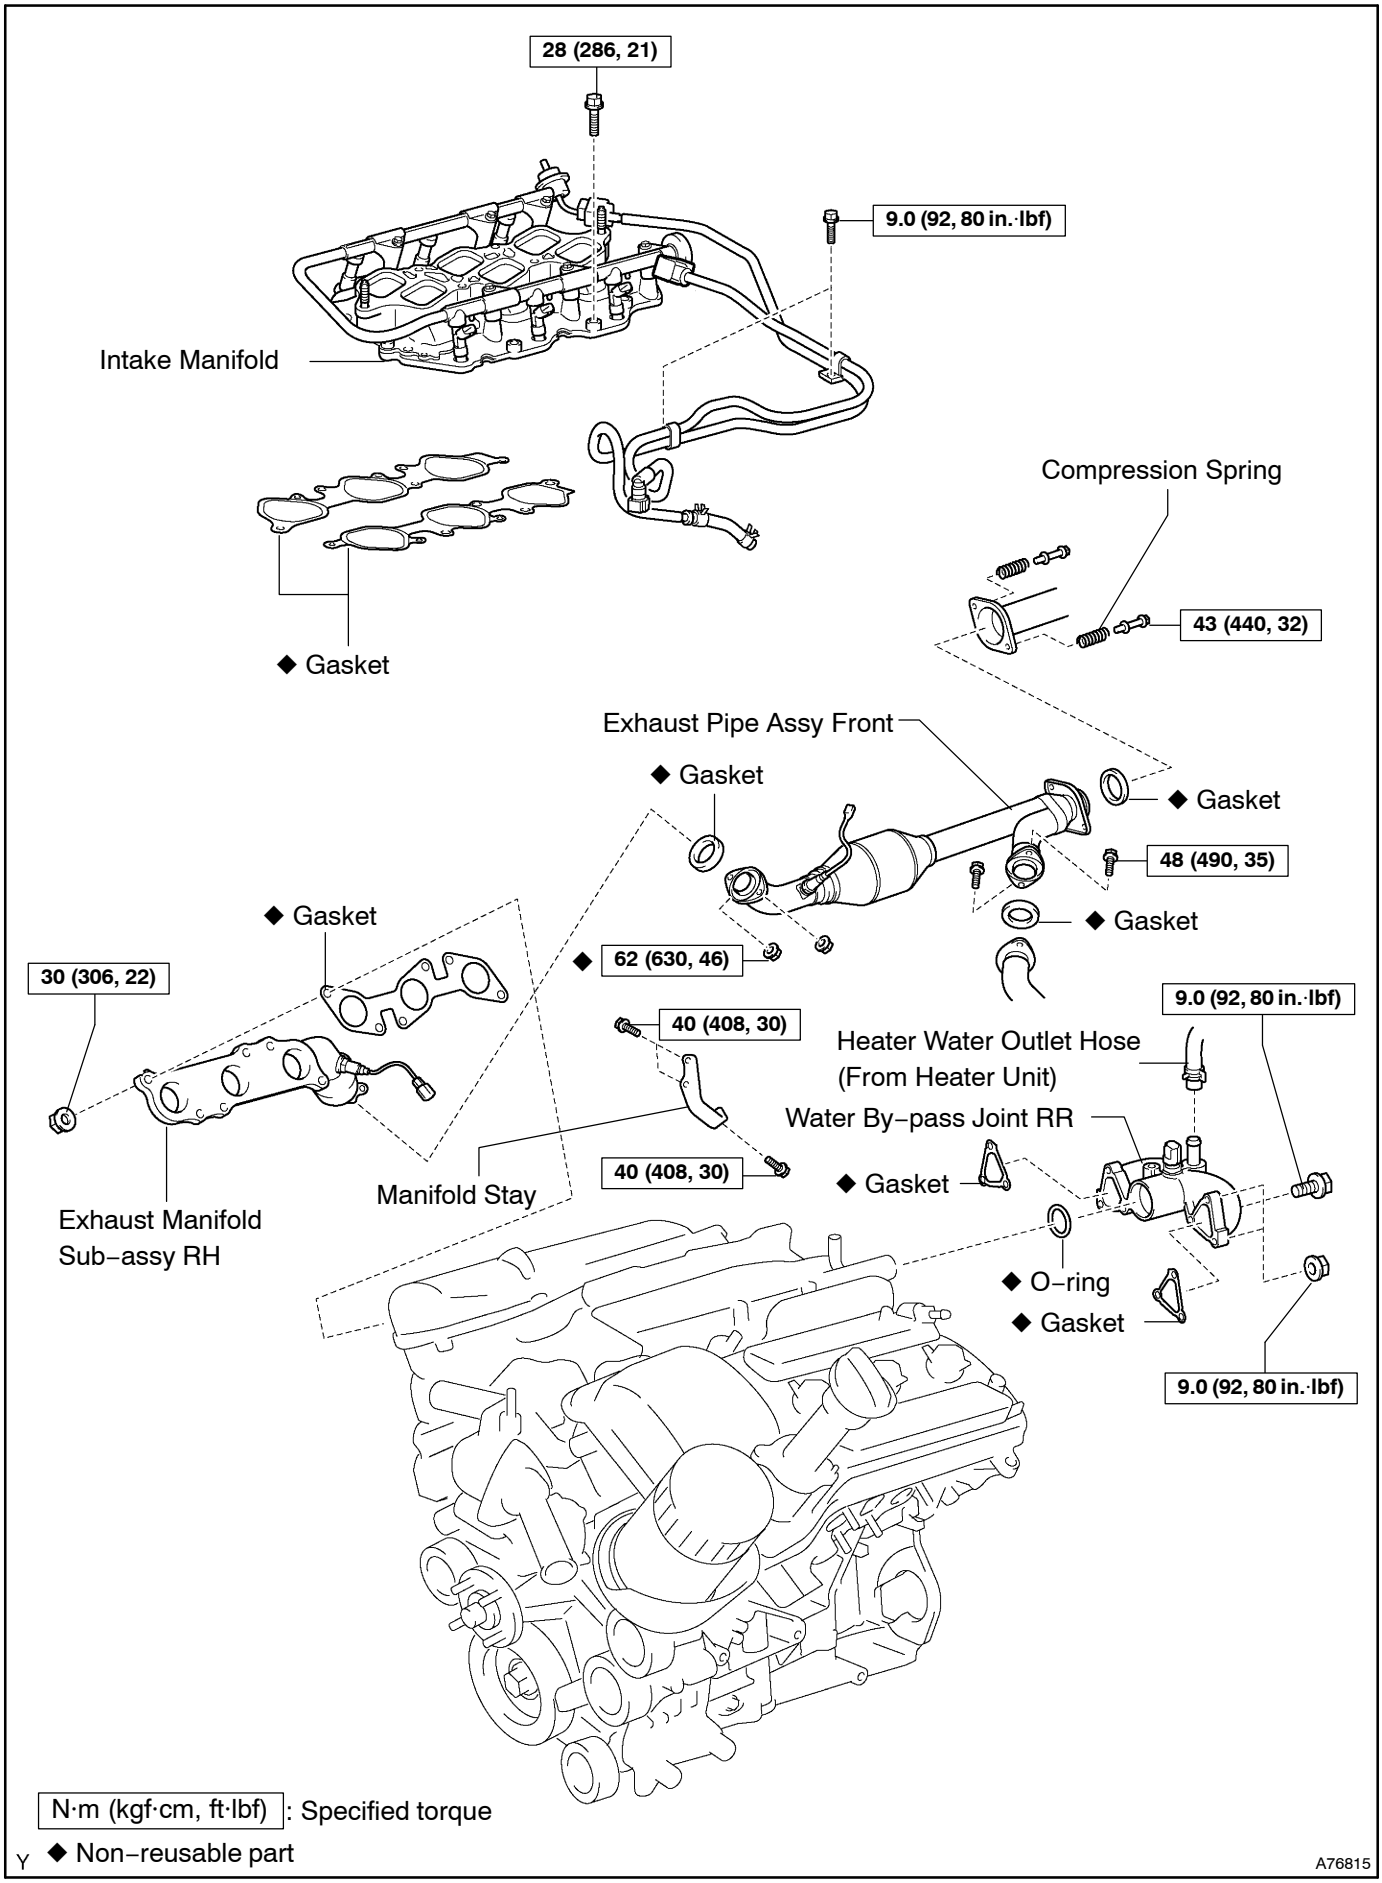
N·m (kgf·cm, ft·lbf) : Specified torque

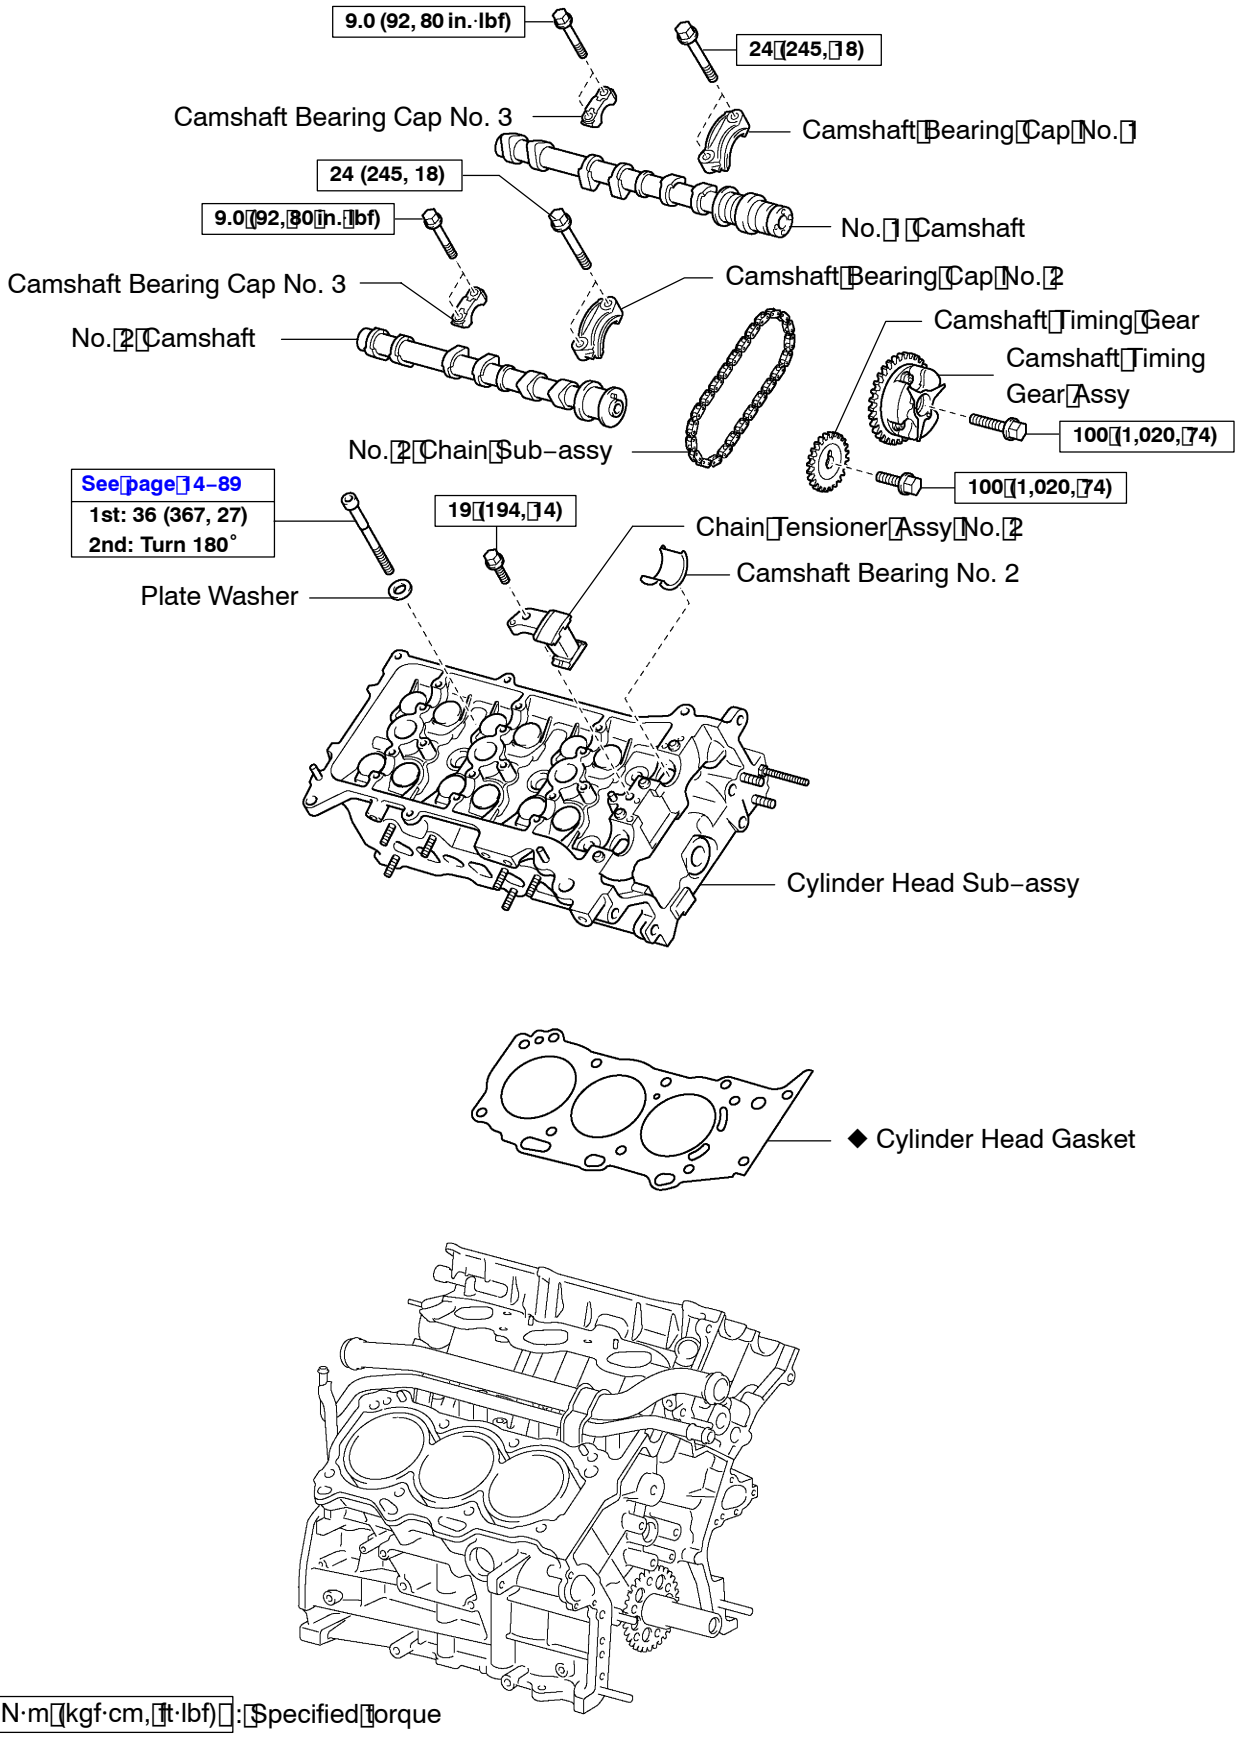
◆ Non–reusable part

A76897


VSV Connector
28 (286, 21)
Water By–pass Hose
Intake Air Surge Tank
VSV Connector
Fuel Vapor Feed Hose
Throttle Body w/
Motor Connector
Surge Tank Stay No. 2
21 (214, 15)
21 (214, 15)
Surge Tank
Stay No. 1
Ventilation Hose No. 1
Throttle Body Bracket
21 (214, 15)
9.0 (92, 80 in.·lbf)
◆ Gasket
9.0 (92, 80 in.·lbf)
Oil Baffle Plate
9.0 (92, 80 in.·lbf)
Cylinder Head Cover
Sub–assy RH
Seal Washer
Ignition
Coil Assy
9.0 (92, 80 in.·lbf)
Cylinder Head Cover
Sub–assy LH
9.0 (92, 80 in.·lbf)
VVT Sensor
Cylinder Head Cover
Gasket No. 2
Cylinder Head Cover Gasket No. 1
9.0 (92, 80 in.·lbf)
Camshaft Timing
Oil Control Valve Assy
9.0 (92, 80 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A76468


Timing Chain Cover Sub–assy
23 (235, 17)
Crankshaft Pulley
23 (235, 17)
250 (2,549, 184)
23 (235, 17)
◆ Timing Chain Cover Oil Seal
Chain Vibration Damper No. 2
Chain Tensioner Assy No. 1
9.0 (92, 80 in.·lbf)
Chain Sub–assy
Chain Tensioner Slipper
Idle Gear Shaft No. 1
Idle Gear No. 1
60 (612, 44)
Idle Gear Shaft No. 2
◆ O–ring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A76469


28 (286, 21)
9.0 (92, 80 in.·lbf)
Intake Manifold
◆ Gasket
Compression Spring
43 (440, 32)
Exhaust Pipe Assy Front
◆ Gasket
◆ Gasket
48 (490, 35)
◆ Gasket
◆ Gasket
30 (306, 22)
◆ 62 (630, 46)
40 (408, 30)
9.0 (92, 80 in.·lbf)
Heater Water Outlet Hose
(From Heater Unit)
Water By–pass Joint RR
40 (408, 30)
◆ Gasket
Manifold Stay
Exhaust Manifold
Sub–assy RH
◆ O–ring
◆ Gasket
9.0 (92, 80 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A76815


9.0 (92, 80 in.·lbf)
24 (245, 18)
Camshaft Bearing Cap No. 3
Camshaft Bearing Cap No. 1
24 (245, 18)
9.0 (92, 80 in.·lbf)
No. 1 Camshaft
Camshaft Bearing Cap No. 3
Camshaft Bearing Cap No. 2
No. 2 Camshaft
Camshaft Timing Gear
Camshaft Timing Gear Assy
100 (1,020, 74)
No. 2 Chain Sub–assy
100 (1,020, 74)
See page 14–89
1st: 36 (367, 27)
2nd: Turn 180°
19 (194, 14)
Chain Tensioner Assy No. 2
Plate Washer
Camshaft Bearing No. 2
Cylinder Head Sub–assy
◆ Cylinder Head Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A76477