STARTER ASSY (1GR–FE)


190LJ–02

REPLACEMENT

1. REMOVE ENGINE UNDER COVER ASSY REAR


(a) Remove the 4 bolts and the engine under cover assy rear.

2. REMOVE EXHAUST FRONT PIPE ASSY NO.2 (See page 15–3)

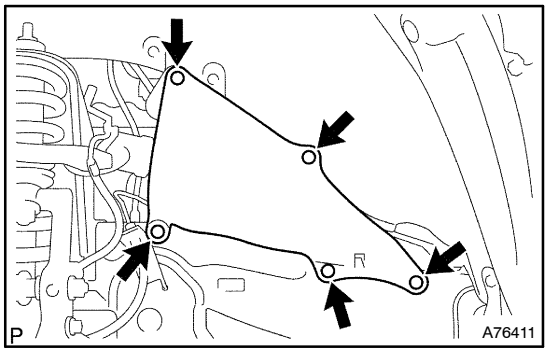

3. REMOVE FRONT FENDER SPLASH SHIELD REAR LH

(a) Remove the 5 clips and the front fender splash shield rear LH.

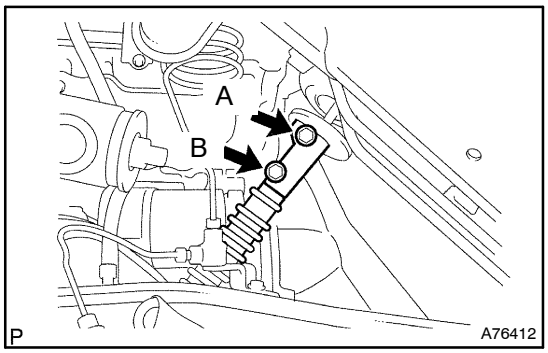

4. SEPARATE STEERING INTERMEDIATE SHAFT SUB–ASSY NO.2 (LHD STEERING POSITION TYPE)

(a) Loosen bolt A and remove bolt B, then separate the steering intermediate shaft No. 2.

5. REMOVE STARTER ASSY

(a) Disconnect the terminal 50 connector from the starter assy.

(b) Remove the nut and disconnect the wire harness from terminal 30.


(c) Remove the 2 bolts and the starter assy.

6. INSTALL STARTER ASSY

(a) Install the starter assy with the 2 bolts.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

(b) Connect the wire harness to terminal 30 and install the nut.
Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)

(c) Connect terminal 50 to the starter assy.

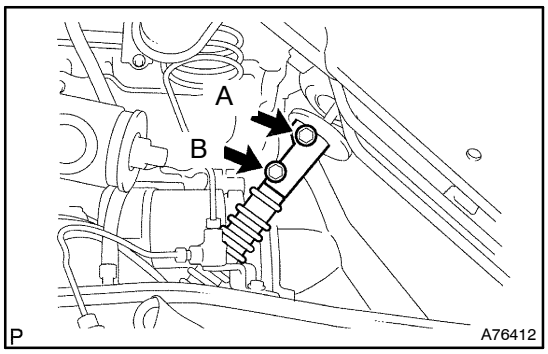

7. INSTALL STEERING INTERMEDIATE SHAFT SUB–ASSY NO.2 (LHD STEERING POSITION TYPE)

(a) Install the steering sliding yoke to the steering intermediate shaft No. 2.

(b) Install bolt B and tighten bolts B and A.
Torque: 36 N·m (370 kgf·cm, 27 ft·lbf) for bolt A, B

8. INSTALL FRONT FENDER SPLASH SHIELD REAR LH

(a) Install the front fender splash shield rear LH with the 5 clips.

9. INSTALL EXHAUST FRONT PIPE ASSY NO.2 (See page 15–3)

10. INSTALL ENGINE UNDER COVER ASSY REAR

(a) Install the engine under cover assy rear with the 4 bolts.

Torque: 29 N·m (296 kgf·cm, 21 ft·lbf)