
# SPEED SENSOR (A340F)

## REPLACEMENT


40101–01

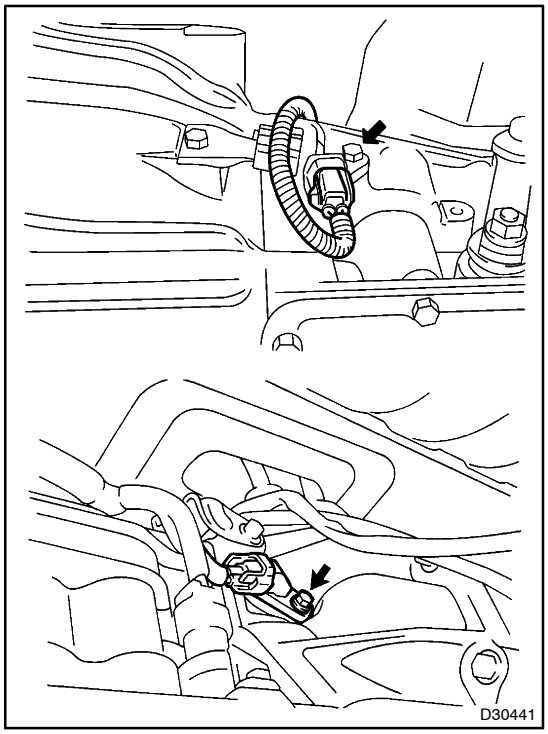



**1. REMOVE SPEED SENSOR**

(a) Disconnect the speed sensor connector.

(b) Remove the 2 bolts and 2 speed sensors.

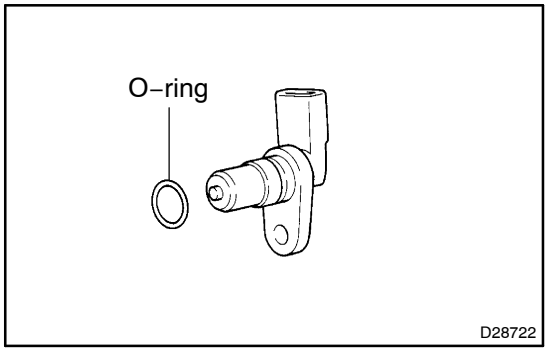



(c) Remove the 2 O–rings from the 2 speed sensors.

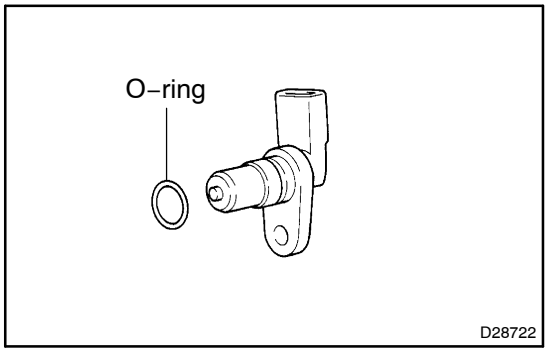


**2. INSTALL SPEED SENSOR**

(a) Coat the new 2 O–rings with ATF, and install them to the 2 speed sensors.

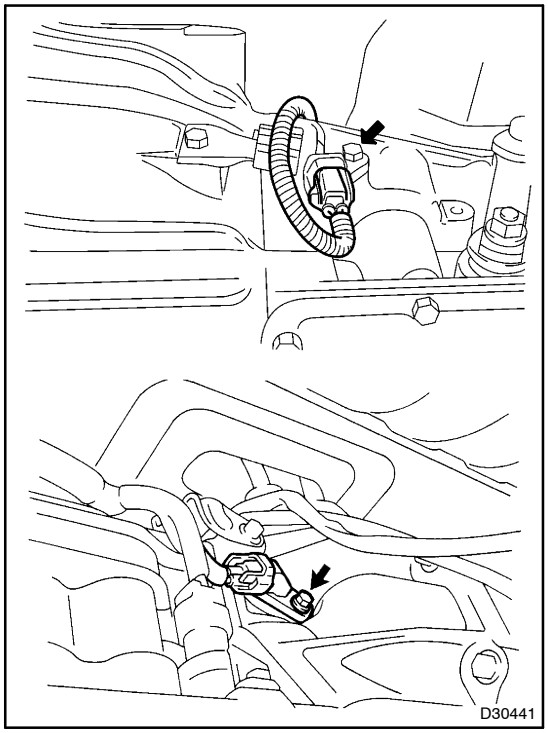


(b) Install the 2 speed sensors with the 2 bolts.
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

(c) Connect the 2 speed sensors connector.