
TEMPERATURE SENSOR (A340F)

40102–01


REPLACEMENT

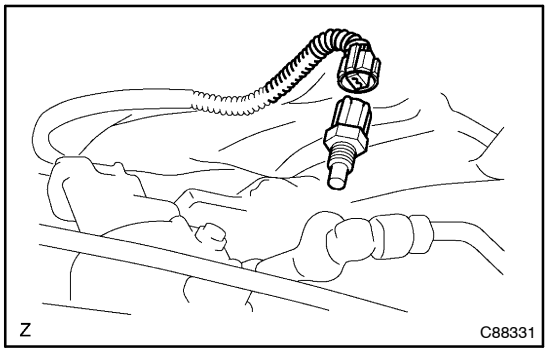

1. REMOVE TEMPERATURE SENSOR

(a) Disconnect the temperature sensor connector.

(b) Remove the temperature sensor.

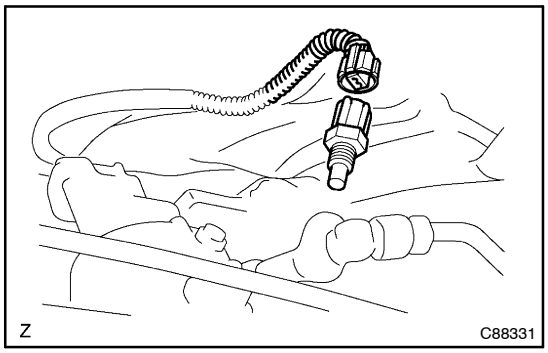

2. INSTALL TEMPERATURE SENSOR

(a) Install the temperature sensor.

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

(b) Connect the temperature sensor connector.

NOTICE:

Be careful not to twist the harness.

3. INSPECT AUTOMATIC TRANSMISSION FLUID (See pub. No. RM990E, page 40–2)