
CLUTCH ACCUMULATOR ASSY (1GR–FE)

4206A–01


REPLACEMENT

1. REMOVE ENGINE UNDER COVER ASSY REAR

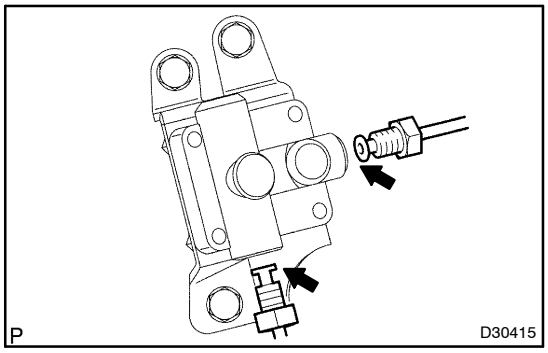

2. REMOVE CLUTCH ACCUMULATOR ASSY

(a) Using SST, disconnect the 2 clutch release cylinder to flexible hose tubes.
SST 09023–00100

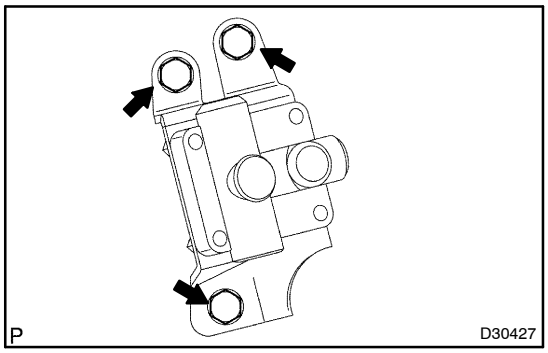

(b) Remove the 3 bolts and the accumulator assy.

3. INSTALL CLUTCH ACCUMULATOR ASSY

(a) Install the clutch accumulator assy with the 3 bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(b) Using SST, connect the 2 clutch release cylinder to flexible hose tubes.
SST 09023–00100
Torque: 15 N·m (153 kgf·cm, 11 ft·lbf)

4. BLEED CLUTCH PIPE LINE (See page 42–1)

5. CHECK CLUTCH FLUID LEAKAGE

6. CHECK BRAKE FLUID LEAKAGE

7. INSTALL ENGINE UNDER COVER ASSY REAR