
010J7–03

VEHICLE LIFT AND SUPPORT LOCATIONS

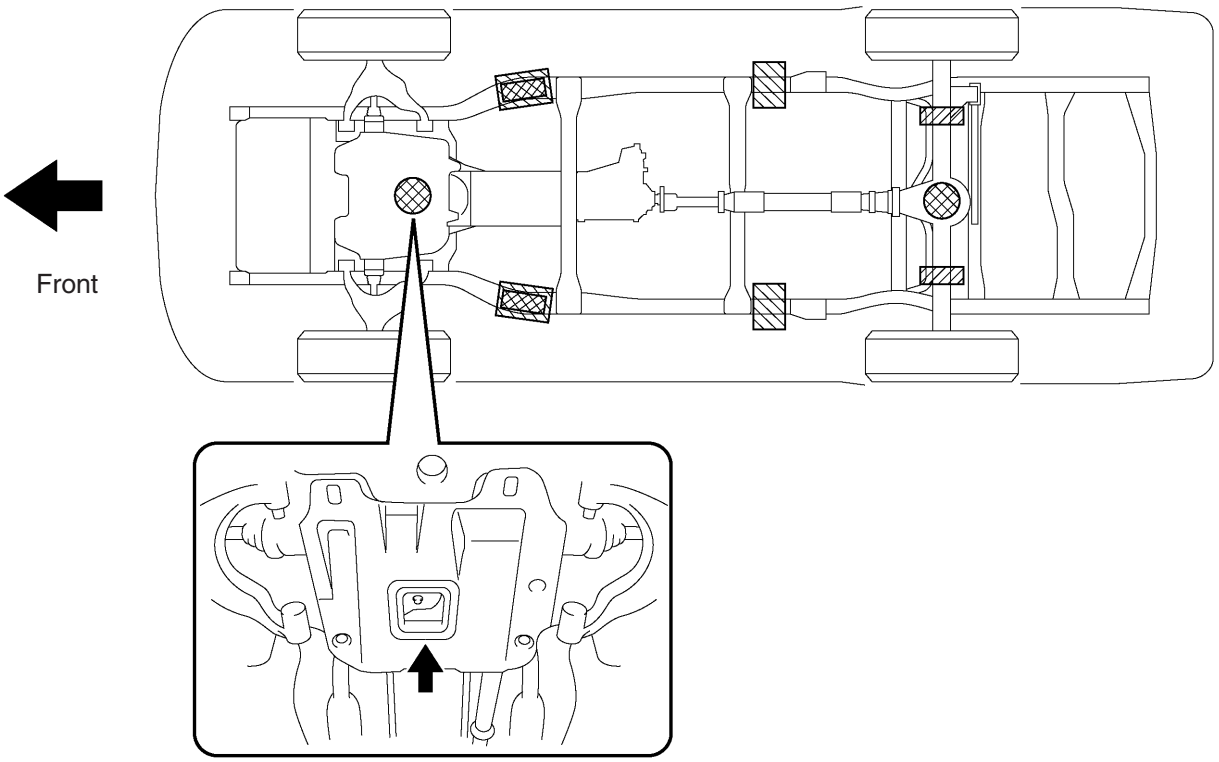

JACK POSITION -

Front - Center of crossmember

Rear - Center of rear axle housing

CAUTION: When jacking–up the front and rear, make sure the vehicle is not carrying any extra weight.

SUPPORT POSITION

Safety stand -

Swing arm type lift -

Y

D29295