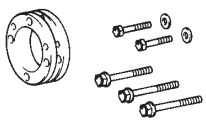



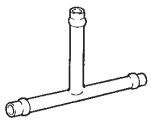


FUEL








PREPARATION

024BP–01

SST

	09023–12701	Union Nut Wrench 17 mm	INJECTOR ASSY(1KD–FTV)(From August, 2004) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004) COMMON RAIL ASSY(1KD–FTV)(From August, 2004)
	09213–58013	Crankshaft Pully Holding Tool	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	09228–10002	Oil Filter Wrench	COMMON RAIL ASSY(1KD–FTV)(From August, 2004)
	09268–41048	Injection Measuring Tool Set	FUEL SYSTEM(2TR–FE)
	(09268–41091)	NO.7 Union	FUEL SYSTEM(2TR–FE)
	(09268–41110)	Adaptor	FUEL SYSTEM(2TR–FE)
	(09268–41120)	3 Way	FUEL SYSTEM(2TR–FE)
	(09268–41310)	Clamp	FUEL SYSTEM(2TR–FE)
	(09268–41500)	Fuel Tube Conecter	FUEL SYSTEM(2TR–FE)
	(95336–08070)	Hose	FUEL SYSTEM(2TR–FE)
	09280–00010	Inspection Union Bolt	INJECTOR ASSY(1KD–FTV)(From August, 2004)

2

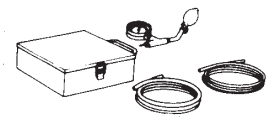	09330–00021	Companion Flange Holding Tool	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	09842–30080	Wire "H" EFI Inspection	FUEL SYSTEM(2TR–FE)
	09950–50013	Puller C Set	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	(09951–05010)	Hanger 150	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	(09952–05010)	Slide Arm	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	(09953–05020)	Center Bolt 150	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	(09954–05021)	Claw No. 2	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)(From August, 2004)
	09992–00242	Turbocharger Pressure Gauge	INJECTOR ASSY(1KD–FTV)(From August, 2004)

Recommended Tools

	09082–00040	TOYOTA Electrical Tester	FUEL SYSTEM(1KD–FTV)(From August, 2004) FUEL SYSTEM(2TR–FE)

SSM

	08826–00080	Seal Packing Black or equivalent (FIPG)	INJECTOR ASSY(1KD–FTV)(From August, 2004)

Equipment

Belt tension gauge	
Clip	
Dial indicator	
Hexagon wrench (10 mm)	
Measuring flask	
Ohmmeter	
Press	
Radiator cap tester	
Service wire harness	
Steel square	
Stopwatch	
Termometer	
Torque wrench	
Vernier calipers	