
05NC0–01

SYSTEM DIAGRAM

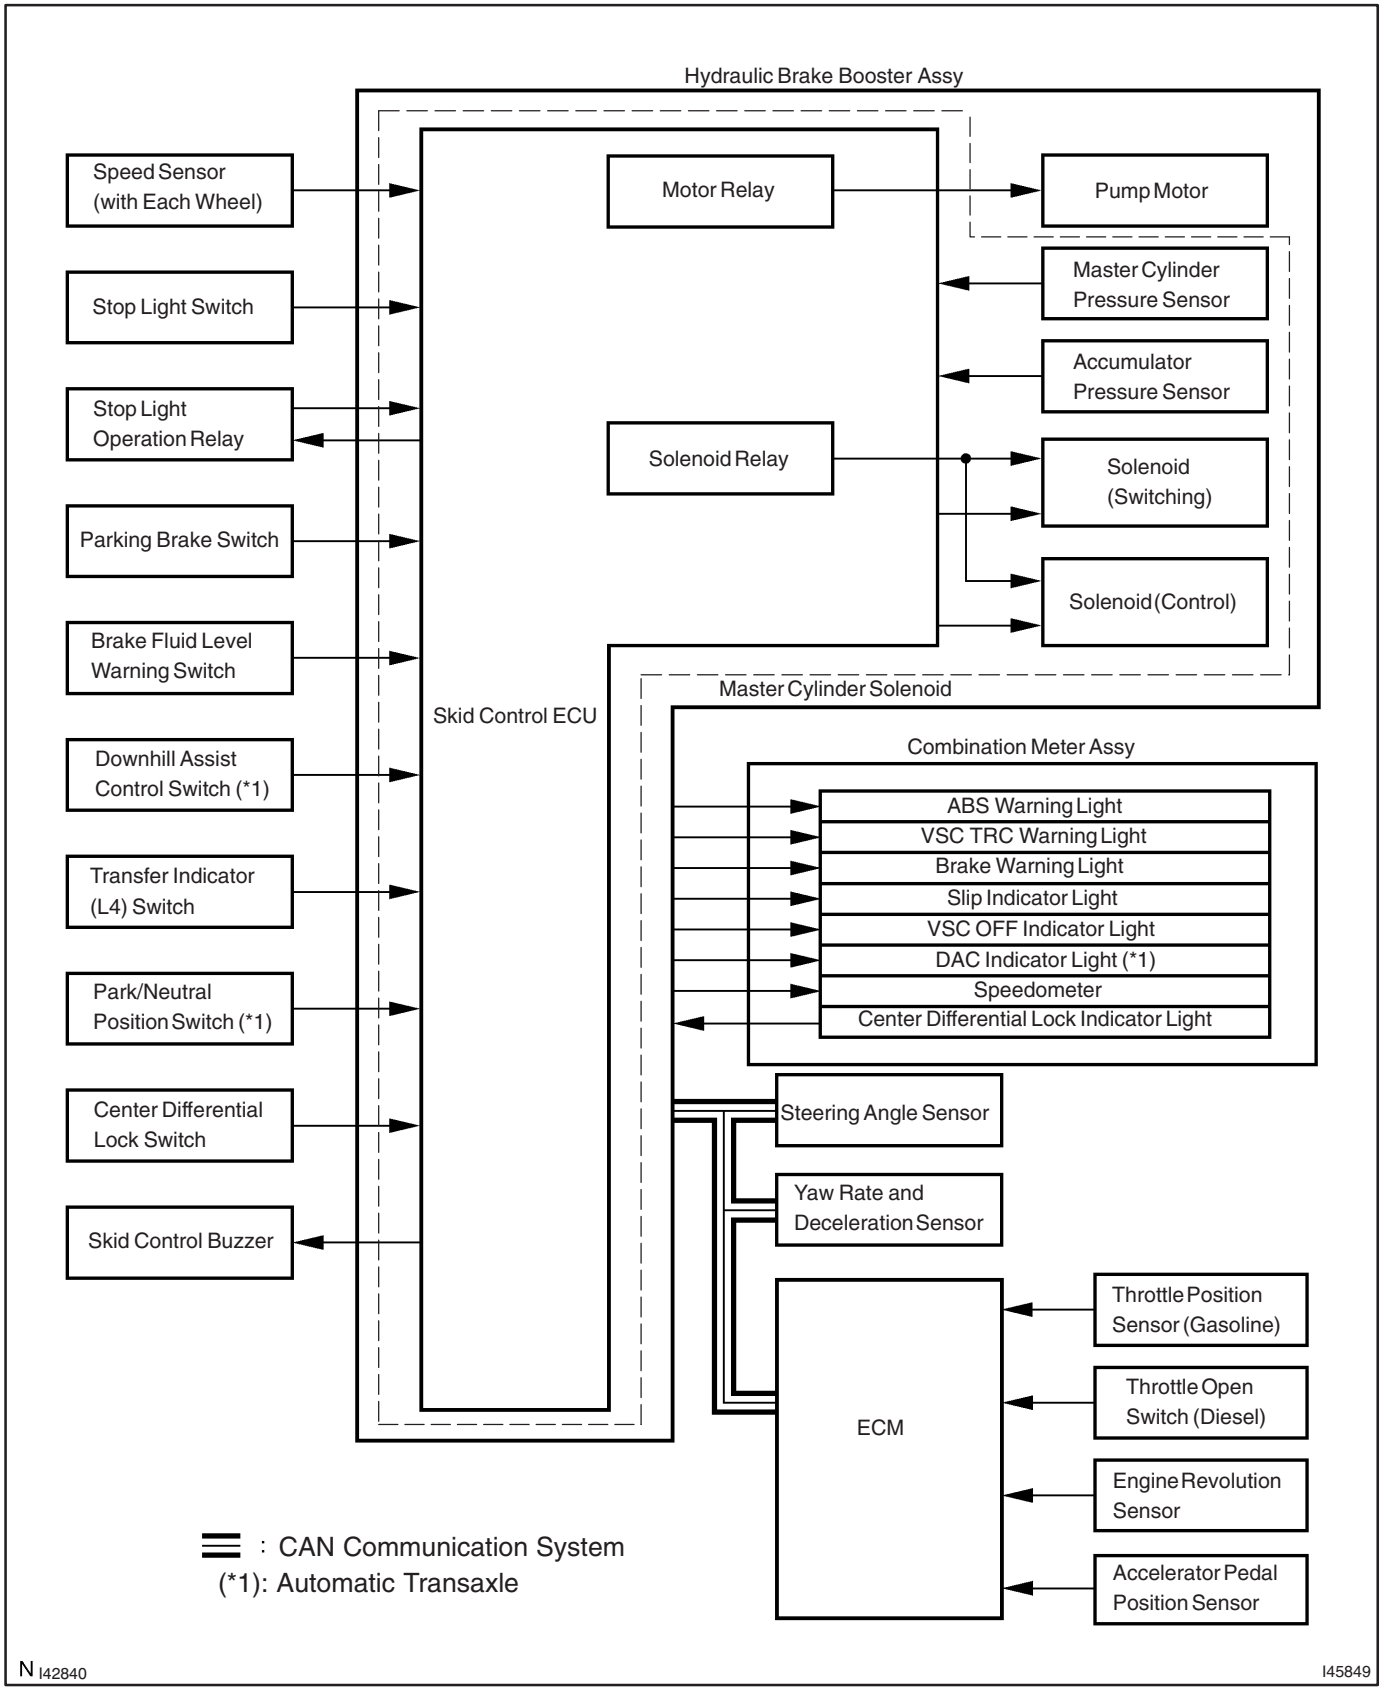

Transmitting ECU (Transmitter)	Receiving ECU	Signals	CommunicationMethod
Skid control ECU	ECM	Steering angle signal	CAN communication system
Skid control ECU	ECM	Yaw rate and deceleration signal	CAN communication system
Skid control ECU	ECM	Engine torque request signal	CAN communication system
ECM	Skid control ECU	Throttle position signal	CAN communication system
ECM	Skid control ECU	Engine revolution signal	CAN communication system
ECM	Skid control ECU	Accelerator pedal position signal	CAN communication system