
DTC CHECK/CLEAR

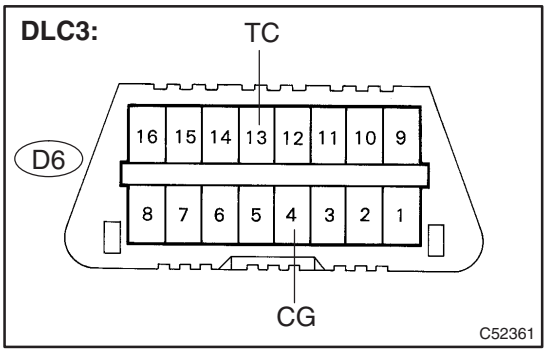

1. DTC CHECK/CLEAR

USING SST CHECK WIRE:

(a) DTC check

(1) Using SST, connect terminals TC and CG of the DLC3.

SST 09843–18040

(2) Turn the ignition switch to the ON position.

(3) Read the DTCs from the ABS and VSC TRC warning lights on the combination meter.


HINT:

- If no code appears, inspect the TC and CG terminal circuit, and the ABS and VSC TRC warning light circuits.


Trouble Area	See Page
TC and CG terminal circuit	05–908
ABS warning light circuit	05–869 05–874
VSC TRC warning light circuit	05–876 05–879

- As examples, refer to the chart below for the blinking patterns of the normal system code and trouble codes 11 and 21.

Normal System Code:

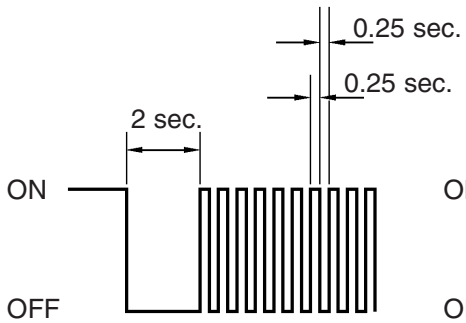

Trouble Code (Example Codes 11 and 21):

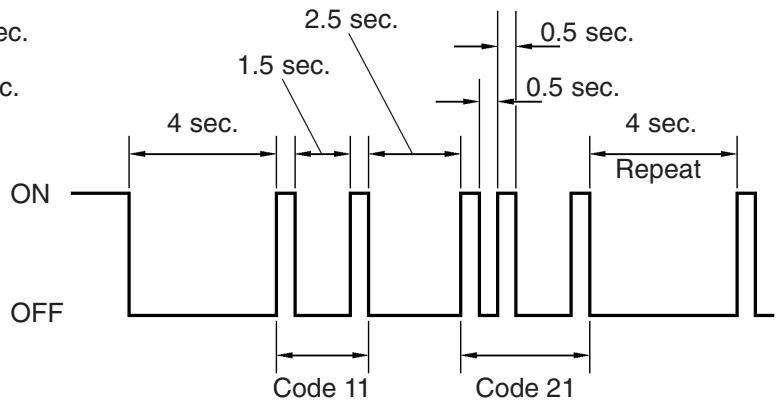


N

I42843


(4) Codes are explained in the code table on page 05–776.

(5) After completing the check, disconnect terminals TC and CG of the DLC3, and turn off the display.

If 2 or more DTCs are detected at the same time, the DTCs will be displayed in ascending order.

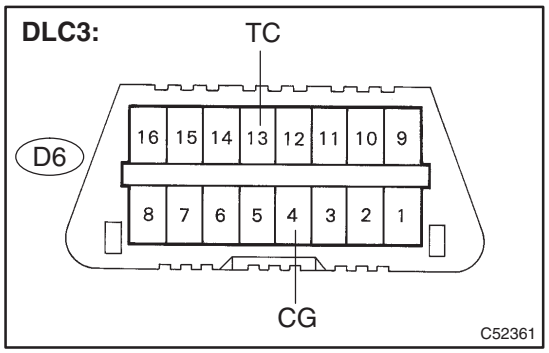


(b) DTC clear
(1) Using SST, connect terminals TC and CG of the DLC3.
SST 09843–18040
(2) Turn the ignition switch to the ON position.

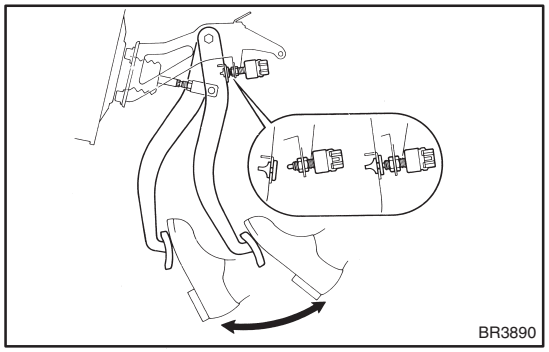

(3) Clear the DTCs stored in the ECU by depressing the brake pedal 8 times or more within 5 seconds.
(4) Check that the warning light indicates a normal system code.
(5) Remove the SST from the terminals of the DLC3.

HINT:
Clearing the DTCs cannot be performed by removing the battery cable or the ECU–IG fuse.

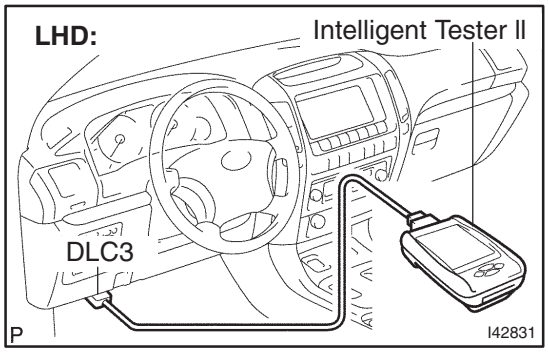


2. DTC CHECK/CLEAR

USING INTELLIGENT TESTER II:

(a) DTC check
(1) Connect the intelligent tester II to the DLC3.
(2) Turn the ignition switch to the ON position.
(3) Read the DTCs following the prompts on the tester screen.

(b) DTC clear
(1) Connect the intelligent tester II to the DLC3.
(2) Turn the ignition switch to the ON position.
(3) Operate the intelligent tester II to clear the codes.

HINT:
Refer to the intelligent tester II operator's manual for further details.

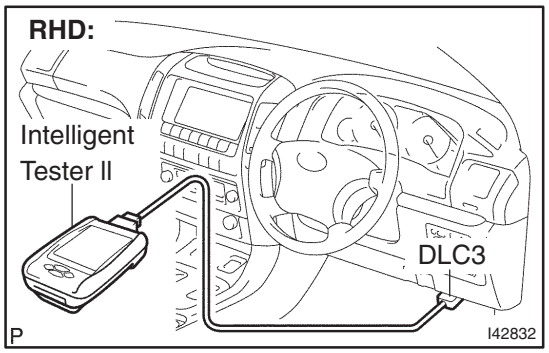

3. END OF DTC CHECK/CLEAR

(a) Turn the ignition switch to the ON position.
(b) Check that the ABS and VSC TRC warning lights go off within approximately 3 seconds.