
DTC	C1203/53	ENGINE CONTROL SYSTEM COMMUNICATION CIRCUIT MALFUNCTION

CIRCUIT DESCRIPTION

The circuit is used to send TRC & VSC control information from the skid control ECU to the ECM, and engine control information from the ECM to the skid control ECU via the CAN communication system.

DTC No.	DTC Detection Condition	Trouble Area
C1203/53	Engine drive source and destination variation that are sent from the ECM do not match the one of the ECU.	ECM

WIRING DIAGRAM

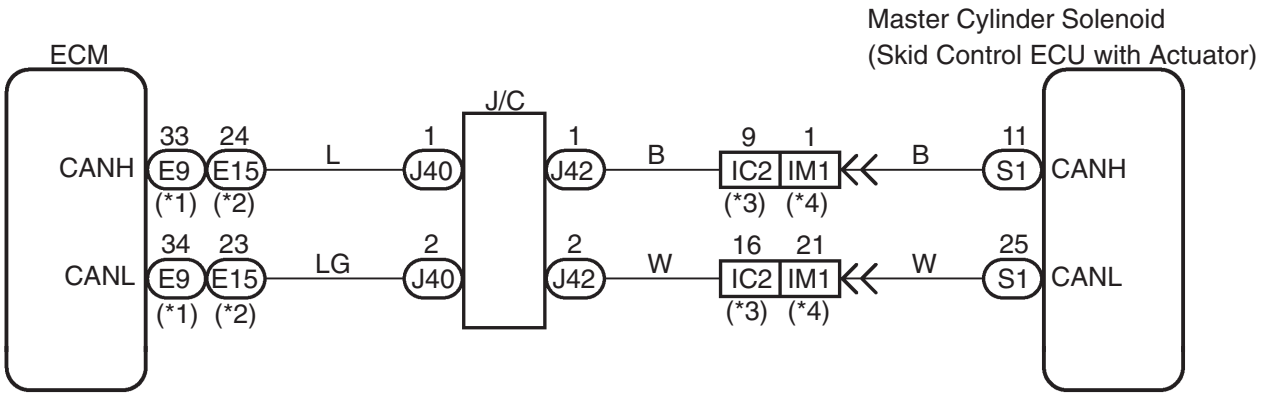

INSPECTION PROCEDURE

1	CHECK DTC (FOR ENGINE CONTROL SYSTEM)

(a) Check if the normal system code is recorded for the SFI or ECD system (see page 05–209, 05–466).

Result:

Normal system code	A
Trouble code	B

B → **REPAIR ENGINE CONTROL SYSTEM ACCORDING TO OUTPUT CODE (SEE PAGE 05–220, 05–477)**

A

REPLACE ECM (SEE PUB. NO. RM1017E, PAGE 10–11) (SEE PUB. NO. RM990E, PAGE 10–34)