

05NFE–01

# LOCATION

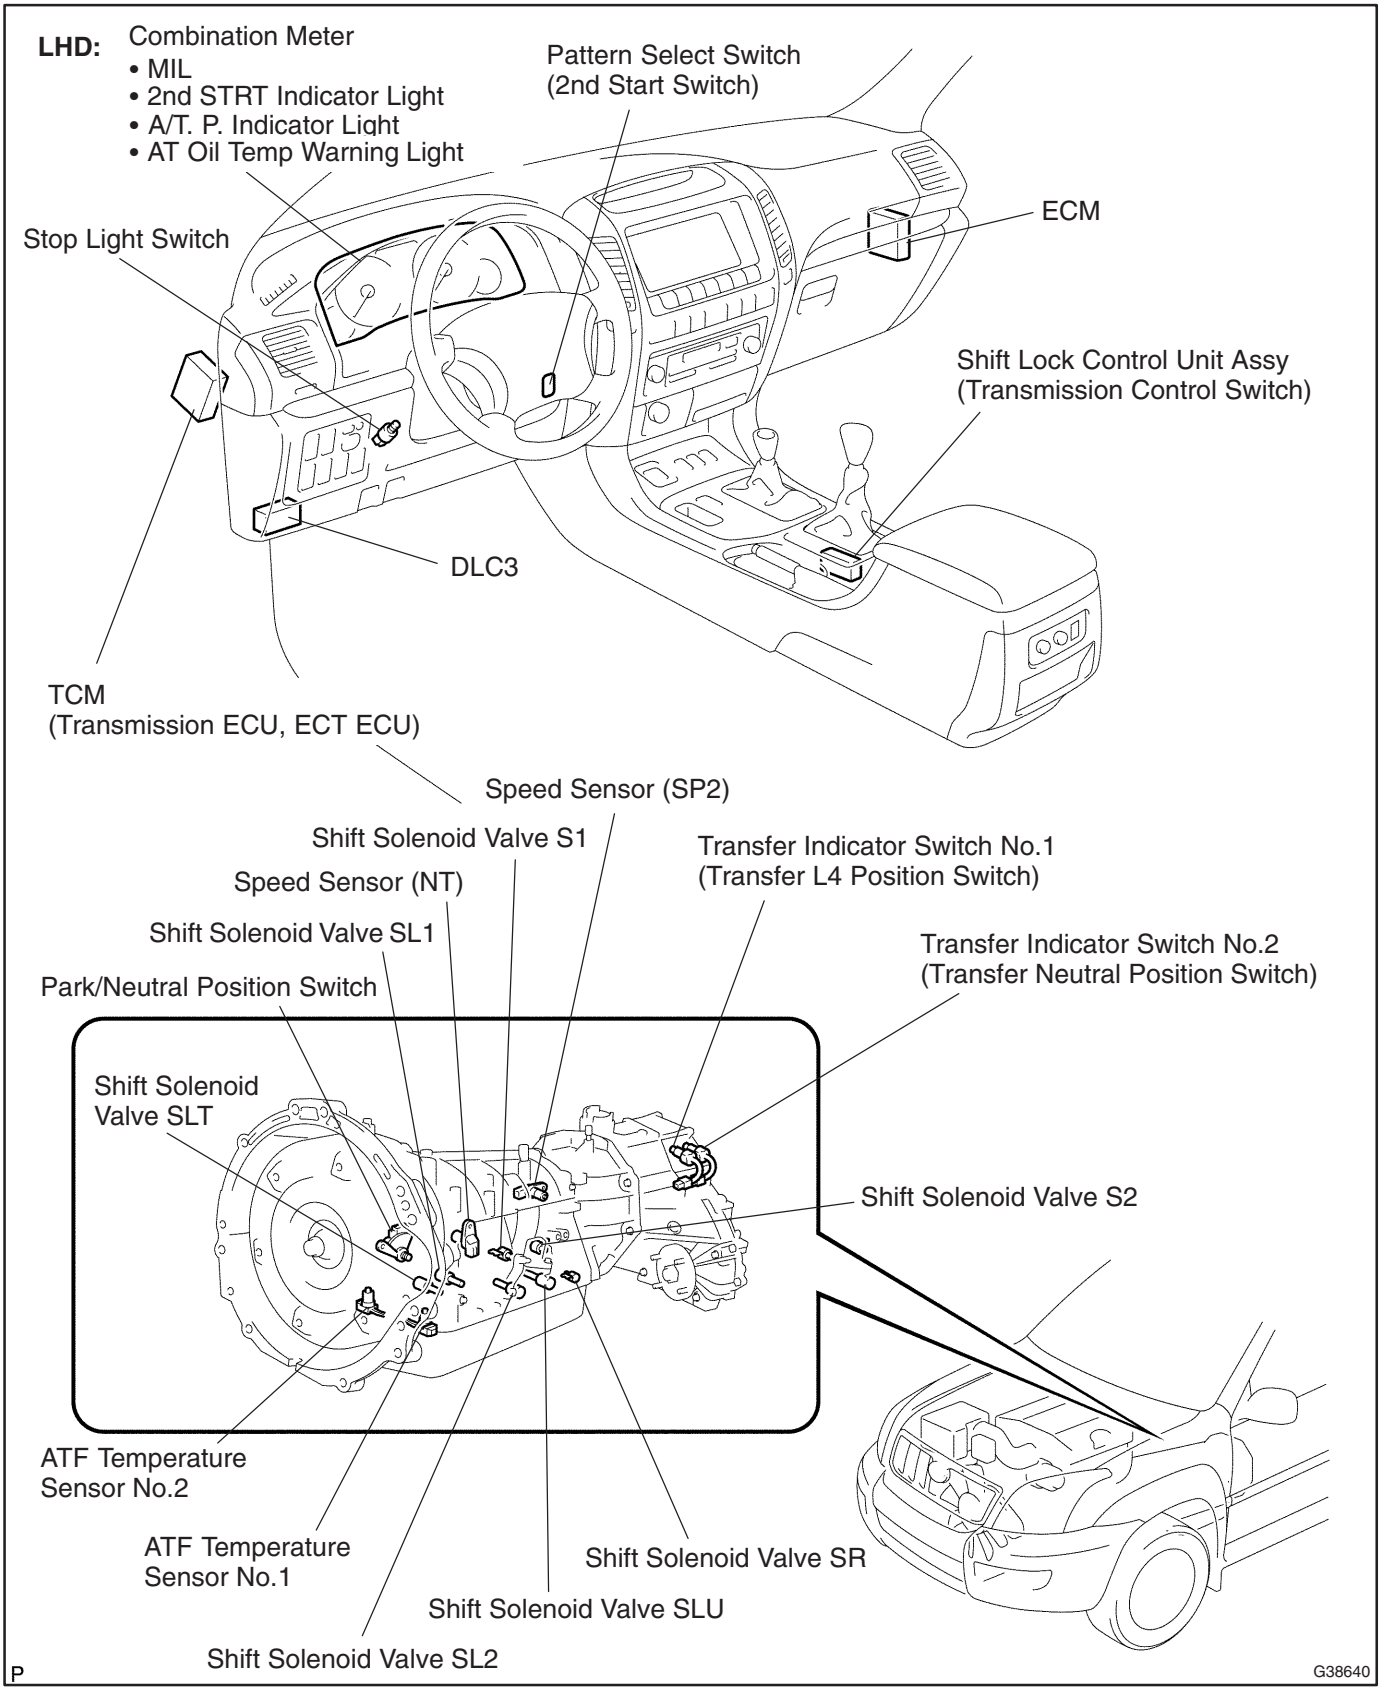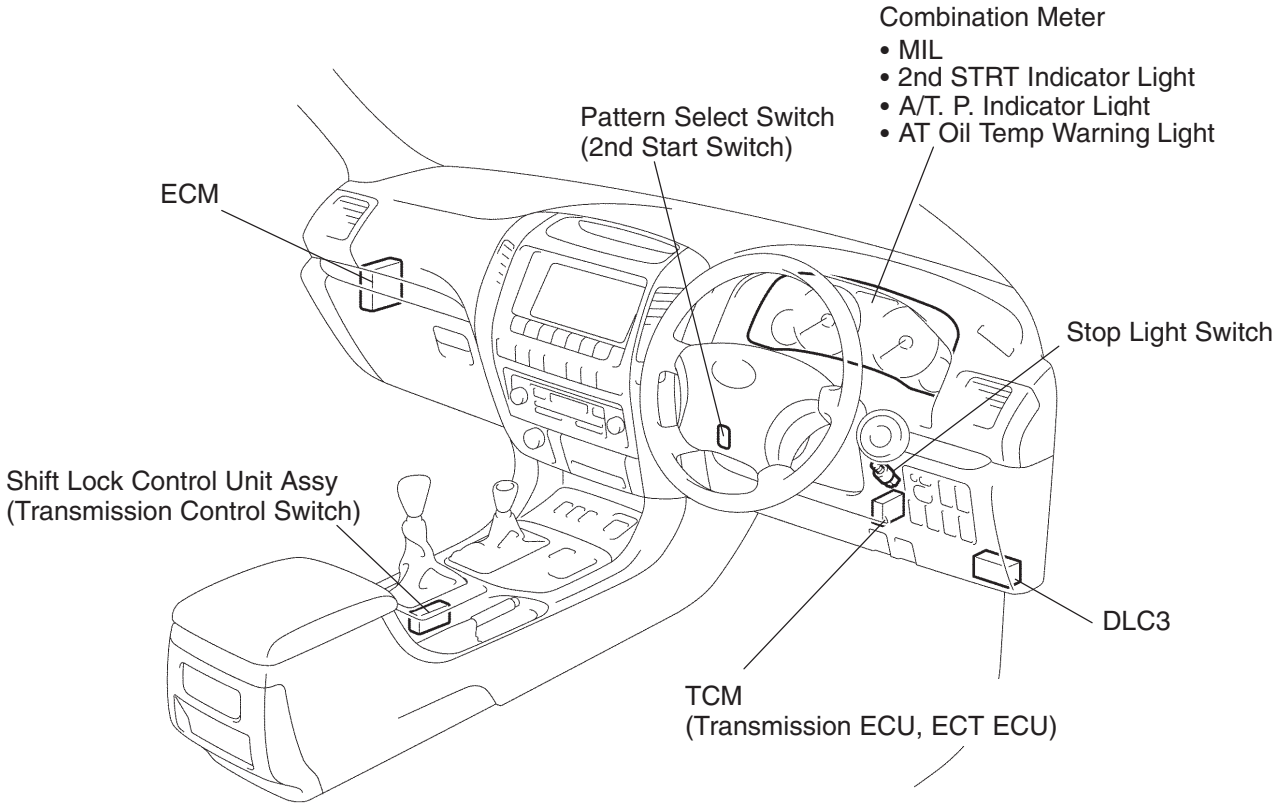

**RHD:**


Combination Meter
• MIL
• 2nd STRT Indicator Light
• A/T. P. Indicator Light
• AT Oil Temp Warning Light
Pattern Select Switch
(2nd Start Switch)
ECM
Stop Light Switch
Shift Lock Control Unit Assy
(Transmission Control Switch)
DLC3
TCM
(Transmission ECU, ECT ECU)

P G38641