
05HDJ–02

NAVIGATION CHECK MODE (RDS–TMC INFORMATION)


HINT:

- This mode checks the RDS–TMC signal status input to the navigation ECU.
- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.


1. Enter diagnostic mode (see page 05–1315).

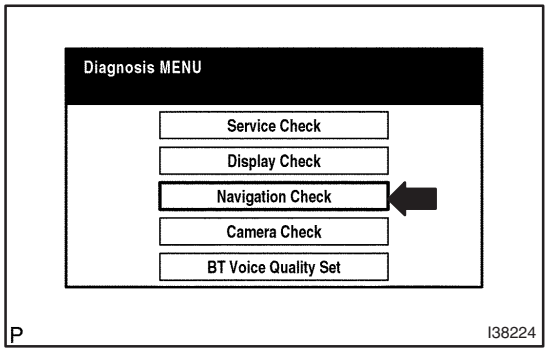

2. Select "Navigation Check" from the "Diagnosis MENU" screen.

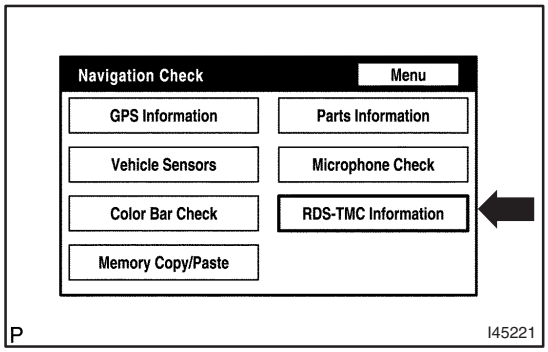

3. Select "RDS–TMC Information" from the "Navigation Check" screen.

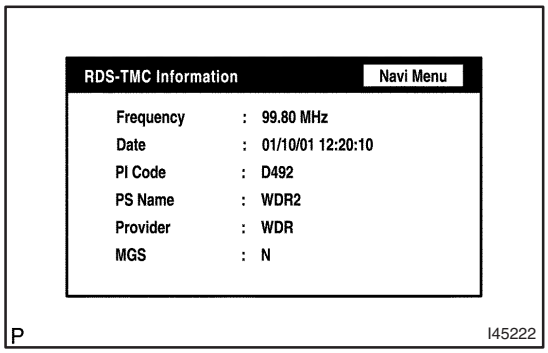

4. When RDS–TMC information is displayed, Check the RDS–TMC conditions.