
# ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

## INSPECTION PROCEDURE

| 1 | DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE) |
|---|---|

(a) Enter the ”Display Check” mode (Vehicle Signal Check Mode) (see page 05–1292).

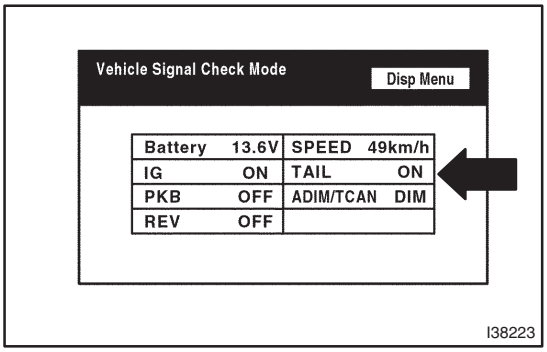


(b) Turn the light control switch to the TAIL, HEAD or OFF position.

**Standard:**

| Light Control Switch | Display |
|---|---|
| TAIL or HEAD | ON |
| OFF | OFF |

HINT:

The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

**OK** → **REPLACE MULTI–DISPLAY (SEE PUB. NO. RM990E, PAGE 67–8)**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1309)**