
DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK IMAGE QUALITY SETTING

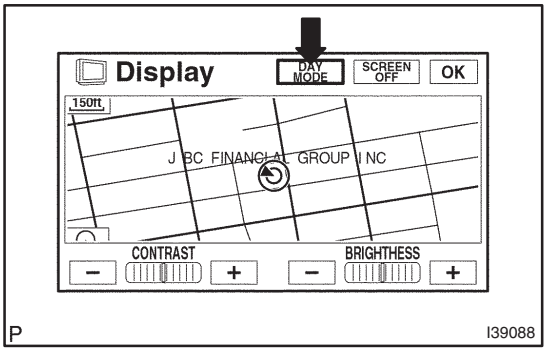


(a) Enter the option screen by pressing the ”OPTION” switch.
(b) Enter the display adjustment screen by pressing the ”DISPLAY” switch.
(c) Turn the light control switch to the TAIL position.
(d) Check if ”DAY MODE” on the display adjustment is ON.
OK: ”DAY MODE” is ON.

OK → **TURN FORCED ”DAY MODE” SETTING OFF**

NG

2 DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

(a) Enter the ”Display Check” mode (Vehicle Signal Check Mode) (see page 05–1292).

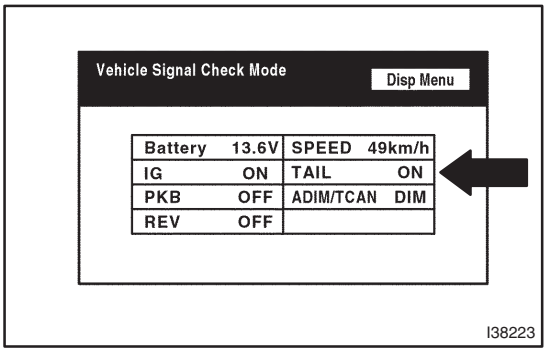

(b) Turn the light control switch to the TAIL, HEAD or OFF position.
Standard:

Light Control switch	Display
TAIL or HEAD	ON
OFF	OFF

HINT:
The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK → **REPLACE MULTI–DISPLAY (SEE PUB. NO. RM990E, PAGE 67–8)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1309)