

SCREEN FLICKER OR COLOR DISTORTION

INSPECTION PROCEDURE


1 CHECK DISPLAY SETTING

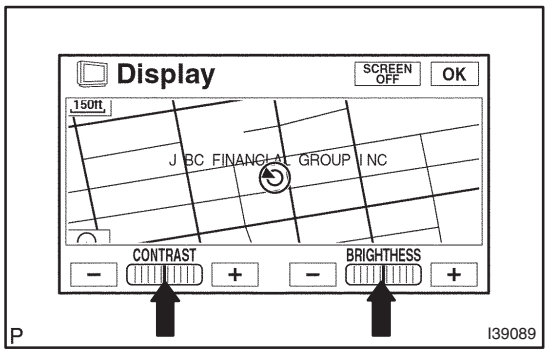

(a) Enter the option screen by pressing the ”OPTION” switch.
(b) Enter the display adjustment screen by pressing the ”DISPLAY” switch.
(c) Reset display settings (contrast, brightness) and check if the screen appears normal.

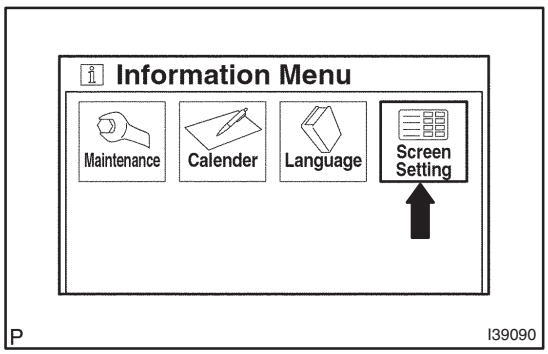

(d) Press the ”Information” switch and then the ”Screen Setting” switch.

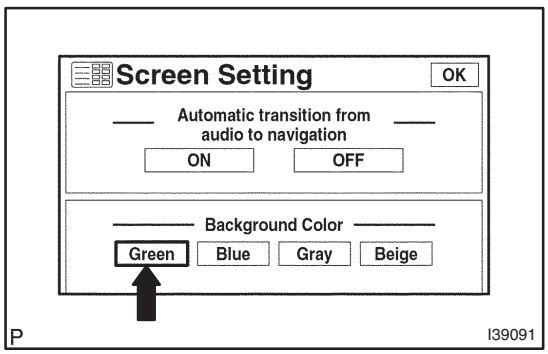

(e) Set the ”Background Color” to ”Green” (initial setting) and check if it is normal.
OK: Returns to normal.

OK > **END**

NG

2 CHECK CABIN


(a) Check if the cabin temperature is –20°C (–4.0°F) or less.
OK: Cabin is warmer than –20°C (–4.0°F).

NG > **HEAT CABIN AND RECHECK TEMPERATURE**

OK

3 DISPLAY CHECK MODE(COLOR BAR CHECK MODE)

(a) Enter the ”Display Check” mode (Color Bar Check Mode) (see page 05–1289).

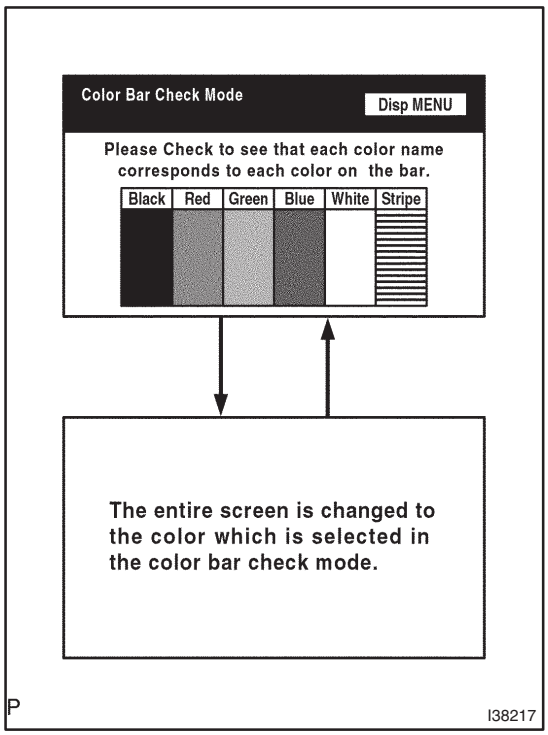

(b) Check that color bars match the displayed names.


OK: Color bars match the displayed names.

NG → **REPLACE MULTI–DISPLAY (SEE PUB. NO. RM990E, PAGE 67–8)**

OK

4 NAVIGATION CHECK MODE(NAVI COLOR BAR CHECK)

(a) Enter the ”Navigation Check” mode (NAVI Color Bar Check) (see page 05–1295).

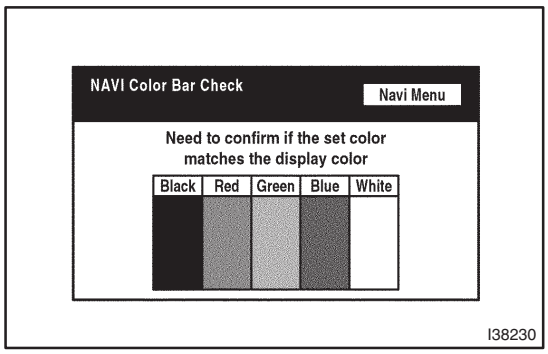

(b) Check that color bars match the displayed names.

OK: Color bars match the displayed names.

OK → **REPLACE MULTI–DISPLAY (SEE PUB. NO. RM990E, PAGE 67–8)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1309)