
MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1	CHECK MAP DISC

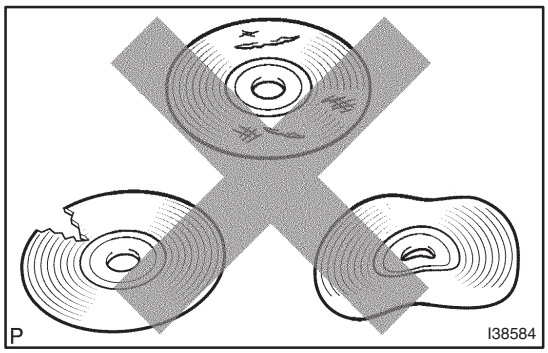

(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE MAP DISC**

OK →

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–1309)