
POWER SOURCE CIRCUIT (DISC PLAYER CHANGER)

CIRCUIT DESCRIPTION


This is the power source circuit to operate the disc player changer.

WIRING DIAGRAM

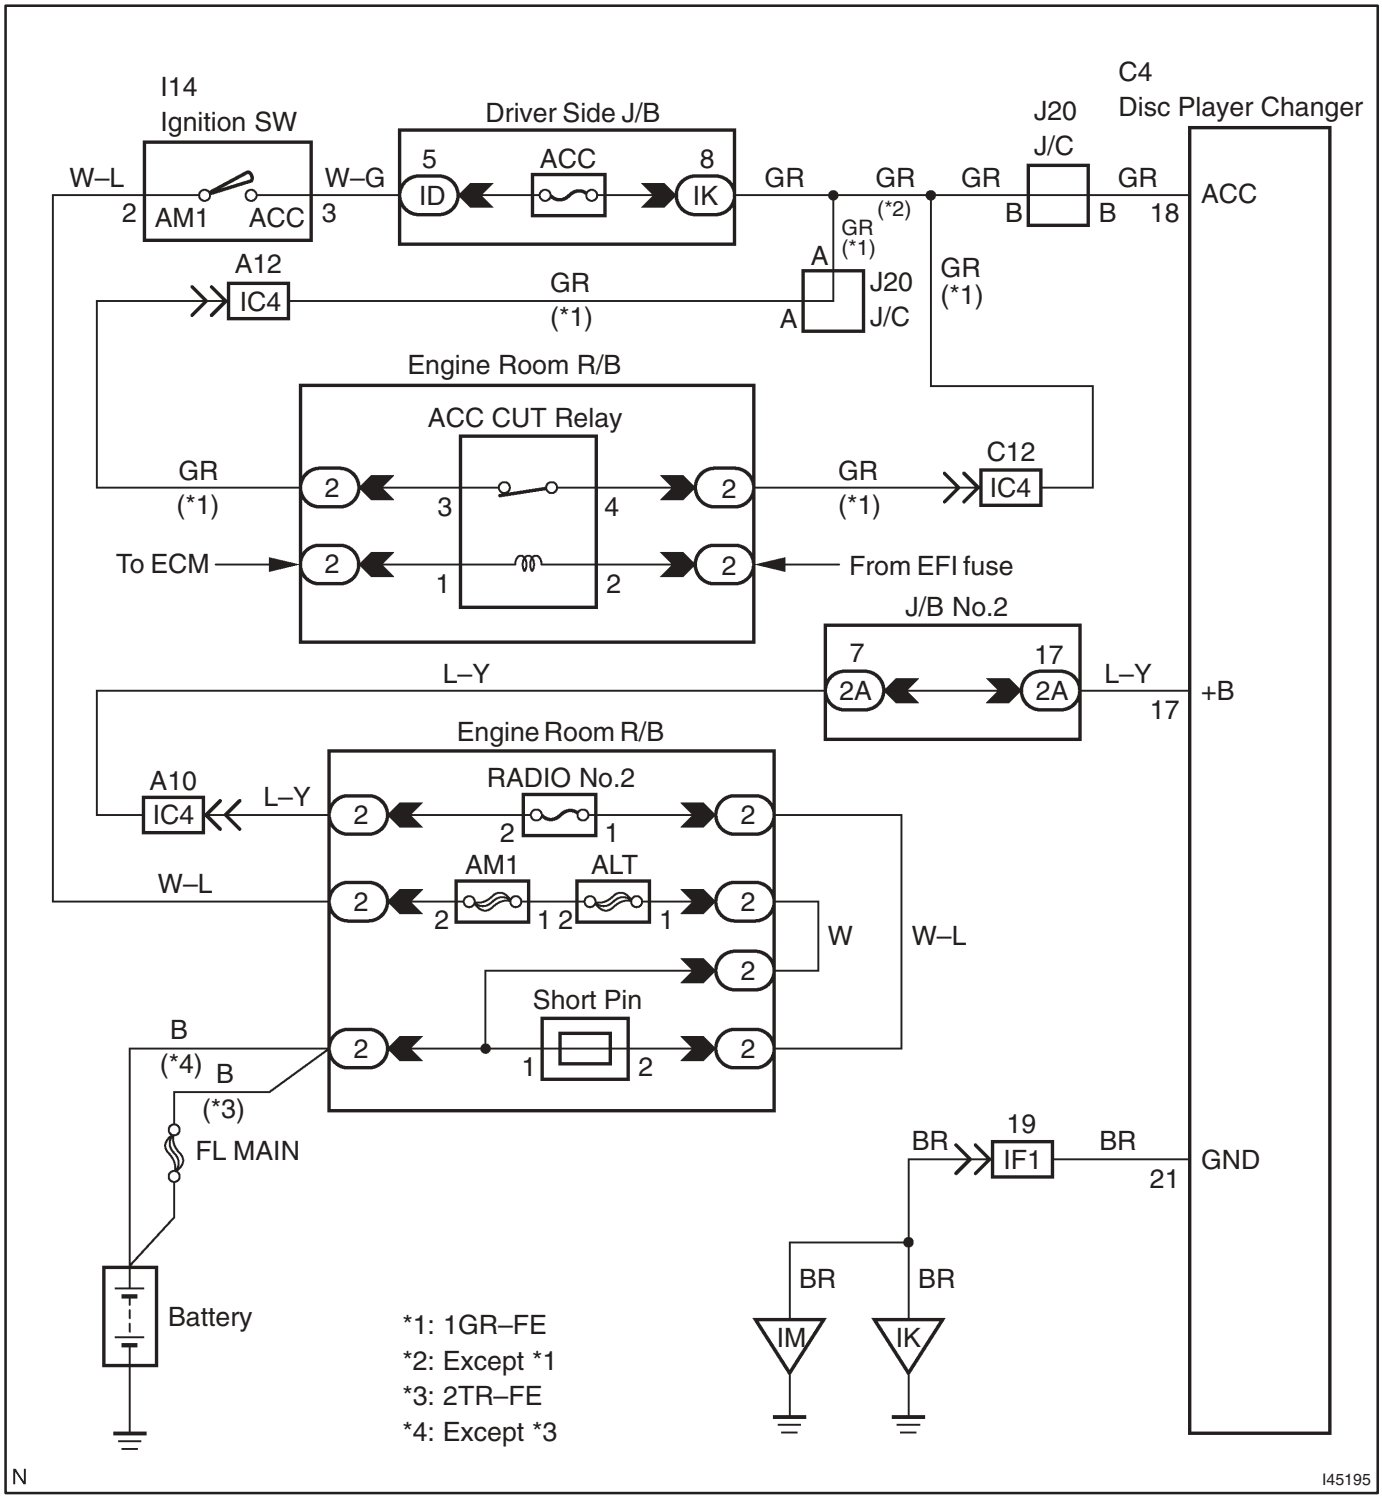

INSPECTION PROCEDURE

1	INSPECT DISC PLAYER CHANGER

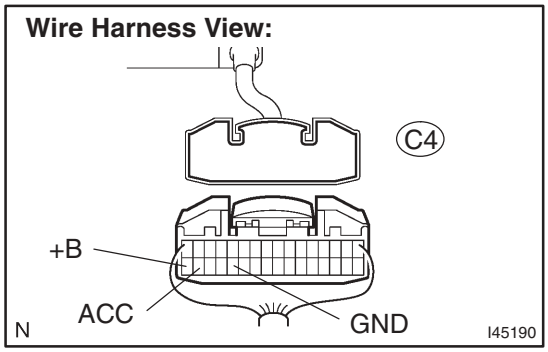

(a) Disconnect the disc player changer connector C4.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND – Body ground	Always	Below 1 Ω

(c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B – GND	Always	10 to 14 V
ACC – GND	Ignition SW ACC	10 to 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–1322)