
POWER SOURCE CIRCUIT (STEREO COMPONENT AMPLIFIER ASSY)

CIRCUIT DESCRIPTION


This is the power source circuit to operate the stereo component amplifier assy.

WIRING DIAGRAM

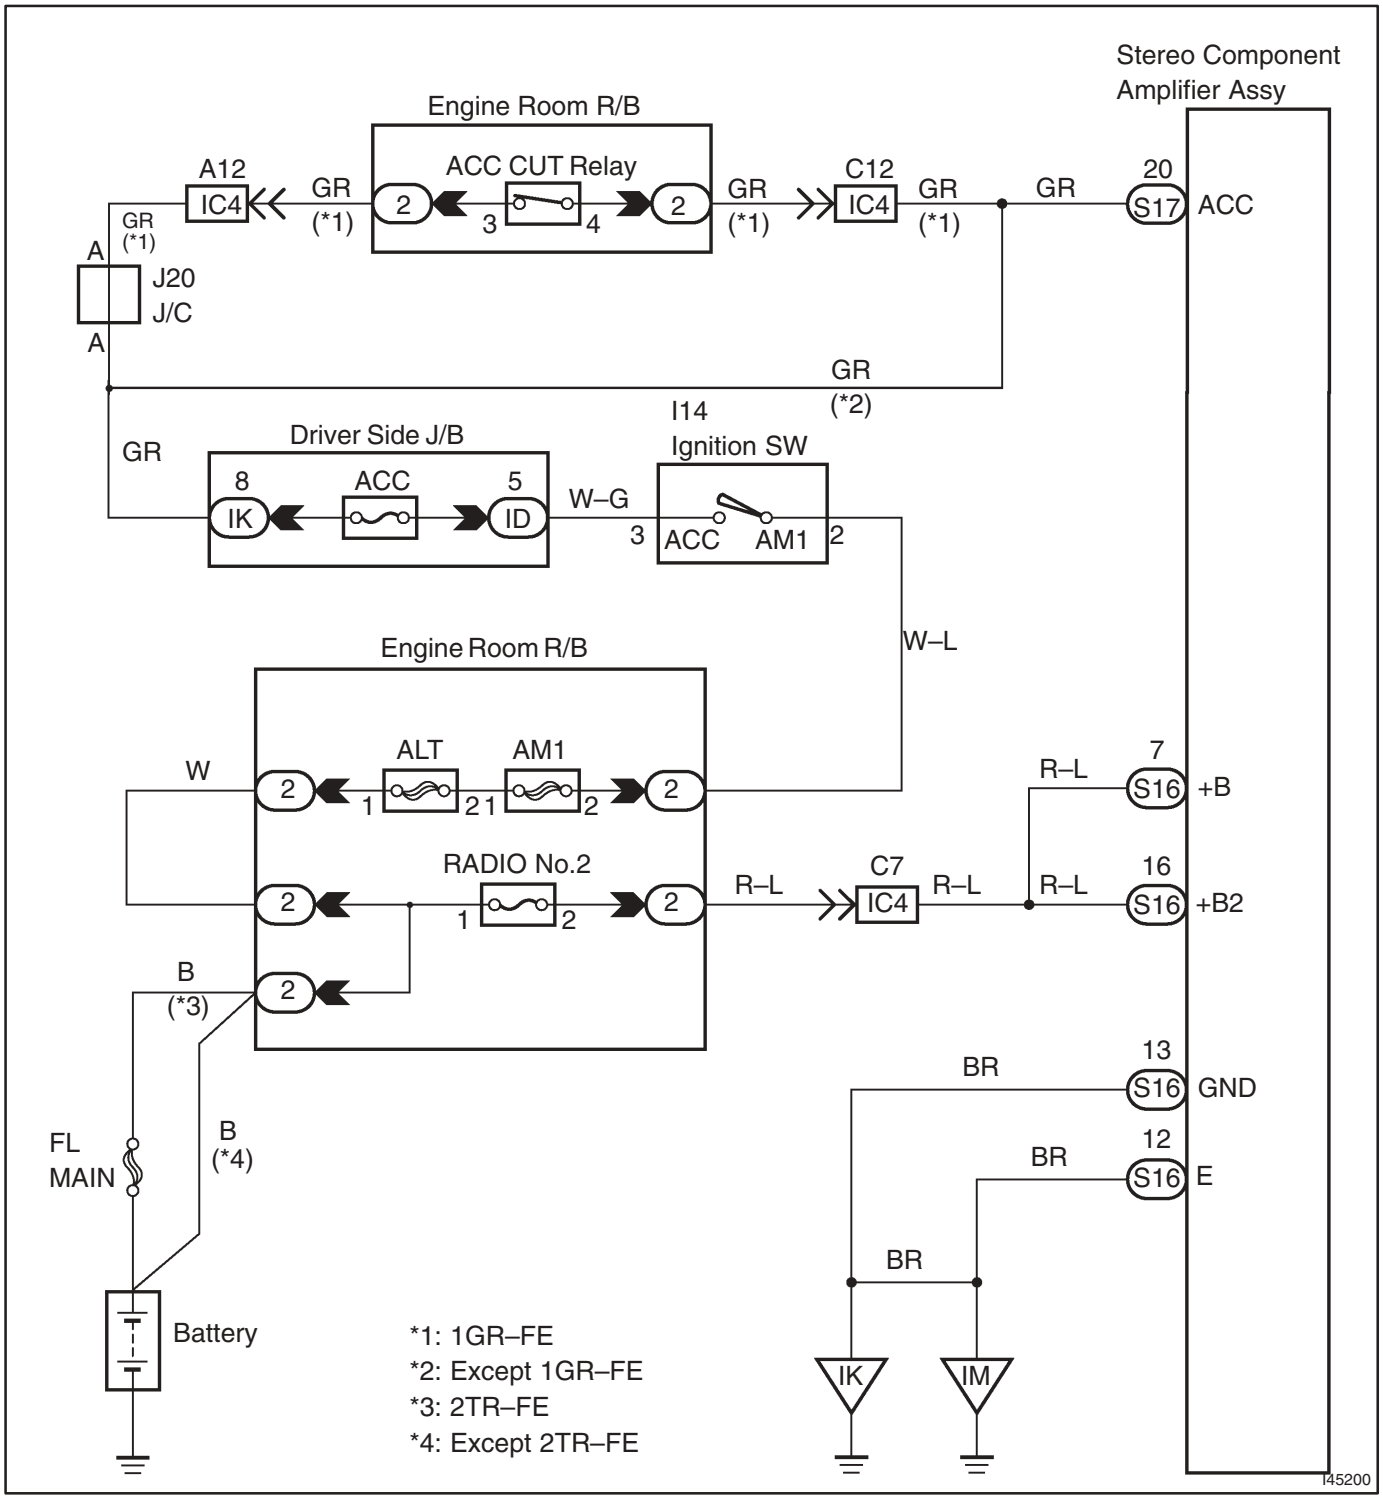

INSPECTION PROCEDURE

1	INSPECT STEREO COMPONENT AMPLIFIER ASSY

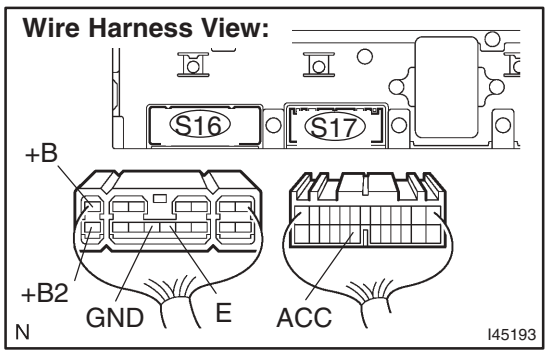

(a) Disconnect the stereo component amplifier assy connectors S16 and S17.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND – Body ground	Always	Below 1 Ω
E – Body ground	Always	Below 1 Ω

(c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B – GND	Always	10 to 14 V
+B2 – GND	Always	10 to 14 V
ACC – GND	Ignition SW ACC	10 to 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–1322)