
DIAGNOSIS SYSTEM

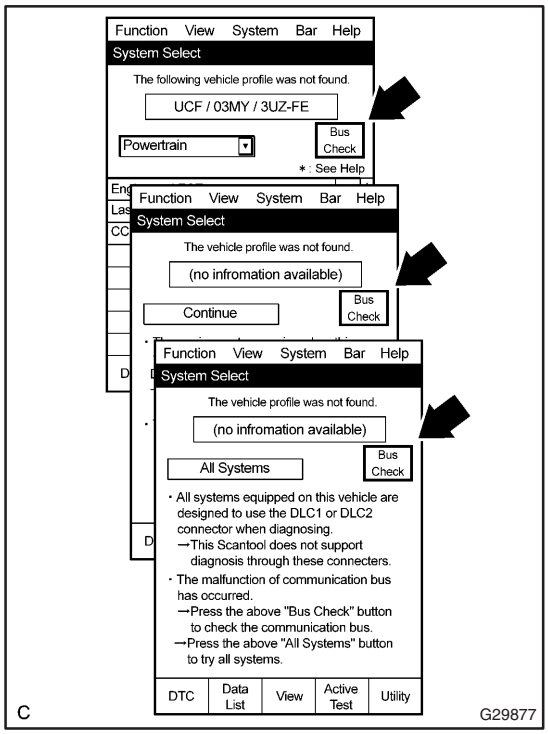


1. BUS CHECK (COMMUNICATION MALFUNCTION DTC)


HINT:

Only CAN communication system DTCs for each ECU can be displayed on the intelligent tester II.


(a) Select "Bus Check" from the "System Select" screen on the intelligent tester II.

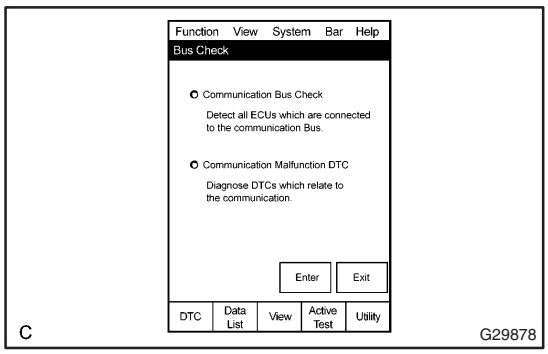


(b) Select "Communication Malfunction DTC" from the "Bus Check" screen, and then select "Enter".

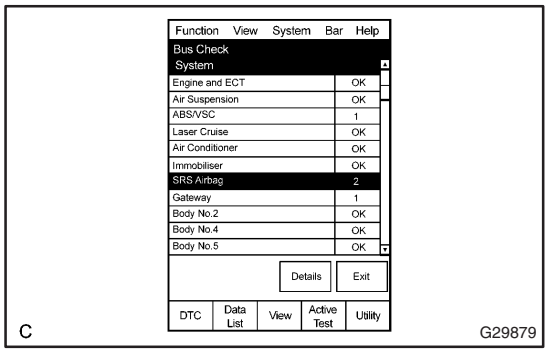

(c) Select a system to be checked and select "Details".

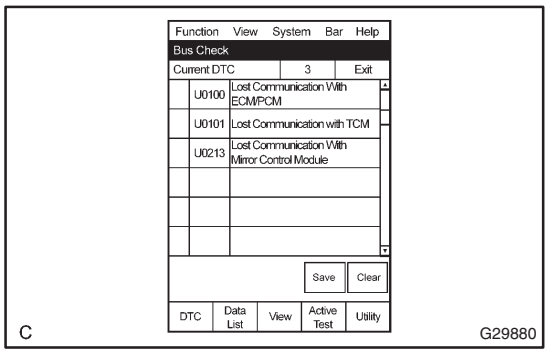

(d) CAN communication system DTC(s) is/are displayed.

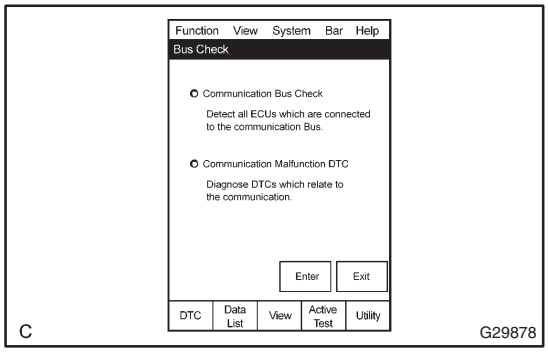


2. BUS CHECK (COMMUNICATION BUS CHECK)

HINT:

The ECUs and sensors that are properly connected to the CAN communication system can be displayed using the intelligent tester II.


(a) Select "Communication Bus Check" from the "Bus Check" screen.

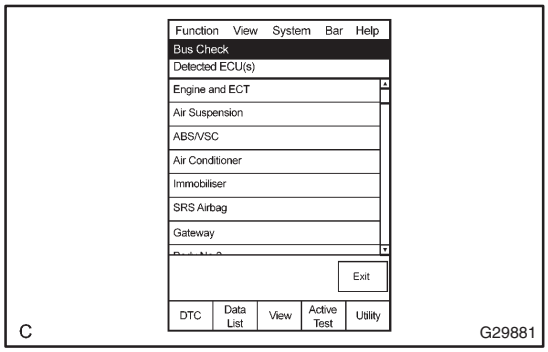

(b) The screen displays the ECUs and sensors that are properly connected to the CAN communication system.

HINT:

There is a communication stop in the system of any properly connected ECUs or sensors that are not displayed (see page 05–1436).

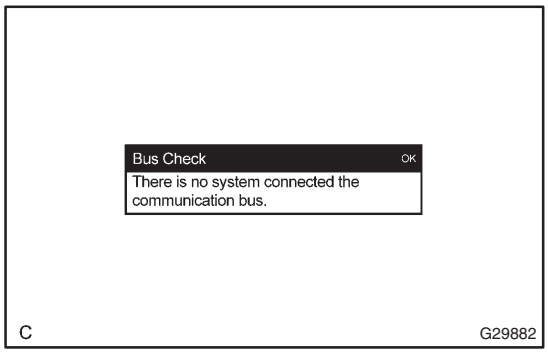

(c) "There is no system connected to the communication bus" is displayed if there are no ECUs or sensors connected to the CAN bus.