
FUEL PRESSURE PULSATION DAMPER ASSY (2TR–FE)

110OY–04

REPLACEMENT

1. DISCHARGE FUEL SYSTEM PRESSURE (SEE PAGE 11–1)
2. REMOVE INTAKE AIR CONNECTOR (SEE PAGE 10–7)
3. DISCONNECT FUEL HOSE

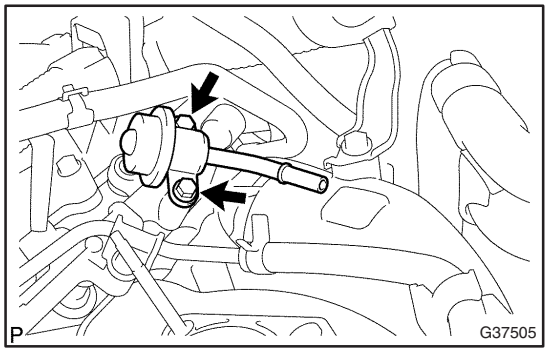

4. REMOVE FUEL PRESSURE PULSATION DAMPER ASSY

(a) Remove the 2 bolts and fuel pressure pulsation damper assy.

5. INSTALL FUEL PRESSURE PULSATION DAMPER ASSY

(a) Apply a light coat of gasoline to a new O–ring and install it to the fuel pressure pulsation damper assy.

NOTICE:

Take care when installing the O–ring that it does not break or get caught between parts.

(b) Install the 2 bolts and fuel pressure pulsation damper assy.

Torque: 8.5 N·m (87 kgf·cm, 75 in.·lbf)

6. CONNECT FUEL HOSE
7. INSTALL INTAKE AIR CONNECTOR (SEE PAGE 10–7)
8. CHECK FOR FUEL LEAKS (SEE PAGE 11–6)